




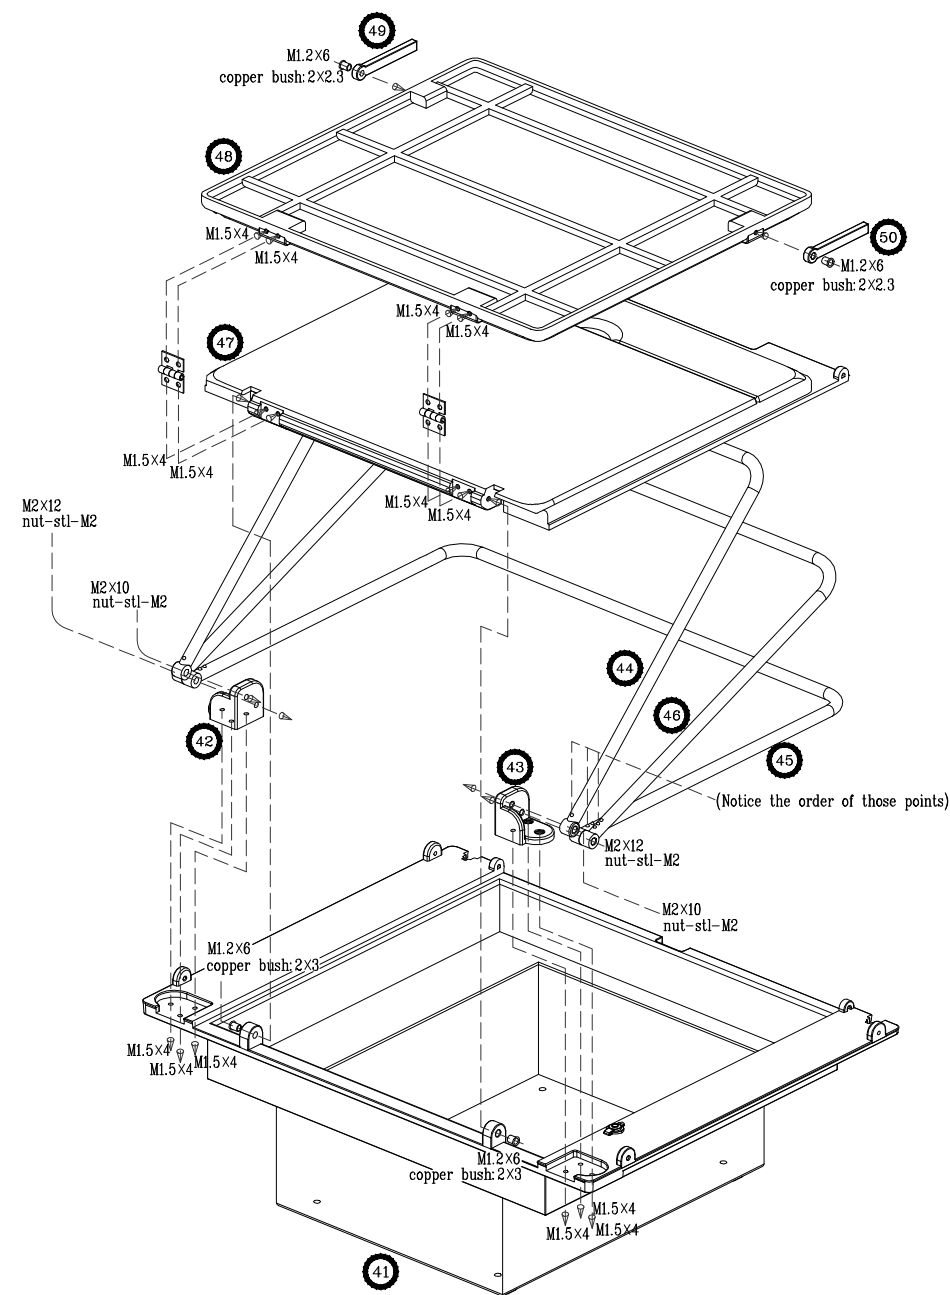


Tips: you should first fix part 47, 48 to part 41, than fix part 42, 43 to part 41.


STEP 3

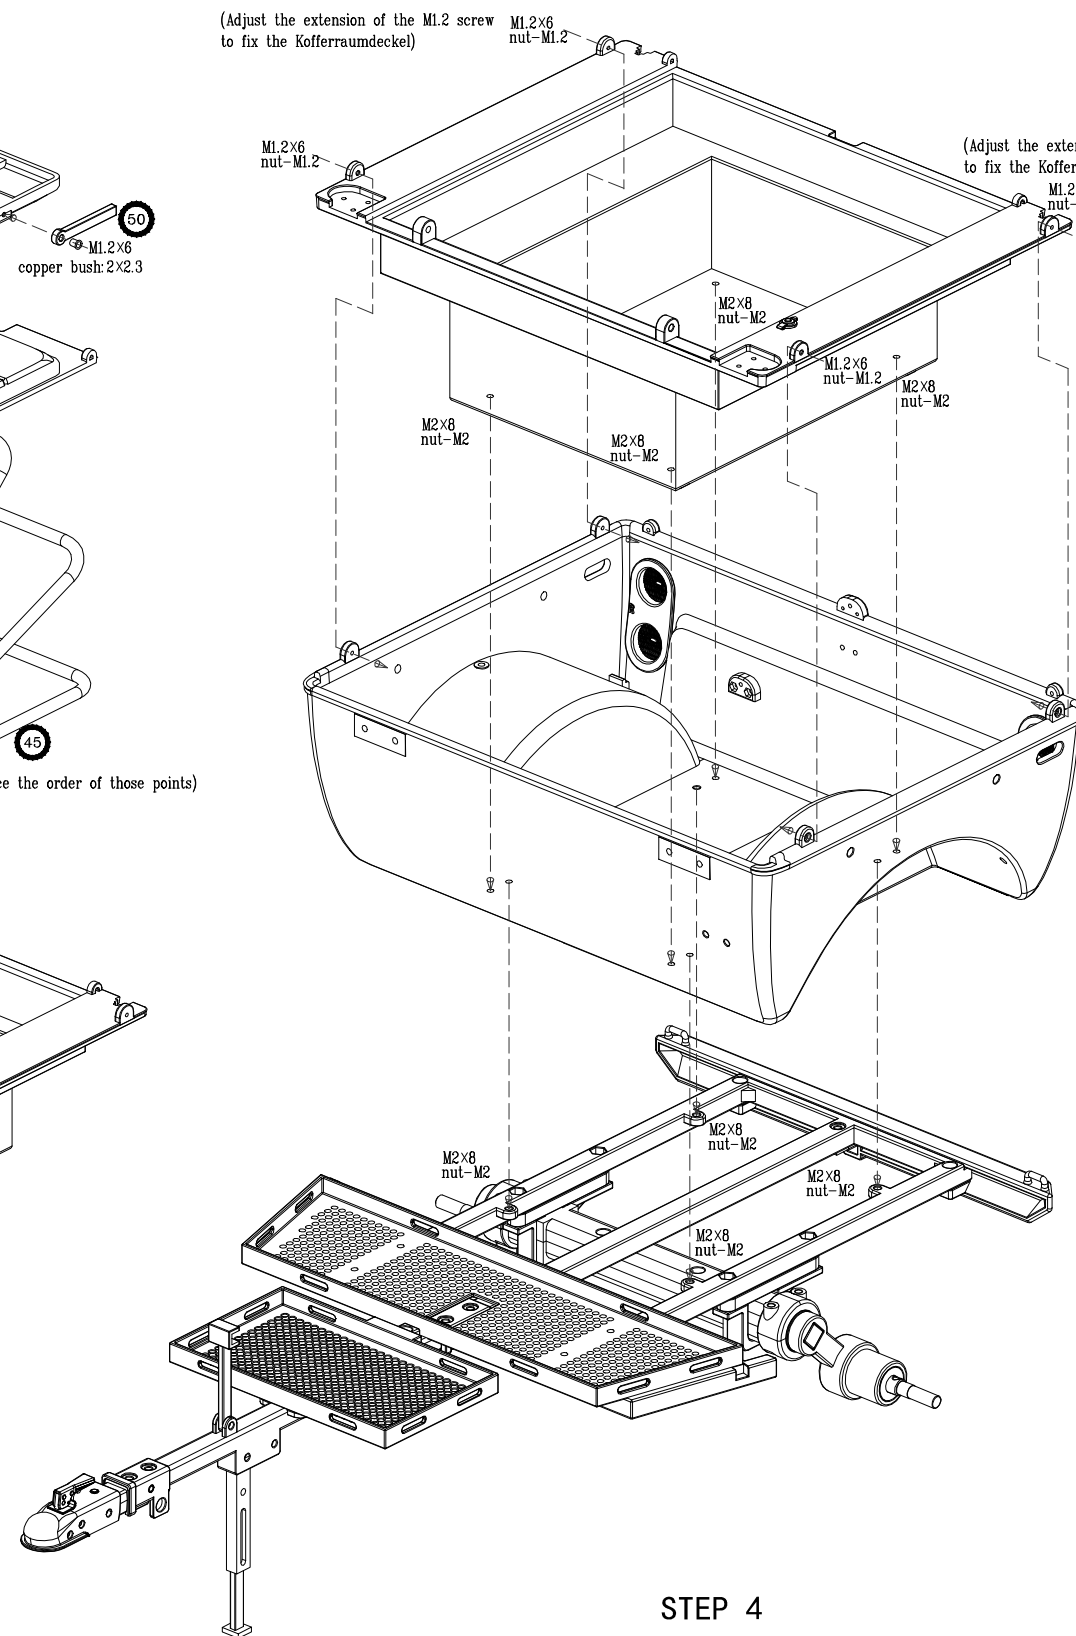

STEP 4

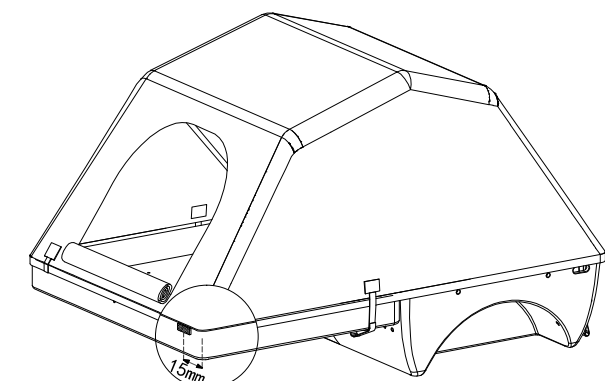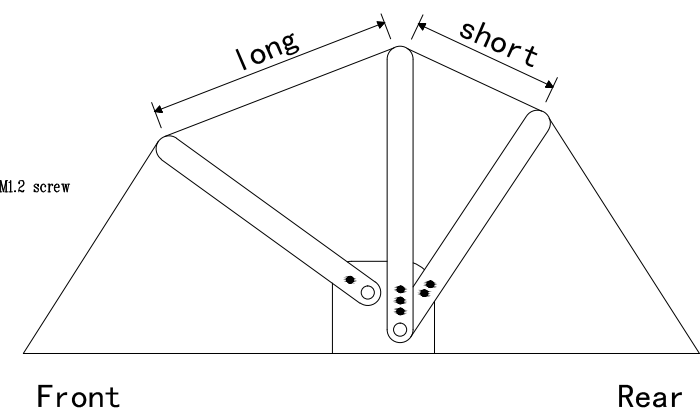

Stick Velcro-hook here with double-sided tape

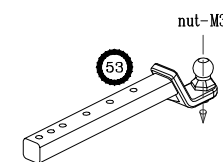

T-screw bag A	
nut-M1.0	2
M1.0x5	2
M1.5x4	14
nut-M2	52
nut-stl-M2	8
M2x8	30
M2x12	10
copper bush: 2x2.3	2
Small hinges	2
Ball connector	1

T-screw bag B	
M2x6	14
M2x10	11
M2x14	1
nut-M3	1
nut-M1.2	7
M1.2x6	11
Plastic spacer	4
copper bush: 2x3	2
gasket-M2	5
big hinges	2