



SCX10 II Diff Cover with ARMOUR™ Stainless Steel Skid Plate


INSTALLATION INSTRUCTION

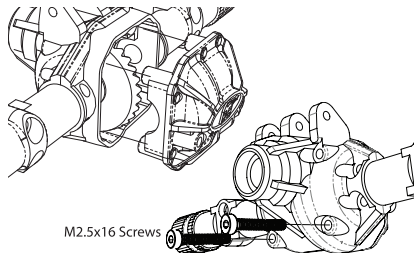


1. Attach diff cover to diff housing.

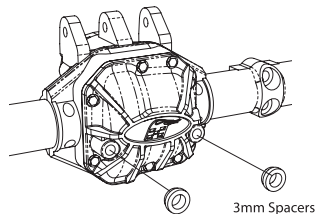

2. Line up small spacers on the front of the diff cover. **Optional:** If skid plate is not used insert the two grub screws which are supplied to keep the threads free from dirt.

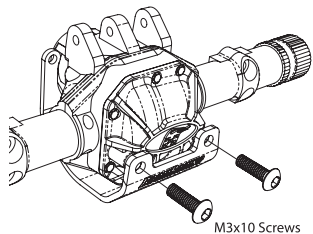

3. Line up skid plate with spacers and diff cover and attach using M3x10 screws provided.

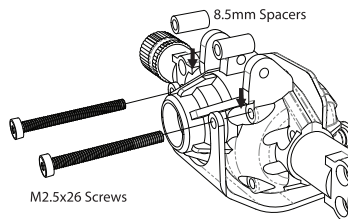

4. Slide the large spacers in between diff housing and skid plate and attach using M2.5x26 screws provided.

Use the longest screw to attach upper links and fasten with nut.

SCX10 II Diff Cover with ARMOUR™ SS Skid Plate

- 1 x SCX10 II Diff Cover
- 1 x ARMOUR™ Stainless Steel Skid Plate
- 4 x M2.5x16 Socket Head Cap Screw
- 2 x M2.5x26 Socket Head Cap Screw
- 2 x M3x10 Round Head Hex Screw
- 1 x M3x30 Round Head Hex Screw
- 2 x M3x6 Grub Screw
- 2 x 3mm Spacer
- 2 x 8.5mm Spacer
- 1 x Nut

ENJOY BEING A BADASS



<https://www.facebook.com/boomracingrc>



#boomracing

YOUR R/C HOP-UPS SPECIALIST

What is a good hop-up? For most people a good hop-up is simply a matter of performance.

We believe a good hop-up is about design and improvement. It's about making a conscious effort to better the R/C hobby industry and the people we work with every day. We design and develop all of Boom Racing's R/C hop-ups to ensure you get the most up-to-date and unique products available.

With our passion for R/C cars, we are constantly updating and upgrading our parts to ensure our supporters are enthusiastic and excited for what's to come next.