

SCALE **4WD** Series

BOLT-ON KIT
PARTIAL ASSEMBLY REQUIRED

BOOMRACING 
Your Radio Control Car Specialist

BRX01

1/10TH 4WD RADIO CONTROL CHASSIS KIT FOR LC70



WWW.BOOMRACINGRC.COM

PRODUCT CODE: BR8001/BR8002 INSTRUCTION MANUAL
MANUAL LAST UPDATED: 23 DEC 2021

BRX01

1/10TH 4WD RADIO CONTROL CHASSIS KIT FOR LC70

HOW IS THE BRX01 DIFFERENT?

Starting with a clean sheet of paper the 1/10 BRX01 was developed as a performance based R/C crawler chassis with a scale "stock truck" appearance. It combines many performance and scale features into a single ground breaking vehicle.

What makes the BRX01 special is that many of the features on the chassis come from the imaginations of fellow R/C hobbyists. By listening to their ideas and feedback, we are able to include many new and exciting features into the BRX01.

This is what Boom Racing has always been about - involving our community to push innovations forward.

ENJOY BEING A BADASS!

Wie unterscheidet sich das BRX01 von anderen Chassis?

Beginnend mit einem leeren Blatt Papier, wurde das 1/10 BRX01 als performance basiertes RC-Crawler Chassis mit möglichst realistischer Scale Optik entwickelt. Es vereint viele Performance- und Scaleeigenschaften in einem einzigen bahnbrechenden Scaler.

Das Besondere an dem BRX01 ist, dass viele Funktionen des Chassis auf Vorstellungen und Wünsche anderer RC-Hobbyisten basieren. Wir haben Euch zugehört und möglichst viele Eurer Ideen und Feedbacks bei der Konstruktion des BRX01 berücksichtigt und in das Chassis integriert.

Darum ging es uns bei Boom Racing schon immer - die Einbindung unserer Community in die Entwicklung um Innovationen voranzutreiben.

ENJOY BEING A BADASS!

En quoi le BRX01 est si différent ?

Issu d'une page blanche, Le BRX01 1/10 a été développé sur une base performante avec son châssis de crawler et un look de véhicule de série très réaliste.

La combinaison de ses nombreuses performances et fonctionnalités en font un véhicule révolutionnaire.

Les spécificités du BRX01 proviennent du fait que son châssis est né de l'inspiration de l'équipe de Boom Racing avec la contribution des passionnés de modélisme.

Le savant mélange des idées de l'équipe, combiné aux retours des passionnés a permis d'inclure de nombreuses fonctionnalités innovantes.

C'est là tout l'esprit "BADASS" de Boom Racing : impliquer la communauté des passionnés dans l'innovation !

ENJOY BEING A BADASS!

¿En qué se diferencia el BRX01?

Comenzando con una hoja de papel limpia, el 1/10 BRX01 se desarrolló como un chasis de Crawler de R / C basado en el rendimiento con una apariencia "stock". Combina muchas características de rendimiento y escala en un único chasis innovador. Lo que hace que el BRX01 sea especial es que muchas de las características del chasis provienen de la imaginación de otros aficionados de R / C. Al escuchar sus ideas y comentarios, pudimos incluir muchas características nuevas y emocionantes en el BRX01. De esto se ha tratado Boom Racing: "involucrar a nuestra comunidad para impulsar innovaciones."

¡DISFRUTE Siendo BADASS!

Como é que o BRX01 é diferente?

Começando com uma folha de papel limpa o BRX01 foi desenvolvido baseado na performance de um chassi de R/C crawler, mantendo uma aparência stock.

Combina muitas características de performance e aparência realística num único chassi inovador. O que torna o BRX01 num chassi tão especial foi que muitas das características vieram da imaginação de membros apaixonados do mundo do R/C. Ouvindo as suas ideias e comentários foi possível incluir muitas características novas e emocionantes ao BRX01. É disto que a Boom Racing, como sempre se baseia: "envolver a nossa comunidade para promover o desenvolvimento de inovações".

Diverte te sendo um rebelde!

BRX01은 어떻게 다른가요?

아무것도 없는 도면으로 시작하여 1/10 BRX01은 "트럭 혈통"을 기반으로 하여 R/C 크롤러(트라이얼) 채시로 개발되었습니다. 여러 가지 성능 및 스케일의 기능을 채시에 결합 합니다. BRX01을 특별하게 만드는 이유는 채시의 많은 기능이 동료 R/C 애호가들의 상상력에서 비롯된 것입니다. 아이디어와 피드백을 듣고 BRX01에 새롭고 흥미로운 기능을 많이 추가 할 수 있었습니다. 이것이 바로 우리 블레이싱이 항상 혁신을 추구하는 것과 관련이 있습니다.

멋지게 즐기세요!

BOOMRACING
Your Radio Control Car Specialist

BRX01与众不同

现在的遥控车市场上还没有一款同时兼具仿真与攀爬性能的车架。一个外观比例几乎接近于现实真车还同时兼备了许多优越攀爬性能的车架 -- BRX01，应运而生！BRX01从设计之初就定位在是一辆具备攀爬性能的仿真车。我们广泛听取了用户和一些顶级发烧友的建议和意见，把一些新的特性和现有的性能特点都巧妙地结合在这一款车架中。

Boom Racing 坚持服务于消费者，真诚地联合世界各地模友，以共同创新推动模型车发展为己任！

尽情嗨起来吧！

BRX01與眾不同

現在的遙控車市場上還沒有一款同時兼具仿真與攀爬性能的車架。一個外觀比例幾乎接近於現實真車還同時兼備了許多優越攀爬性能的車架 -- BRX01，應運而生！BRX01從設計之初就定位在是一輛具備攀爬性能的仿真車。我們廣泛聽取了用戶和一些頂級發燒友的建議和意見，把一些新的特性和現有的性能特點都巧妙地結合在這一款車架中。

Boom Racing 堅持服務於消費者，真誠地聯繫世界各地玩家，以共同創新推動模型車發展為己任！

ENJOY BEING A BADASS!



A Bolt-On Kit means parts of the chassis are pre-assembled and require minor assembly for completion. The factory assembled parts offer convenience for builders eager to get started. The BRX01 kit includes factory pre-built axles, transmission, transfer case and shocks. Shocks require oil to be filled (included).



The Scale 4WD Series is Boom Racing's line of scale based 4WD R/C products geared towards realistic appearance.



Owning a BRX01 is a truly unique and special experience.

All BRX01 chassis kits include a BRX01 Owners Card. As the original owner, you are eligible to receive a special promotion at each of the events being attended by Boom Racing. Follow the instructions on the back of the Owners Card to register your vehicle.

Once your vehicle is registered online, the chassis is officially registered to you and no one else can claim it. This will help with any future updates and can be used to notify you of new options in the future.

All BRX01 chassis kits are numbered and include a VIN#. The Car No. and VIN# match those on the BRX01 Owners Card. No two chassis will ever have the same numbers.

We believe that this will encourage enthusiasm and interaction between owners and we hope that it will boost attendance at events to push the hobby industry further down the road.

To register your BRX01 visit: <https://www.boomracingrc.com/BRX01/register>

FOR HOBBYISTS BY HOBBYISTS



1/10TH 4WD RADIO CONTROL CHASSIS KIT FOR LC70



⚠ CAUTIONS ⚠

BEFORE YOU PROCEED

Congratulations! Owning the BRX01 is a truly special experience.

Carefully read and follow all instructions to prevent serious damage to your model. Failure to follow these instructions will be considered abuse and/or neglect.

Study the instructions thoroughly before assembly.

There are many small screws, nuts and similar parts. Assemble them carefully referring to the drawings. Follow the steps exactly as shown to build the vehicle correctly without issues.

If you decide to return the BRX01, do not begin assembly. Your hobby dealer will not accept a model for return or exchange after you have started assembly.

Boom Racing offers Spare Parts & Upgrade Options for improved performance. Visit our website (<https://www.boomracingrc.com>) or your local Boom Racing dealer for assistance. Please note that specifications, availability and price are subject to change without notice.

SAFETY PRECAUTIONS

All of us here at Boom Racing want you to enjoy your new truck. Operate your BRX01 sensibly and with care, and it will be exciting, safe and fun for you and those around you. Failure to operate your BRX01 in a safe and responsible manner may cause damage and injury.

Follow these outlined rules for safe radio control operation

- Read carefully and fully understand the instructions before assembly.
- This model is not intended for use by children (minors) under 14 years of age without the supervision of a responsible and knowledgeable adult who should also read the instructions.
- When assembling this kit, extra care should be taken to avoid personal injury. Keep out of reach of small children.
- Avoid running the vehicle in crowded areas and near small children.
- BRX01 can be very fast and quiet. It could cause injury to those unaware of its presence.

Inspect Your BRX01 Before and After Operation

- Make sure that all screws and nuts are properly tightened.
- Use thread lock on screws for any metal on metal surface.
- Adjust steering servo and trim so that the BRX01 runs straight with transmitter in neutral.
- Disconnect/remove all batteries after operation.
- Replace any batteries that have been dented, are bloated, or have frayed wires, short circuits can cause fire.
- Completely remove sand, mud, dirt etc after use to prolong the life of the BRX01.
- Maintain bearings by cleaning or replacing them regularly.

WARRANTY

Boom Racing's One (1) Year Factory Limited Warranty – A Peace Of Mind Right From The Start

WHO IS COVERED

This warranty is extended to the original end-user that registers it online (<https://www.boomracingrc.com/BRX01/register>) only, whether purchased or received as a gift.

FACTORY LIMITED WARRANTY

What Is Covered and How Long

Boom Racing warrants that all new products are free from defects in manufacturing, materials and workmanship for a period of one (1) year from date of retail purchase. The receipt or invoice at the time of purchase is your proof of purchase and is required for Boom Racing to honor any warranty.

What Is Not Covered

It does not cover defects or malfunction caused by user error of assembly, damages due to normal wear and tear, failure to follow operating instructions, misuse or abuse, users' failure to perform routine maintenance, or use with products with which is not intended to be used. It also does not cover damages caused by unauthorized alteration, modification or repair. It does not cover cosmetic or incidental damages. Boom Racing does not warrant or provide service or support for any third party products.

The JX mini servo warranty will be void if it is disassembled.

What We Will Do

We will, at our discretion, repair or replace any product free of charge that is incorrectly made or proves to be defective in material or workmanship during the warranty period. If your product is no longer being manufactured or is out of stock, we may replace your product with a comparable or improved product at our option.

What We Will Not Do

We will not pay for shipping, insurance or transportation charges from you to us, or any import fees, duties and taxes.

What To Do To Obtain Warranty Service

To obtain warranty service for products purchased from a third-party, retail or directly from Boom Racing you must return the product with proof of purchase using the following procedures:


1. Contact Boom Racing Customer Support for specific warranty instructions via our website, by email or by telephone as follows:
 - Online @: <https://www.boomracingrc.com/contact-us>
 - Email: sales@boomracingrc.com
 - Telephone: 1-209-676-8880

You may be asked to complete a warranty service request form. A copy of your purchase receipt may be required.


2. Our Customer Support may ask you to return and ship the defective product back to us. Label and ship the product, freight prepaid, to the address provided by Boom Racing; and
3. Place any necessary return authorization number prominently on the outside of the return packaging. Return packaging not bearing a return authorization number where required may be refused.

Boom Racing reserves the right to final decision, change or modify this warranty without notice.


Equipment Required

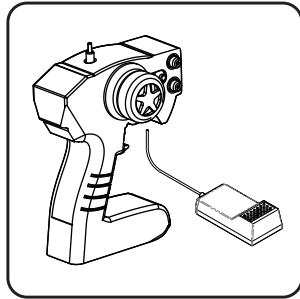


3CH Radio

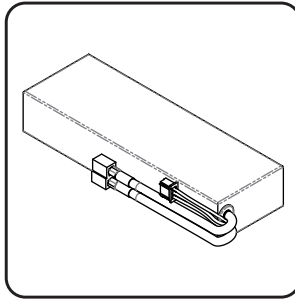


Battery

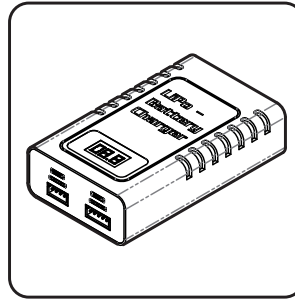


Charger

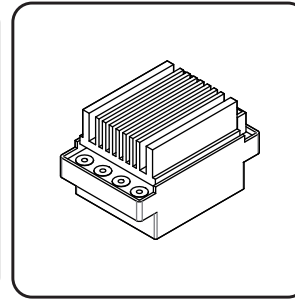

ESC

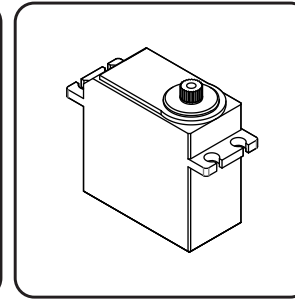


Steering Servo

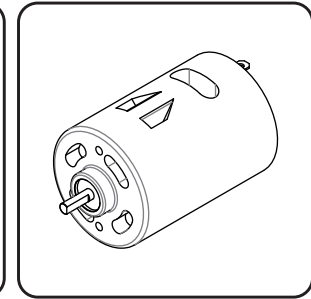


540/550 Motor

Tools Recommended

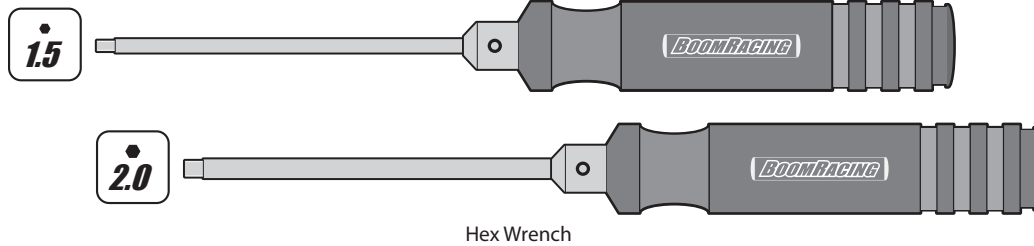


Hex Wrench

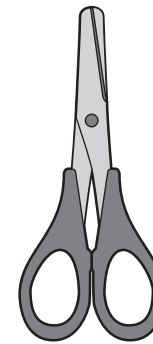


Scissors



Hobby Knife

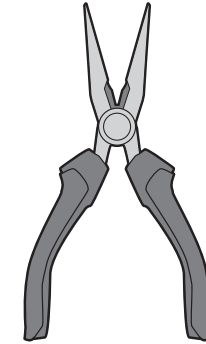

Long Nose Pliers



Thread Lock

Apply thread lock to places shown by this mark.
Apply thread lock first, then assemble.



Black Graphite Grease

Lubricate all gears.
Apply grease to the places shown by this mark.
Apply grease first, then assemble.



Item not included.



Silking Grease

Lubricate all moving parts including joints and bearings.
Apply grease to the places shown by this mark.
Apply grease first, then assemble.



Shock Oil

Apply shock oil to the places shown by this mark.



Pay attention to note on page.




DEDICATED TO ALL OF YOU WHO HAVE HELPED US BRING THIS AWESOME
CHASSIS FROM IMAGINATION INTO REALITY.


ENJOY BEING A BADASS.

PARTS REFERENCE

Parts Location Map

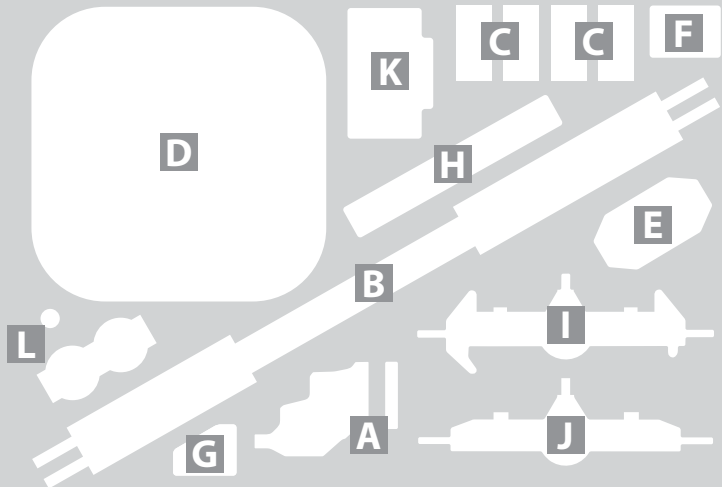


A

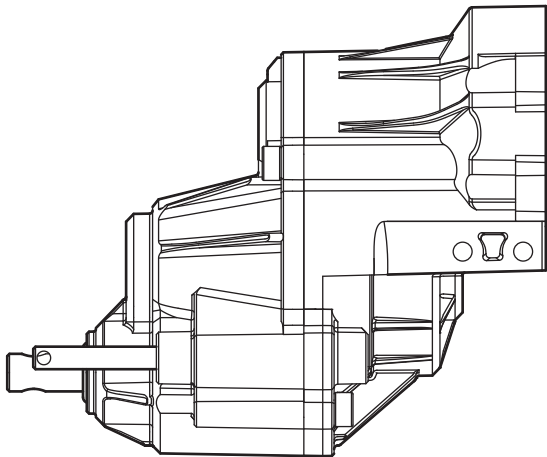


Complete **BCF2™** Gearbox

A

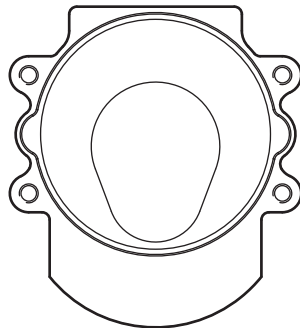

Gearbox Adapter

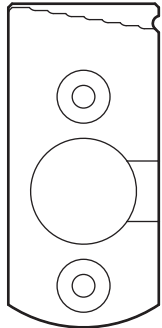


Motor Mount

#BRLC7027


#BRLC7011

B

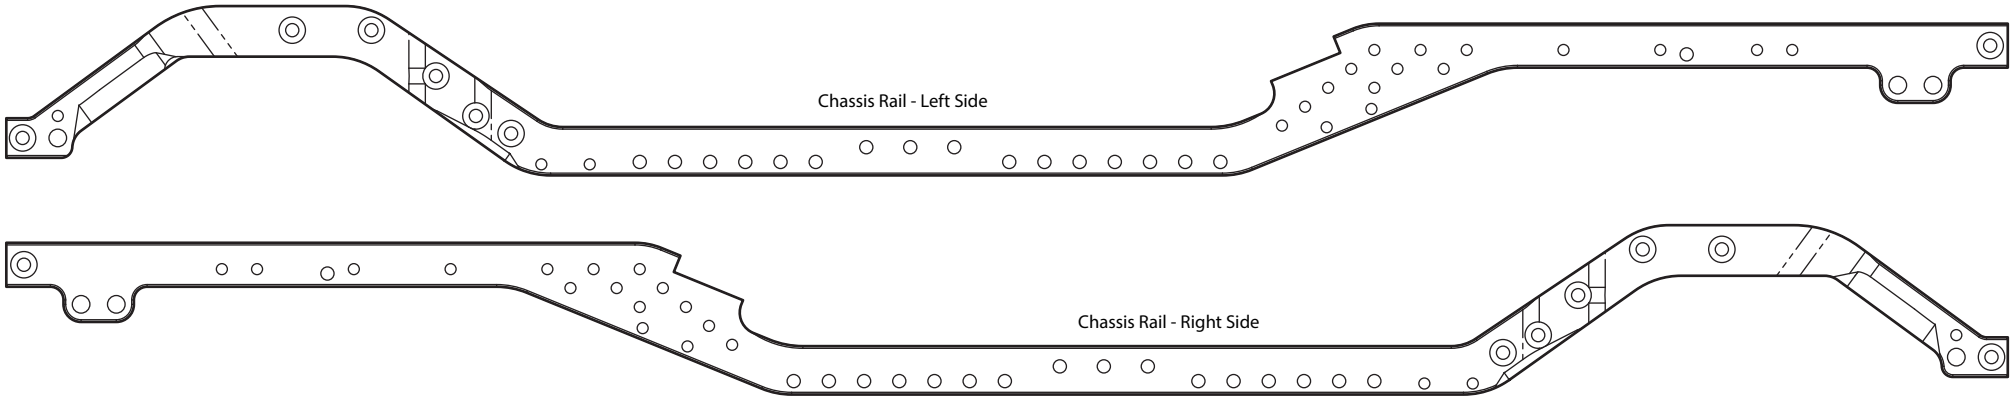


B

#BRLC7052



80mm Shock x 4




25mm Soft Coil x 4



32mm Soft Coil x 4


C

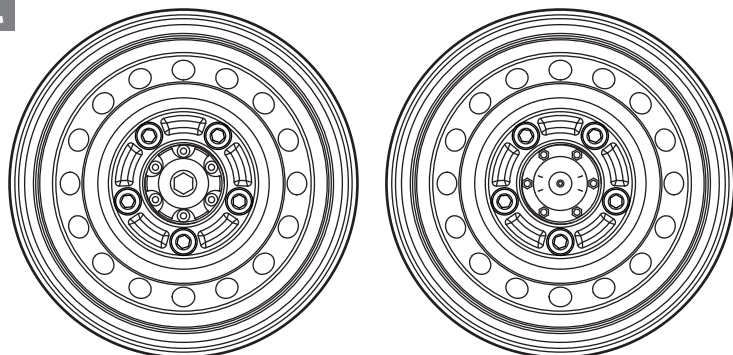

Steelie Wheels (Front) x 2
#BRW780955FGM


Steelie Wheels (Rear) x 2
#BRW780955RGM

D

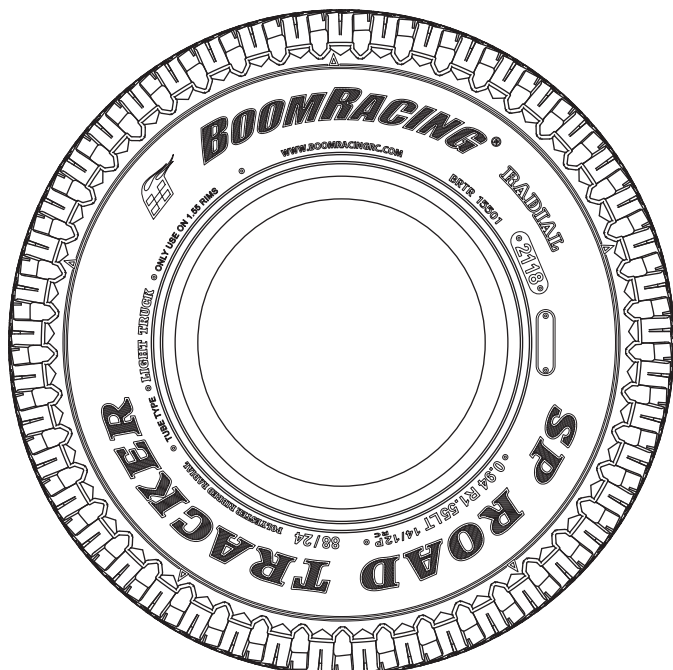


1.55 SP ROAD TRACKER™ Crawler Tire GEKKO Compound
3.46x0.94 Inch (88x24mm) w/ Single Stage Open Cell Foam x 4
#BRTR15501

D 9 ACCESSORIES




Connection Shaft
#BRLC7028

12T 32P Pinion Gear
#BRPG3212-3




D 1 CHASSIS




M3x8 RS x 8
#BRASBH3008



M3x10 RS x 4
#BRASBH3010



M3x12 RS x 4
#BRASBH3012



M3x14 RS x 2
#BRASBH3014




M3x16 RS x 5
#BRASBH3016



M2.5x8 CSS x 2
#BRASFH2508




M3x8 CSS x 4
#BRASFH3008




M3x10 CSS x 4
#BRASFH3010




M3x18 CSS x 4
#BRASFH3018



M3x12 SS x 2
#BRASST3012/DS



M2.5x10 SC x 2
#BRASCH2510



M3x12 SS x 2
#BRASST3012/DS



3x6x5 Tapper Spacer x 4
#BRLC7040



3x6x3 Tapper Spacer x 2
#BRLC7041


D 2 GEARBOX / TRANSFER CASE



M3x8 RS x 4
#BRASBH3008




M3x8 CSS x 1
#BRASFH3008




M3x12 CSS x 1
#BRASFH3012



M2.5x8 SC x 9
#BRASCH2508




M3x8 SC x 2
#BRASCH3008



M3x12 SS x 2
#BRASST3012/DS




D8x1.5 O-Ring x 4
#BRASORD8-15

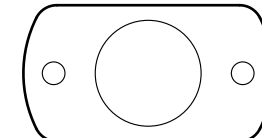

Motor Spacer
#BRLC7032

D 3 LINKS / SHOCKS



M3x12 RS x 4
#BRASBH3012



M3x18 RS x 3
#BRASBH3018



M3x24 RS x 1
#BRASBH3024



M4x16 SS x 16
#BRASST4016



M3x20 CSS x 4
#BRASFH3020



M3x22 CSS x 2
#BRASFH3022



M3x26 CSS x 2
#BRASFH3026



3x6x6 Tapper Spacer x 2
#BRLC7042



M3 Nuts -Nylloc x 5
#BRASNUTM3



D6x1.5 O-Ring x 2
#BRASORD6-15



D4x7x2 Nylon Spacer x 2
#BRASSPD427/N



3x6x5 Tapper Spacer x 2
#BRLC7040

D 5 FINE TUNE SPACERS



D4x7x1 Nylon Spacer x 2
#BRASSPD471/N



D5x8x0.1 Spacer x 5
#BRASSPD5801

D 6 RECEIVER BOX



M3x8 RS x 4
#BRASBH3008



M2.5x6 RS x 2
#BRASBH2506

D 4 SERVOS



M2x7 RS x 1
#BRASBH2007



M3x6 RS x 2
#BRASBH3006



M3 Nuts -Nylloc x 2
#BRASNUTM3



M2x8 RS x 1
#BRASBH2008



M3x12 RS x 2
#BRASBH3012



M2 Nut x 1
#BRASNUTM2




M3x8 RS x 4
#BRASBH3008

D 7 BODY MOUNTS



M3x12 Self Tapping x 2
#BRASBH3012/ST



M4x12 SC x 2
#BRACH4012



M2.5x8 SC x 2
#BRASCH2508



Cross Bar x 2
#BRLC7048C




M2 Nuts x 4
#BRASNUTM2



M2x5 SC x 4
#BRASCH2005

D 8 WHEELS



2x10mm Pin x 4
#BRASPIN210



M3x3 SS x 4
#BRASST3003



M4 Nuts - Nylloc x 4
#BRASNUTM4



Hex Adapter x 4
#BRLC7056

D 9 ACCESSORIES

#BRLC7049



Initiator
Horn A



Spring
Horn A




Follower
Horn A

#BRLC7055




M2x8 SC x 2
#BRASCH2008

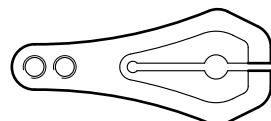


Servo Horn B - 25T

E

#BRLC7018

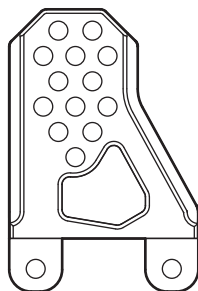


Damper Mount - Right Side

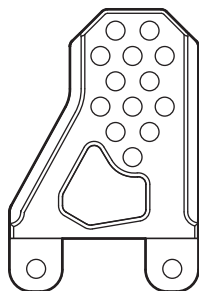


Damper Mount - Left Side

D 10 ROD ENDS



BADASS™
Straight Nylon Rod End x 13
#BRW750303



BADASS™
Nylon Rod End (Upwards) x 6
#BRW750301



BADASS™
Nylon Rod End (Sideways) x 1
#BRW750302




D2 Ball End x 2
#BRQ90351




BADASS™
Stainless Steel Pivot Ball x 20
#BRW750300

E

#BRLC7019




Gearbox Side Mount
Left



Gearbox Side Mount
Right

F

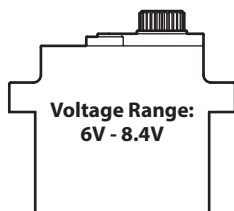


JX Waterproof HV Mini Servo
#JX/PDI-HV1151MG

E




Gearbox End Mount
#BRLC7008


D

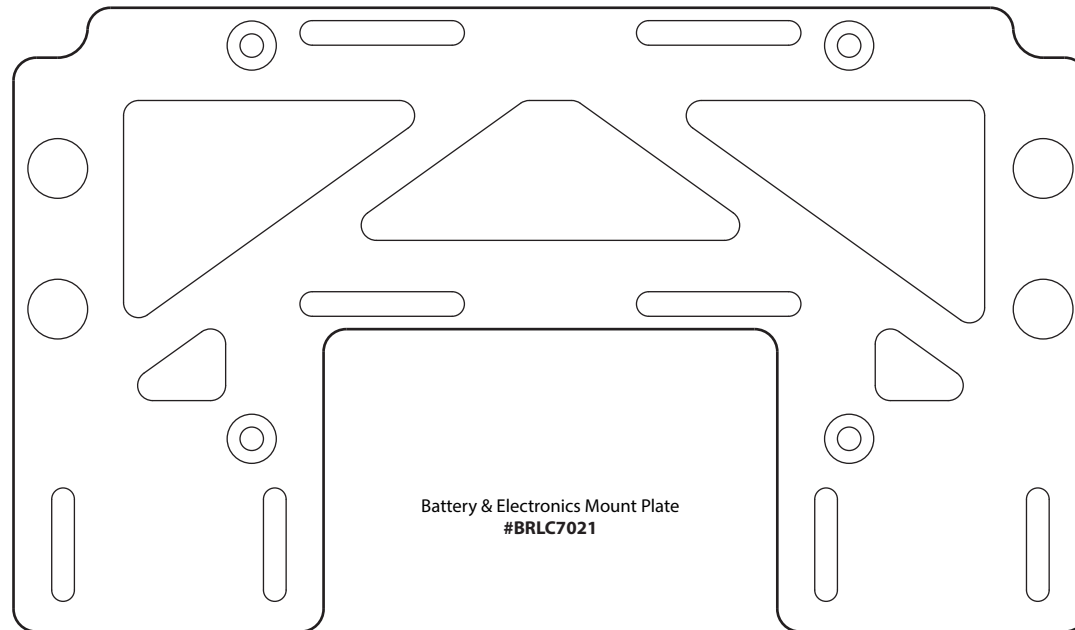

Battery & Electronics Mount Plate
#BRLC7021

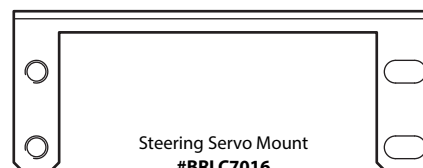

Steering Servo Mount
#BRLC7016




Body Hinge Mount
#BRLC7013




2 Speed Servo Mount
#BRLC7009

D

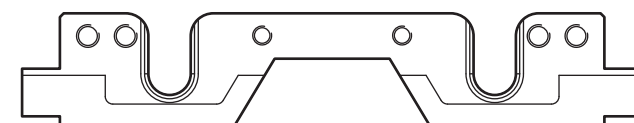

Front Crossmember
#BRLC7015

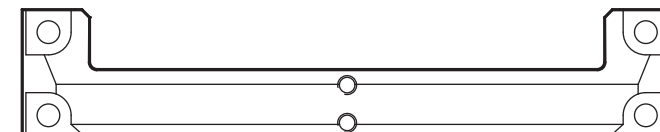


Middle Crossmember
#BRLC7014




Rear Crossmember
#BRLC7012

E

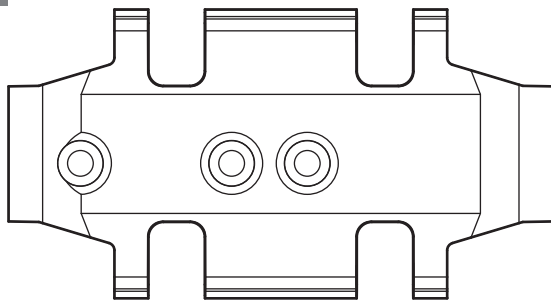


High Clearance Skid Plate
#BRLC7020

G

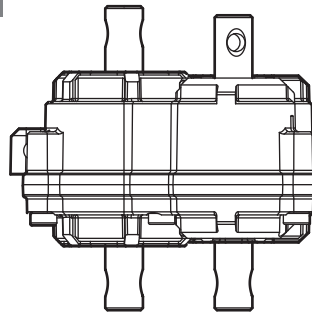

Complete **SRD™** Transfer Case
#BRQ763069/CA

H




Shift Rod
#BRLC7051



Counter Threaded Link
55mm x 2
#BRLC7050

I

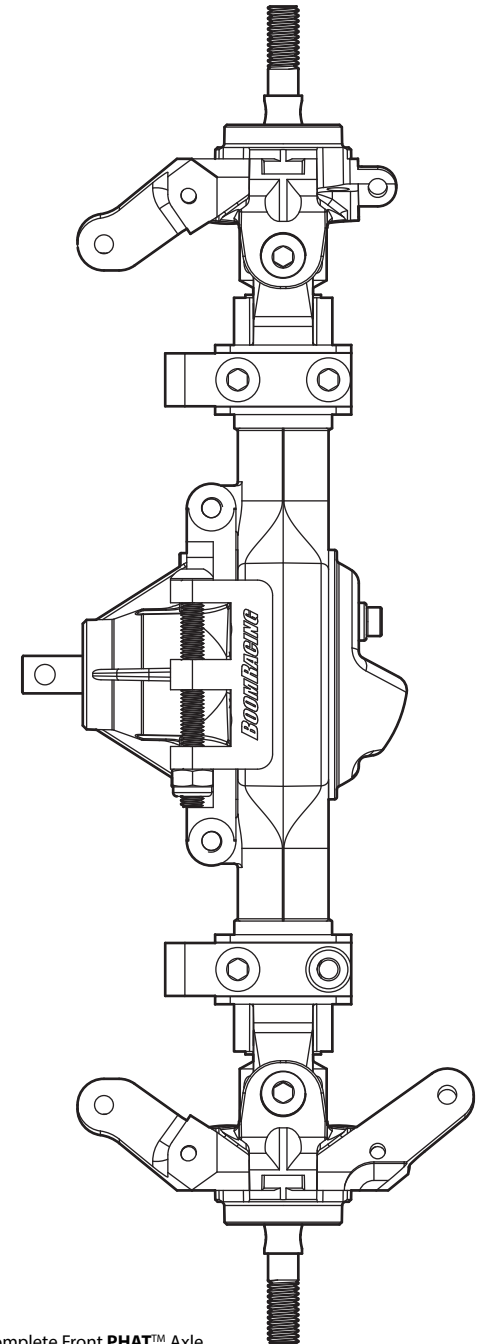

BRX70 Complete Front **PHAT™** Axle
w/ 30/8T HD Keyed Gear & **BADASS™** HD Steel Uni. Drive Shafts
#BRLC7057

H

#BRLC7034



Link - 63mm x 1



Link - 70mm x 2




Link - 93mm x 2



Link - 114mm x 2

H

#BRLC7043



Steel Front Drive Shaft x 1



M3/2.5x12 Set Screw x 4
#BRASST3012/DS



D5x7x2.7 Spacer x 4
#BRASSPD5727



Steel Rear Drive Shaft x 1


Rebuild Kit Available
#BRQ90279KIT



Tie Rod
#BRLC7003


K

#BRLC7033

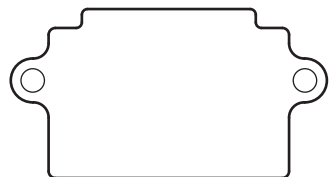


Stainless Steel Sealing Cap


#BRLC7033A

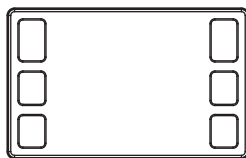


Silicone Port

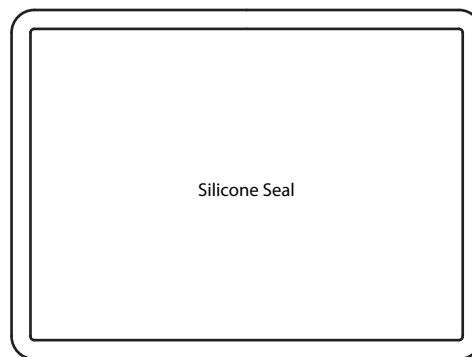

Silicone Seal

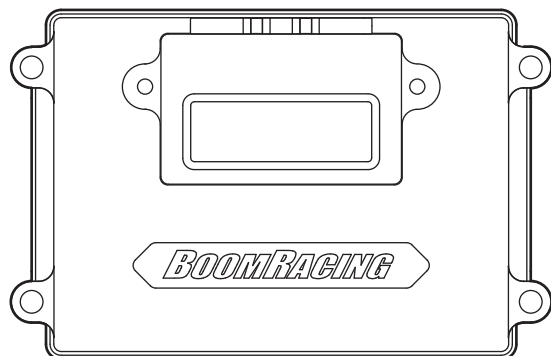


Receiver Box Lid

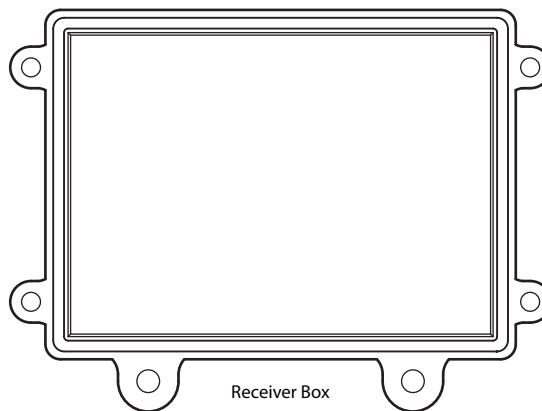


Receiver Box

K

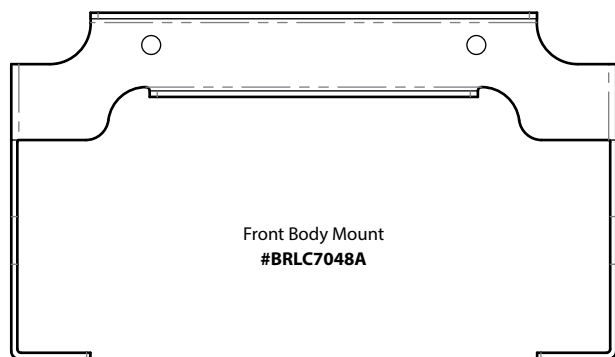


Front Body Mount
#BRLC7048A

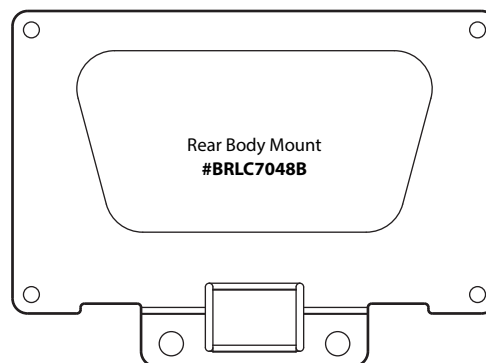


Rear Body Mount
#BRLC7048B

J

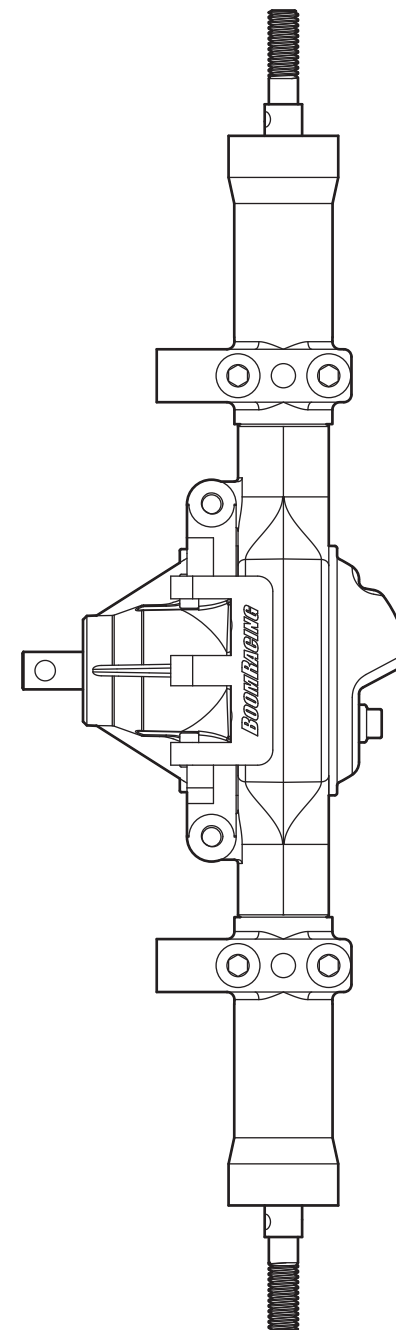

BRX70 Complete Rear **PHAT™** Axle
w/ Reversed 30/8T HD Keyed Gear & **BADASS™** HD Steel Shaft
#BRLC7058

D

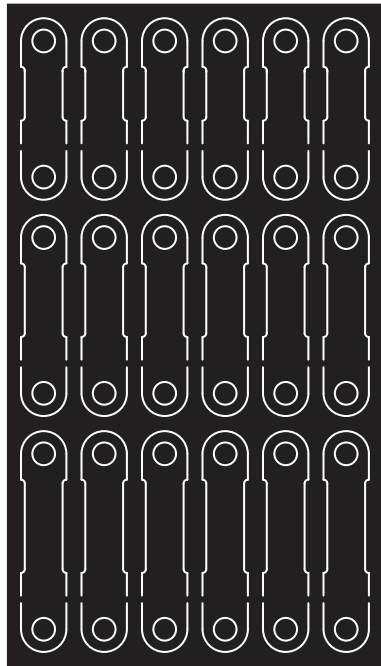


Cable Wiring Retainer
18 pieces / Use M2.5 or M3 Round Head Bolts
#BRT10037

B



Battery Strap x 2 #BRGRS10

D




10 x 1.5cm Double Side tape

F




Extension Cable x 2
#BRLC7059

D




Wrench 5.5mm/5.0mm x 1

#BRT10028

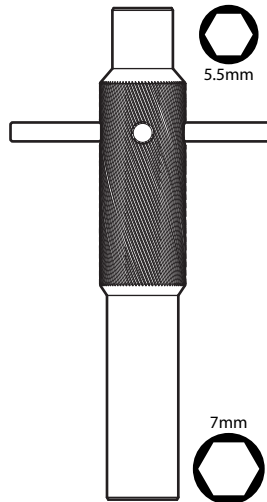

Tool - Socket x 1

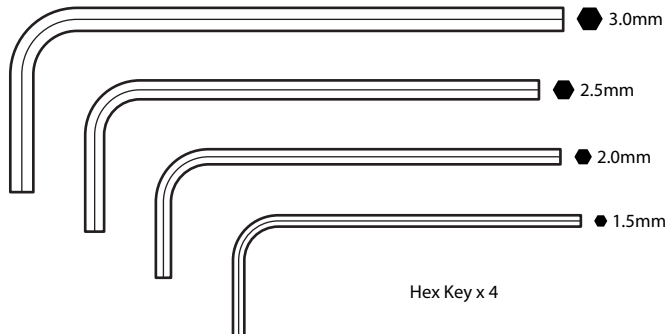

Hex Key x 4

L



Black Graphite Grease 5g
#BRGRS08



SW Siliking Grease 5g
#BRGRS01










242 Thread Lock 2g
(Available separately in 10g)
#BRGRS242



30WT Shock Oil 15ml
(Available separately in 60ml)
#BRSHK030

1- CHASSIS

Parts Needed:

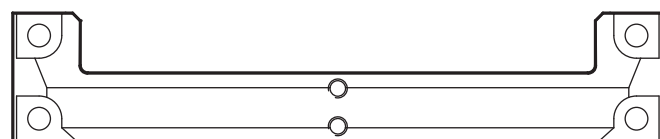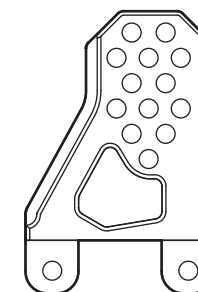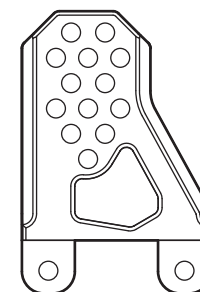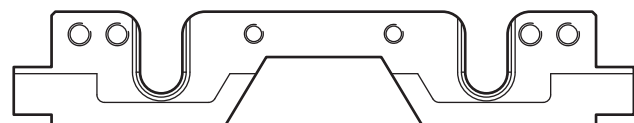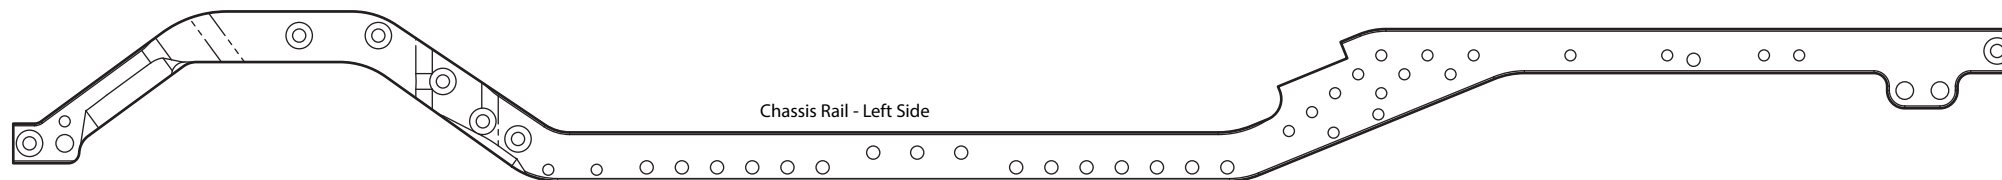




Damper Mount - Right Side

Damper Mount - Left Side

Gearbox Side Mount Left

Middle Crossmember

Body Mount Hinge

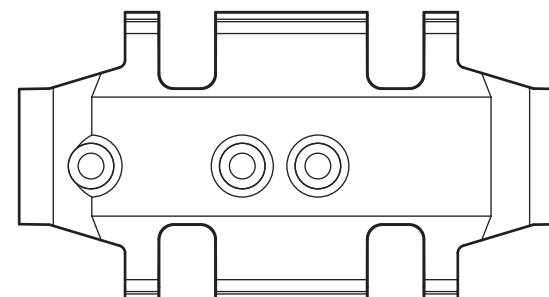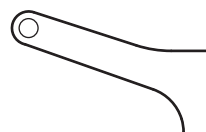

Rear Crossmember

Gearbox End Mount

High Clearance Skid Plate



Gearbox Side Mount Right

1 CHASSIS

- | | |
|--|--|
|  M3x8 RS x 8 |  M2.5x8 CSS x 2 |
|  M3x10 RS x 2 |  M3x8 CSS x 4 |
|  M3x12 RS x 4 |  M3x10 CSS x 4 |
|  M3x14 RS x 2 | |




Apply Thread Lock to all screws.

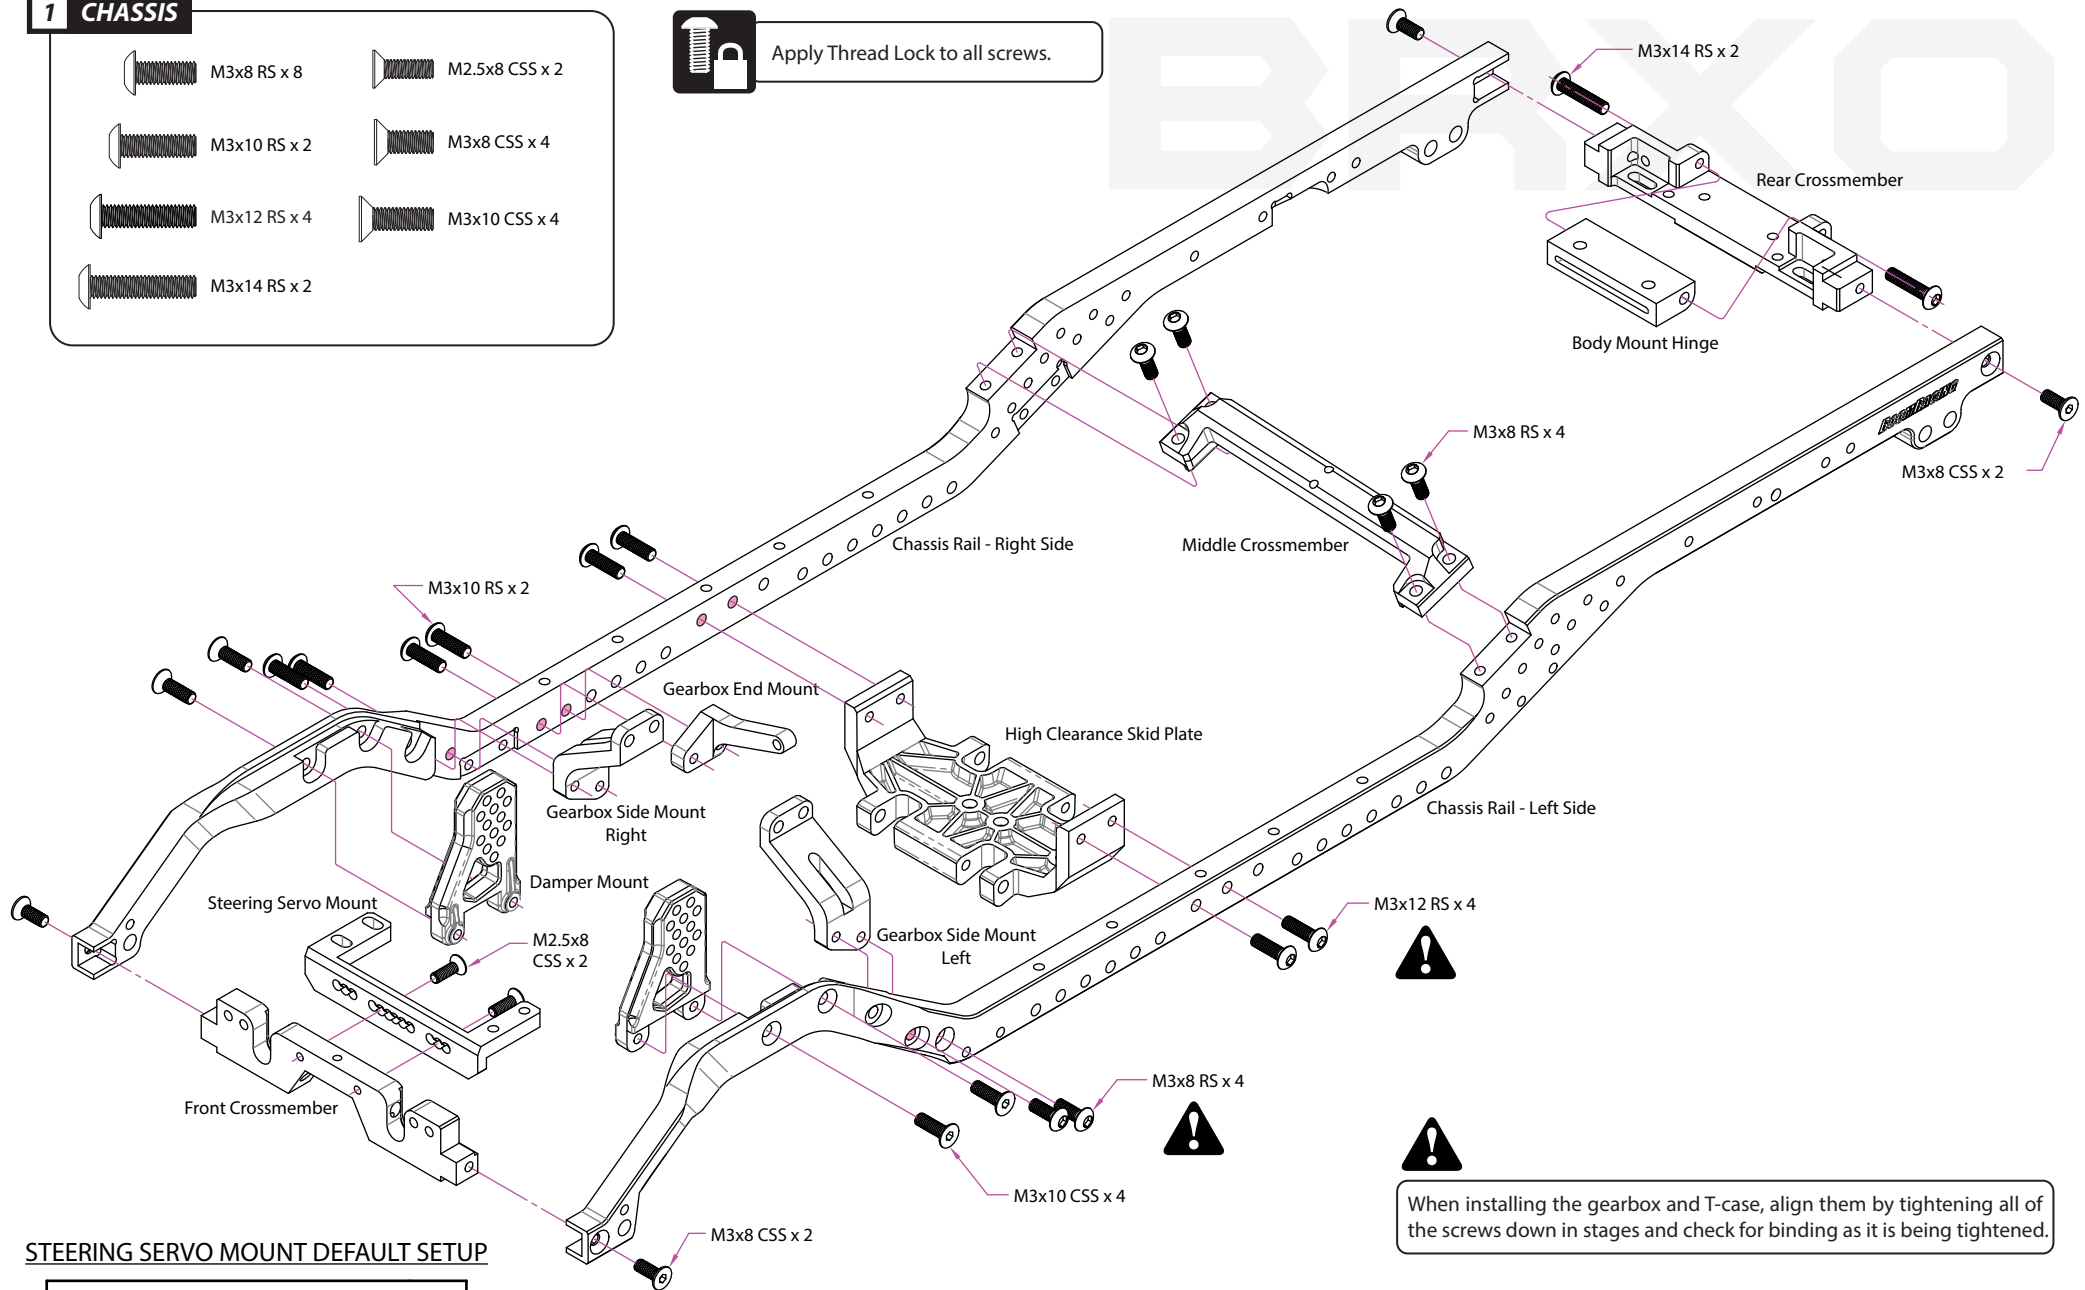

STEERING SERVO MOUNT DEFAULT SETUP


2 - TRANSMISSION

Parts Needed:

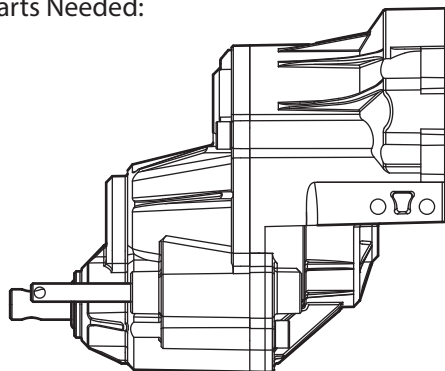


Complete **BCF2™** Gearbox
(Exploded Diagram on Page 43)

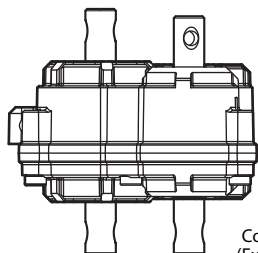

Complete **SRD™** Transfer Case
(Exploded Diagram on Page 44)



Connection Shaft

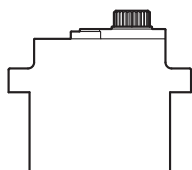

JX Waterproof HV Mini Servo
(6V - 8.4V)



2 Speed Servo Mount

2.1 - TRANSMISSION

2 GEARBOX / TRANSFER CASE



M3x8 RS x 4




M3/2.5x12
Set Screw x 1



D8x1.5 O-Ring x 1



Tip: Lubricate the O-Ring with
Silking Grease regularly to reduce
friction and heat.



Gearbox

M3/2.5x12 Set Screw x 1

Transfer Case



D8x1.5 O-ring

Connection shaft


Gearbox

M3x8 RS x 2


M3x8 RS x 2

2.2 - TRANSMISSION


1 CHASSIS



2 GEARBOX / TRANSFER CASE

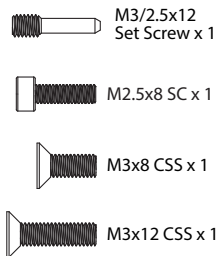

4 SERVOS

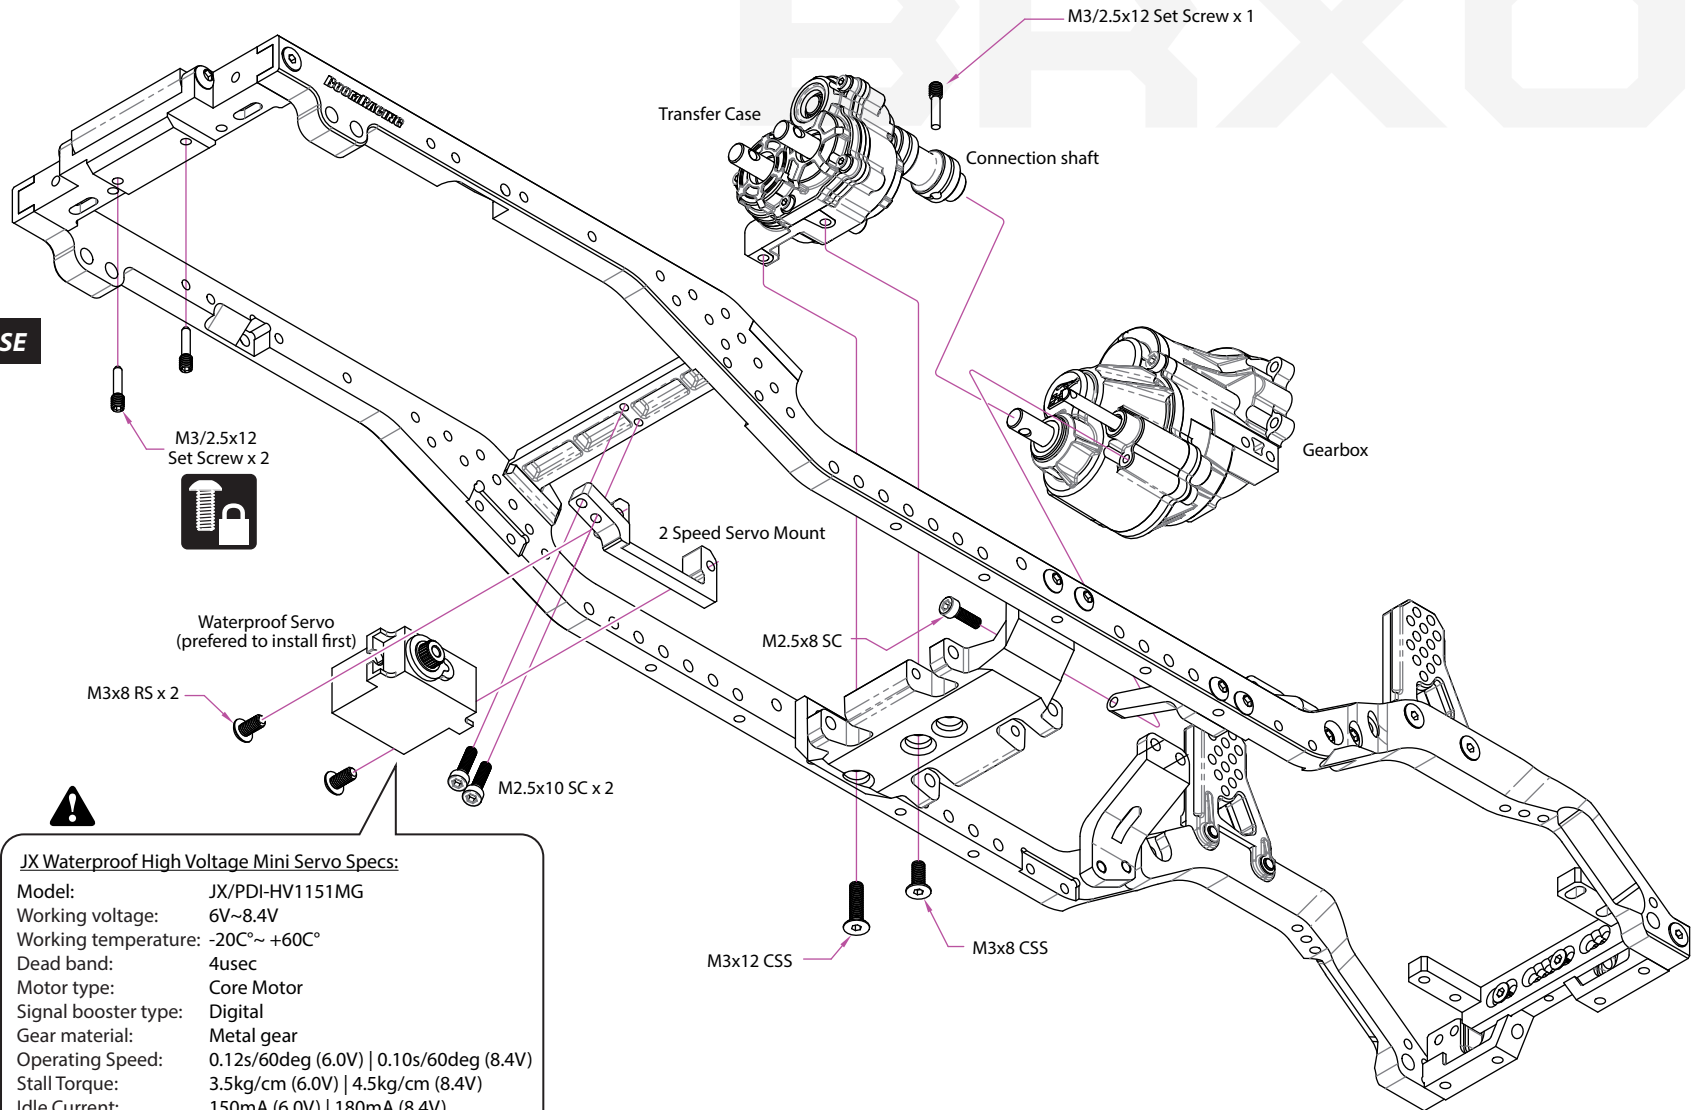


JX Waterproof High Voltage Mini Servo Specs:

Model:	JX/PDI-HV1151MG
Working voltage:	6V~8.4V
Working temperature:	-20C°~+60C°
Dead band:	4usec
Motor type:	Core Motor
Signal booster type:	Digital
Gear material:	Metal gear
Operating Speed:	0.12s/60deg (6.0V) 0.10s/60deg (8.4V)
Stall Torque:	3.5kg/cm (6.0V) 4.5kg/cm (8.4V)
Idle Current:	150mA (6.0V) 180mA (8.4V)
Load Current:	260mA (6.0V) 340mA (8.4V)
Size:	23.2 x 12.5 x 25.6mm
Weight:	15g
Tooth Count:	25
Wire length:	310mm JR plug
Black:	Negative
Red:	Positive
White:	Signal


3 - UPPER & LOWER LINKS

Parts Needed:



10 ROD ENDS

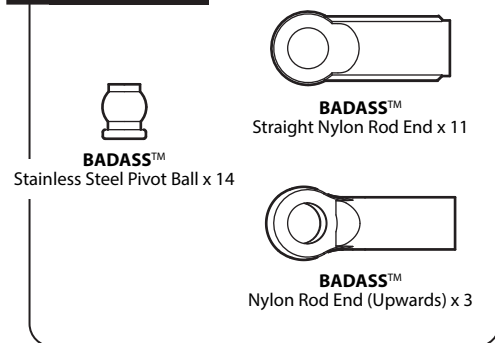

5 FINE TUNE SPACERS




3 LINKS / SHOCKS

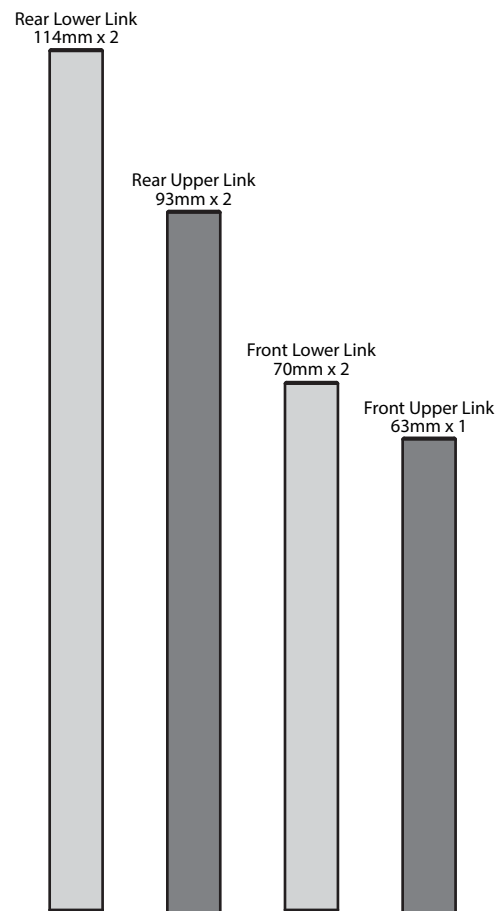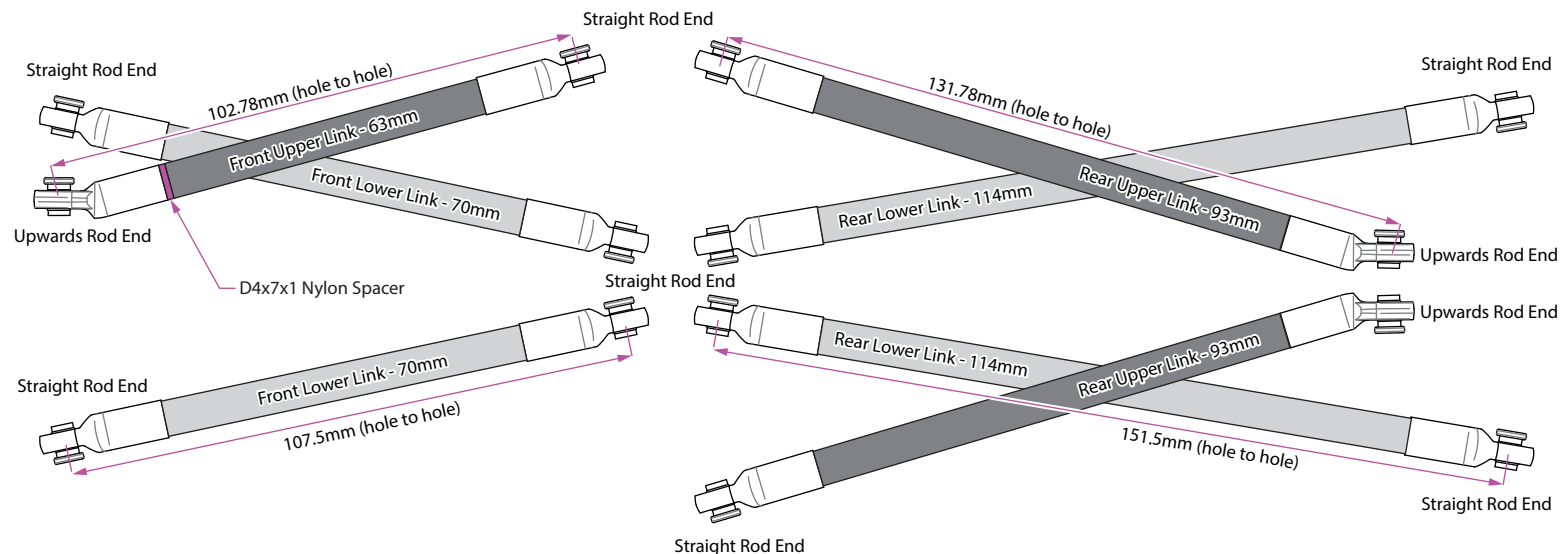

ROD END INSTALLATION

- Install the set screw into the rod end before inserting into the link.
- Repeat 14 times.
- Tip: Use a 2.0 Hex Driver to torque the set screw into the rod end.

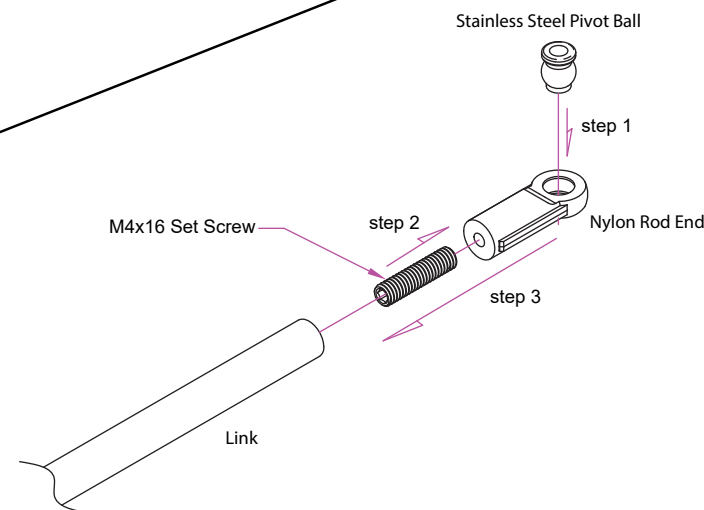


3.1 - UPPER LINKS

3 LINKS / SHOCKS

M3x18 RS x 3


M3 Nuts - Nyloc x 3

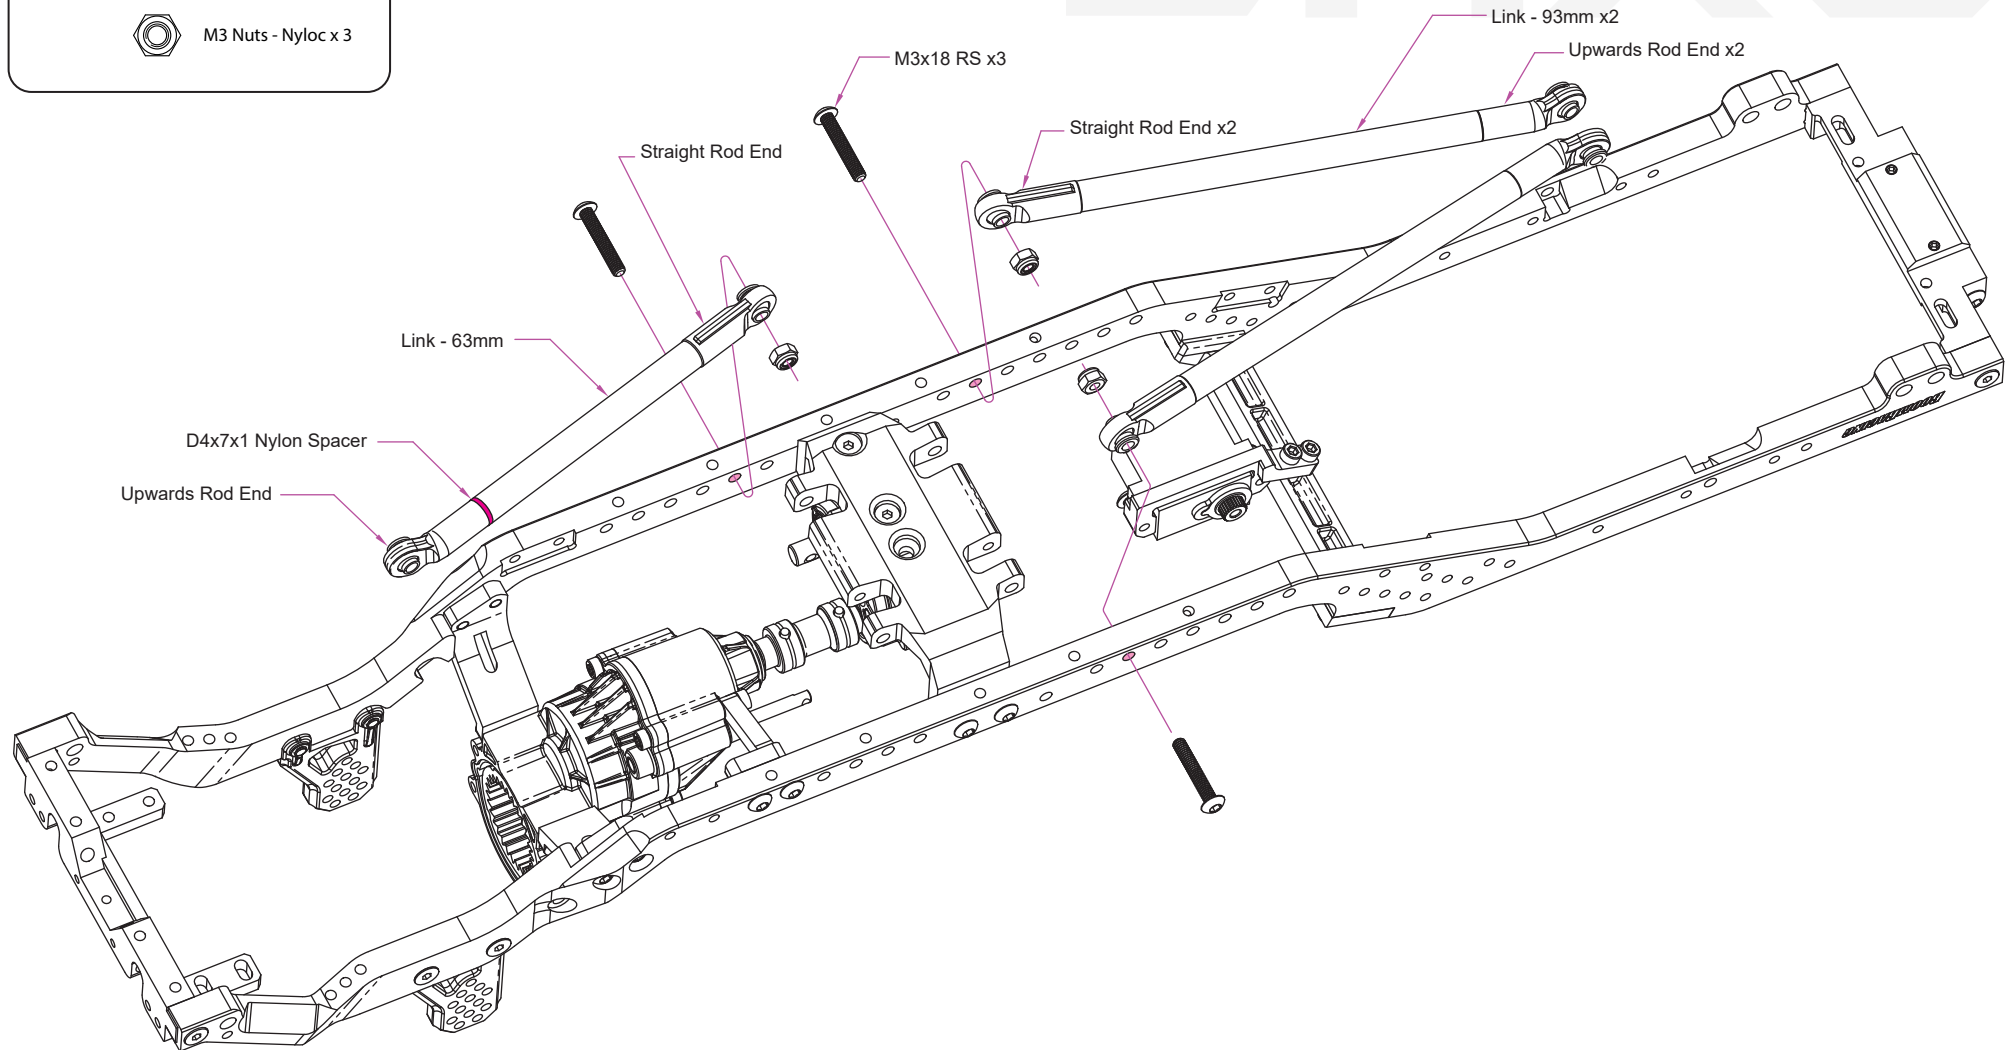

3.2 - LOWER LINKS


1 CHASSIS

M3x16 RS x 4

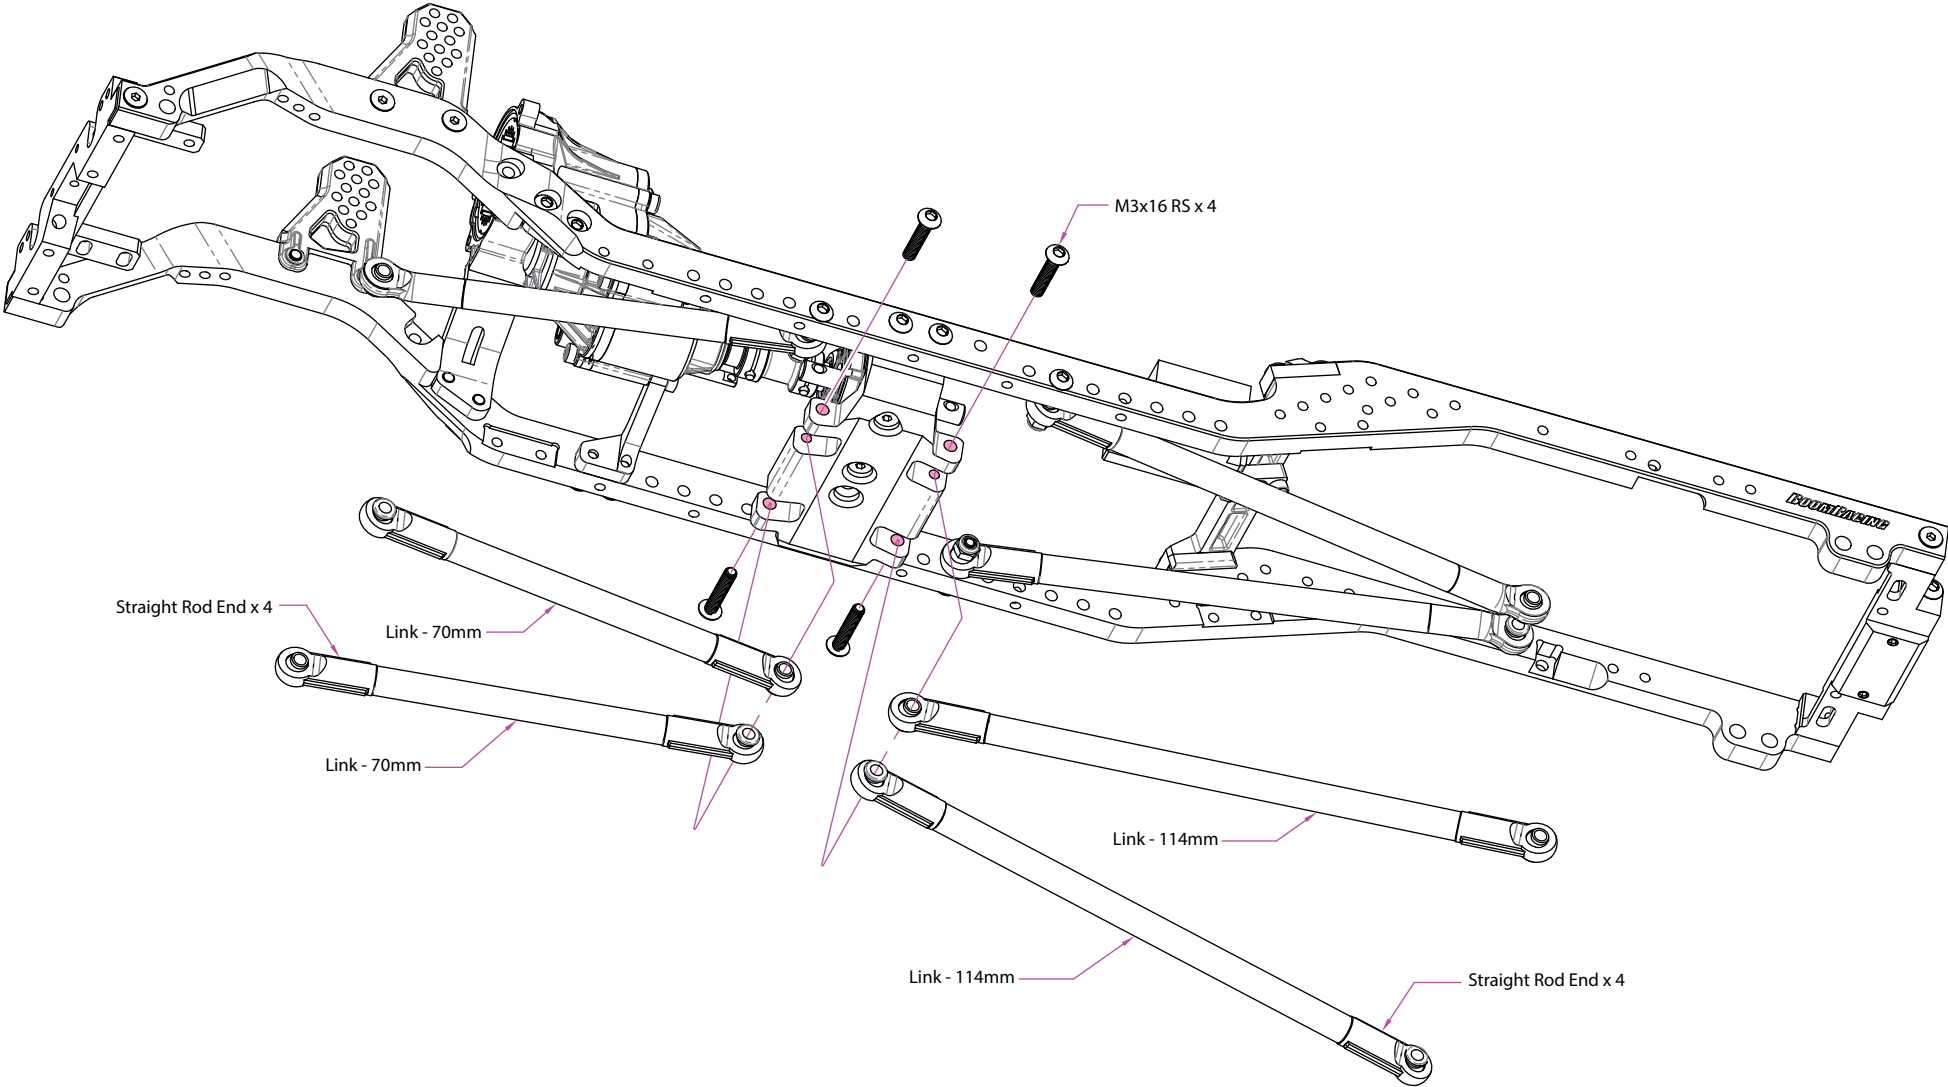

4 - FRONT/REAR AXLE & SHOCKS

Parts Needed:

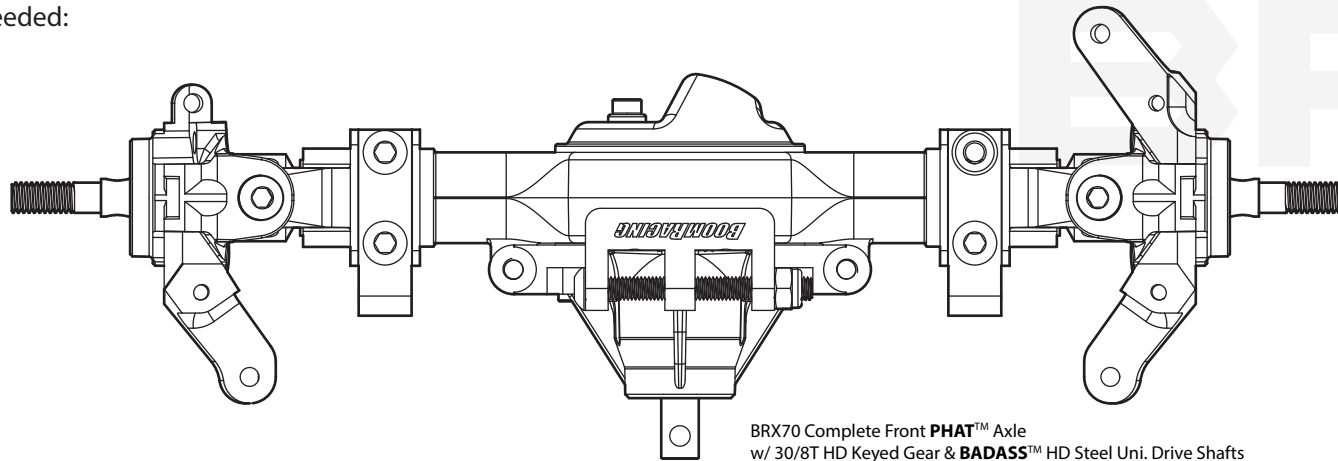

BRX70 Complete Front **PHAT™** Axle
w/ 30/8T HD Keyed Gear & **BADASS™** HD Steel Uni. Drive Shafts
(Exploded Diagram on Page 41)




Tie Rod



Counter Threaded Link - 55mm x 1




80mm Shock x 4

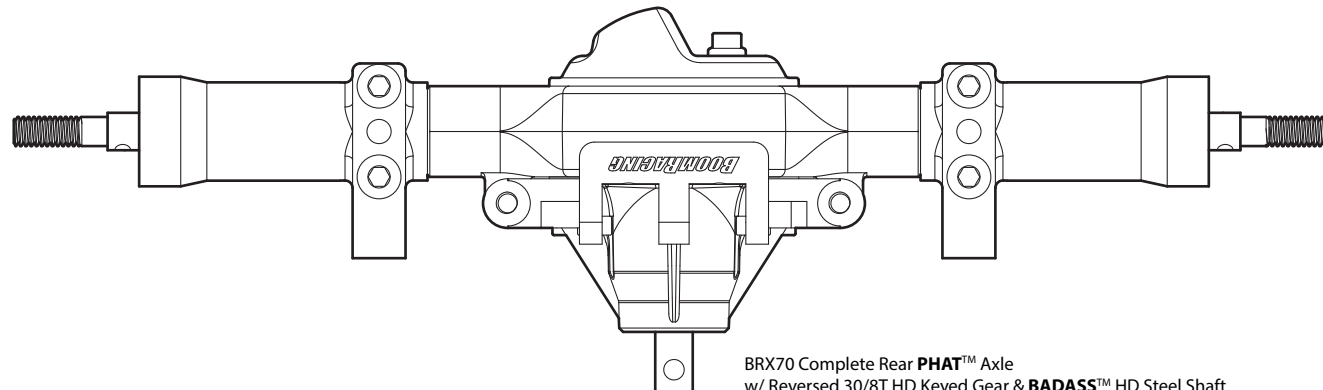


BRX70 Complete Rear **PHAT™** Axle
w/ Reversed 30/8T HD Keyed Gear & **BADASS™** HD Steel Shaft
(Exploded Diagram on Page 42)


10 ROD ENDS



BADASS™
Straight Nylon Rod End x 2



BADASS™
Nylon Rod End (Sideways) x 1



BADASS™
Nylon Rod End (Upwards) x 1




BADASS™
Stainless Steel Pivot Ball x 4

PRE-ASSEMBLED FRONT AXLE

Front Diff Cover Release Method In Case Assembly Is Tight.


PART #BRLC7057 (Front) / #BRLC7058 (Rear)

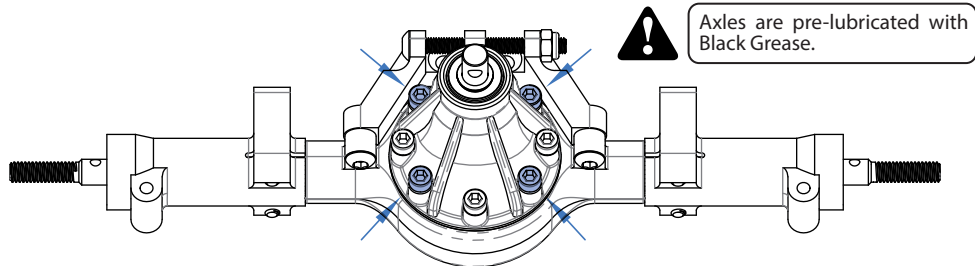

Axles are pre-lubricated with Black Grease.


Step 1 - Loosen four M2.5x16mm socket screws indicated making the screw cap 3 mm apart from the case.

Step 2 - Hammer those screw slightly via screwdriver to release the front diff cover.

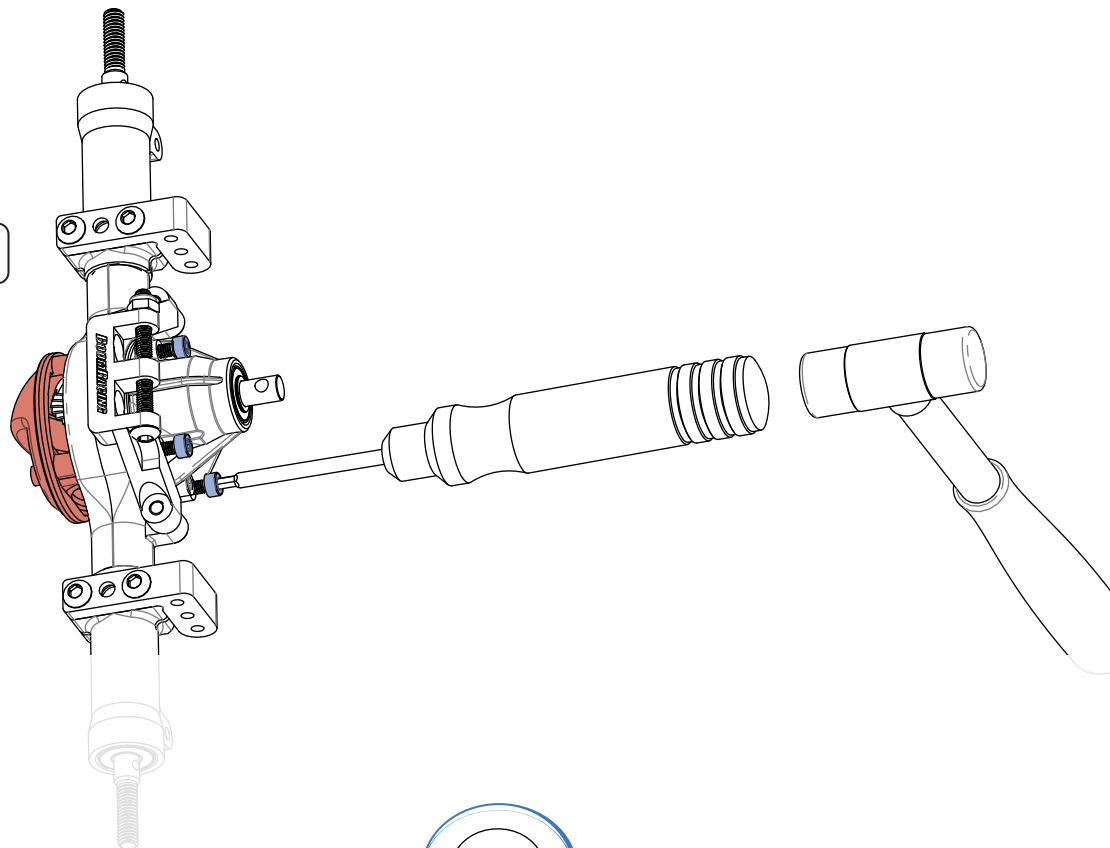

The Third Member Release Method When Assembly Is Tight.


PART #BRLC7057 (Front) / #BRLC7058 (Rear)

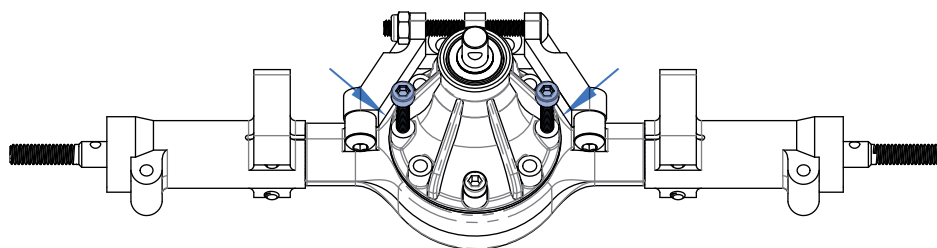

Step 1 - Remove all M2.5x16mm and two M2.5x5mm socket screws


Step 2 - Install two M2.5x16mm socket screws into both left and right screw holes as indicated

Step 3 - Lightly torque the screws until the third member is released

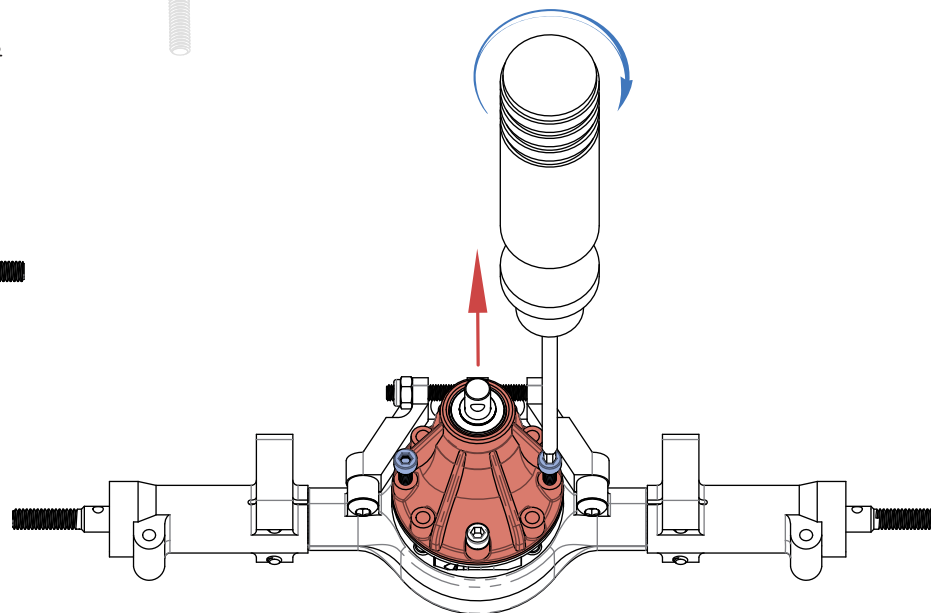

4.1 - FRONT AXLE





3 LINKS / SHOCKS

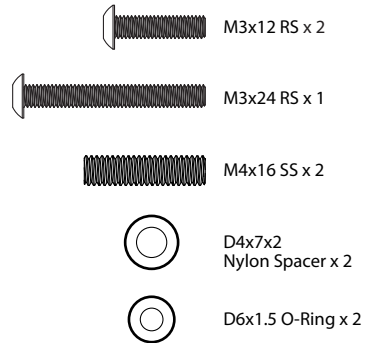


1 CHASSIS



PANHARD ROD

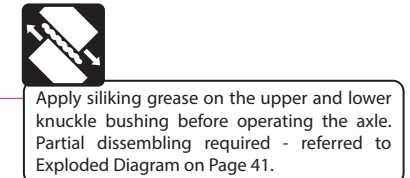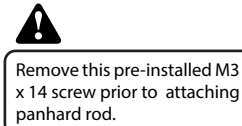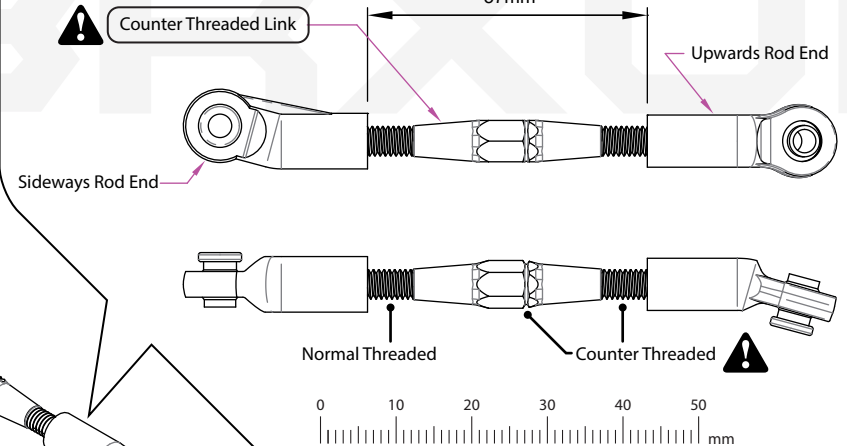

TIE ROD

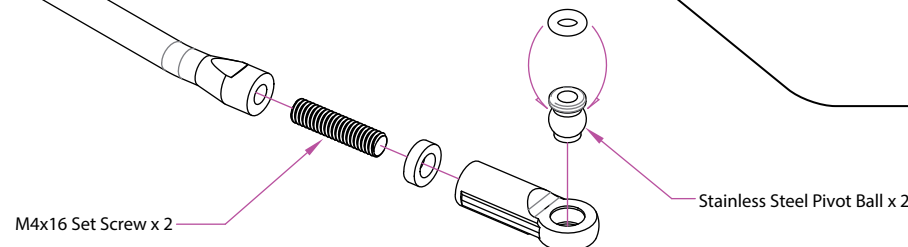

4.2 - FRONT AXLE AND SHOCKS


3 LINKS / SHOCKS

M3x20 CSS x 2M3 Nuts - Nyloc x 2

M3x26 CSS x 23x6x6 Tapper Spacer x 2

SHOCKS SETUP


1



Apply 1/4 to 1/2 full damper oil for stock setup.

Apply Locktite and make sure ball ends are secured tightly on the shaft.

2



Air compression chamber


Slide piston up and down to release trapped air before closing end cap.

3



Adjust the pre-tension ring and/or replace soft springs provided for different rebound setup.

Rebuild Kit for Shocks
#BRLC7052-REBUILD

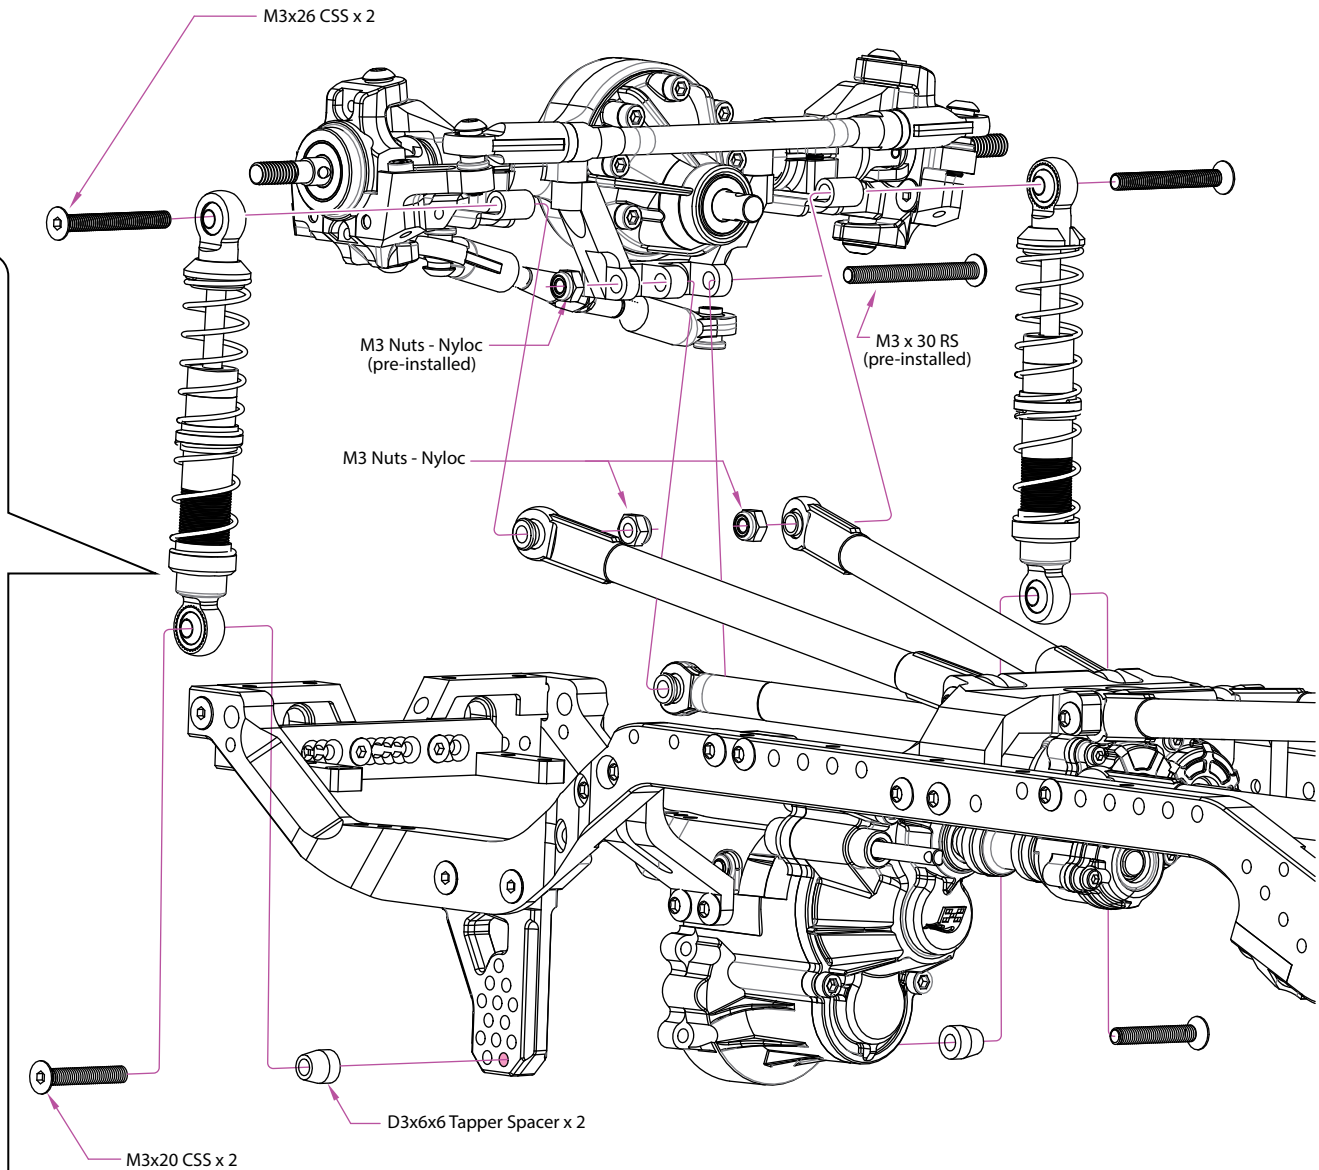


4.3 - PANHARD

1 CHASSIS


M3x16 RS x 1

3x6x3
Tapper Spacer x 1

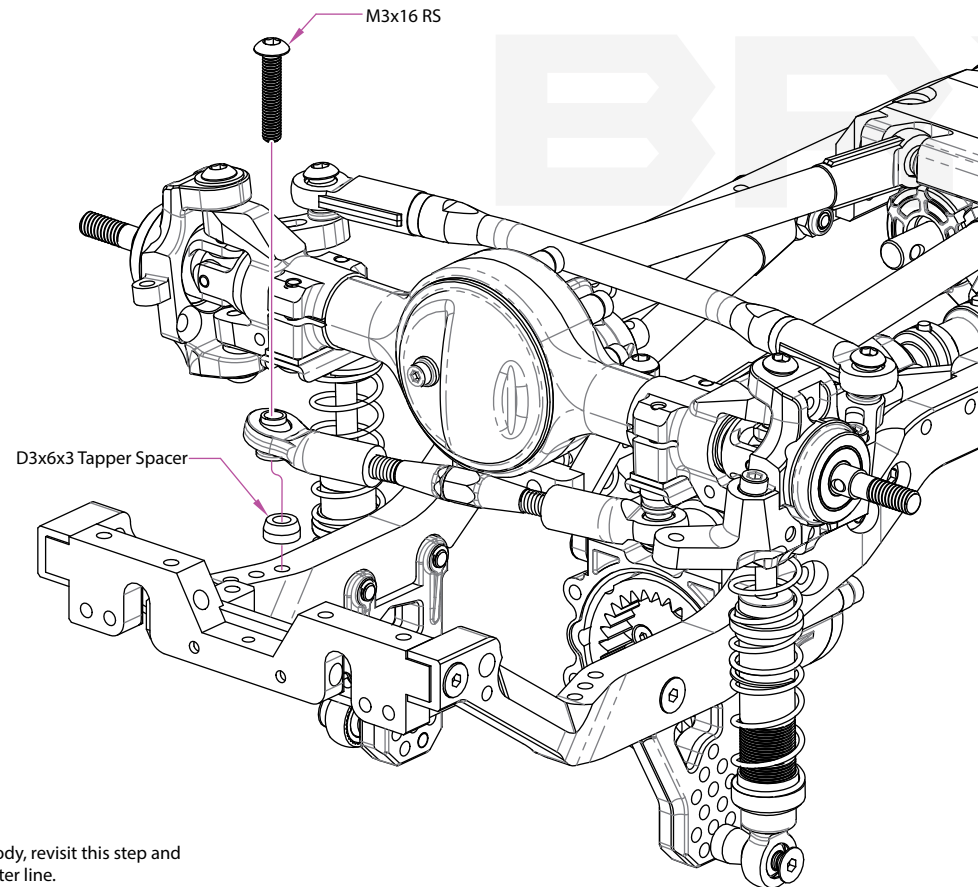

FRONT AXLE ALIGNMENT

After all components are installed, including electronics, battery and body, revisit this step and fine tune panhard bar length so that the front axle is aligned at the center line.

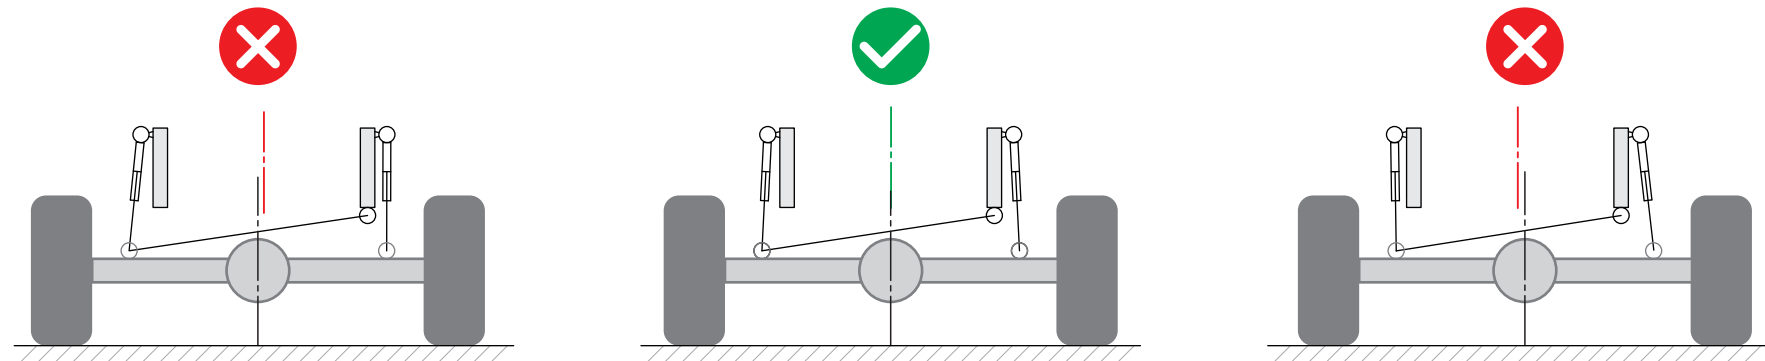

4.4 - REAR AXLE & SHOCKS

3

LINKS / SHOCKS




M3x22 CSS x 2



M3x20 CSS x 2




3x6x5
Tapper Spacer x 2

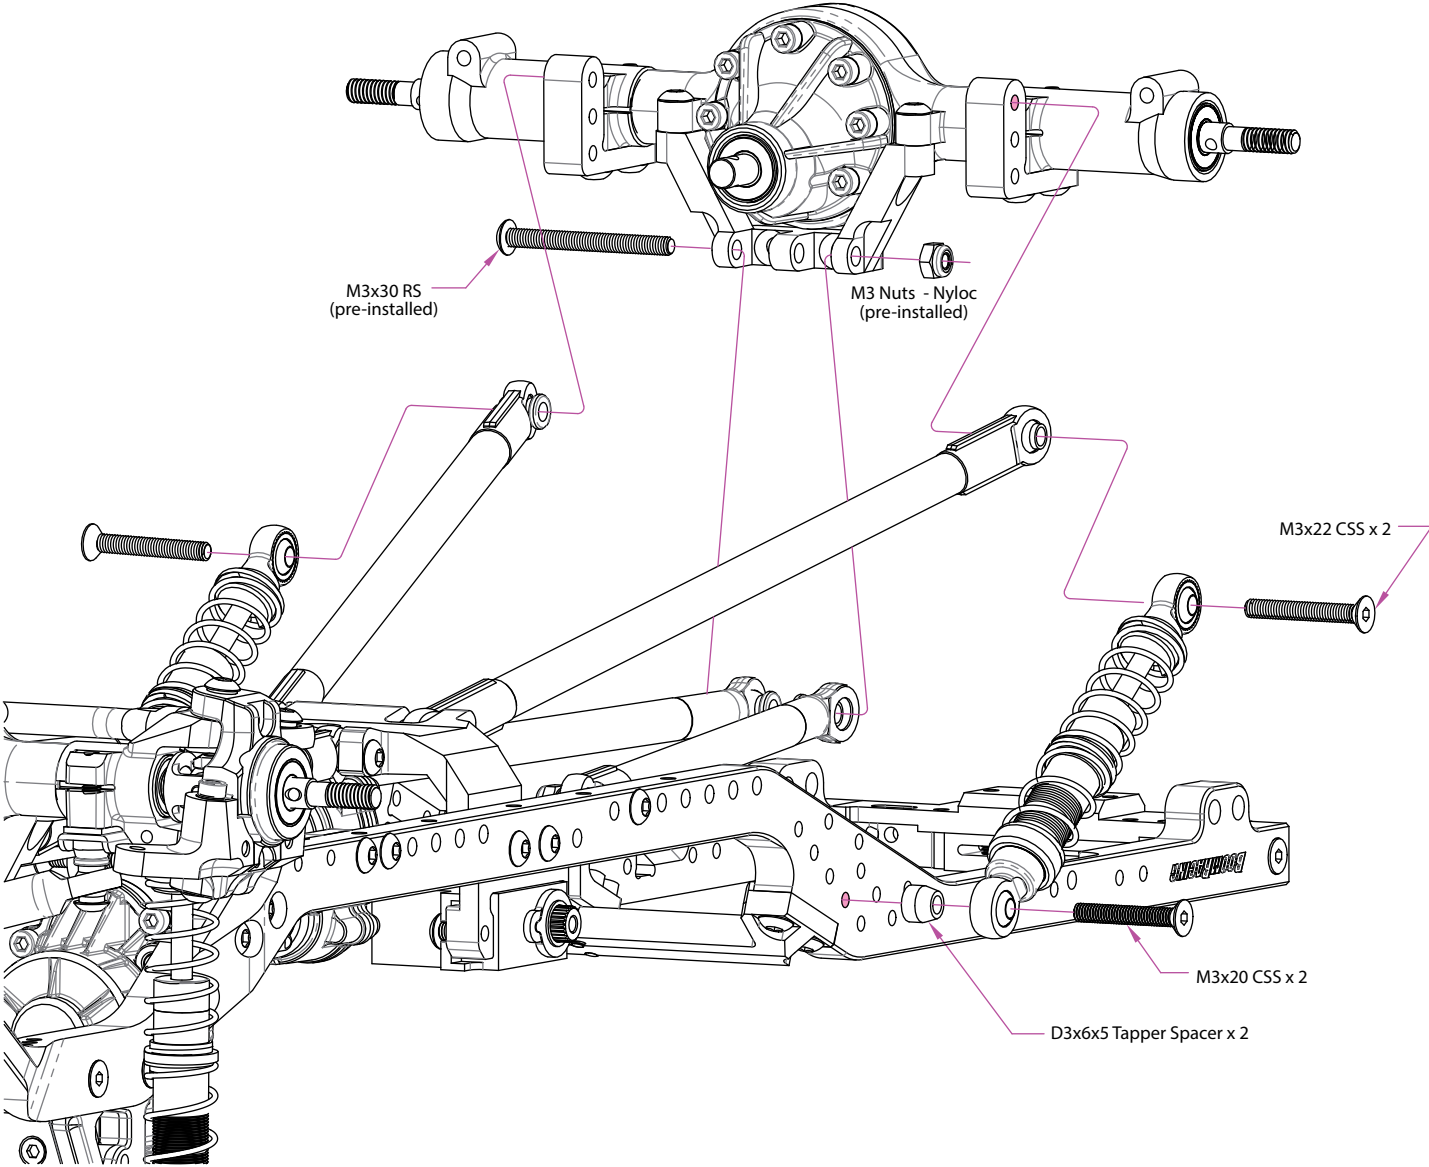

5 - DRIVE SHAFTS

Parts Needed:



Front Drive Shaft x 1



M3/2.5x12 Set Screw x 4




D5x7x2.5 Spacer x 4


2 GEARBOX / TRANSFER CASE



D8x1.5 O-Ring x 2




Rear Drive Shaft x 1

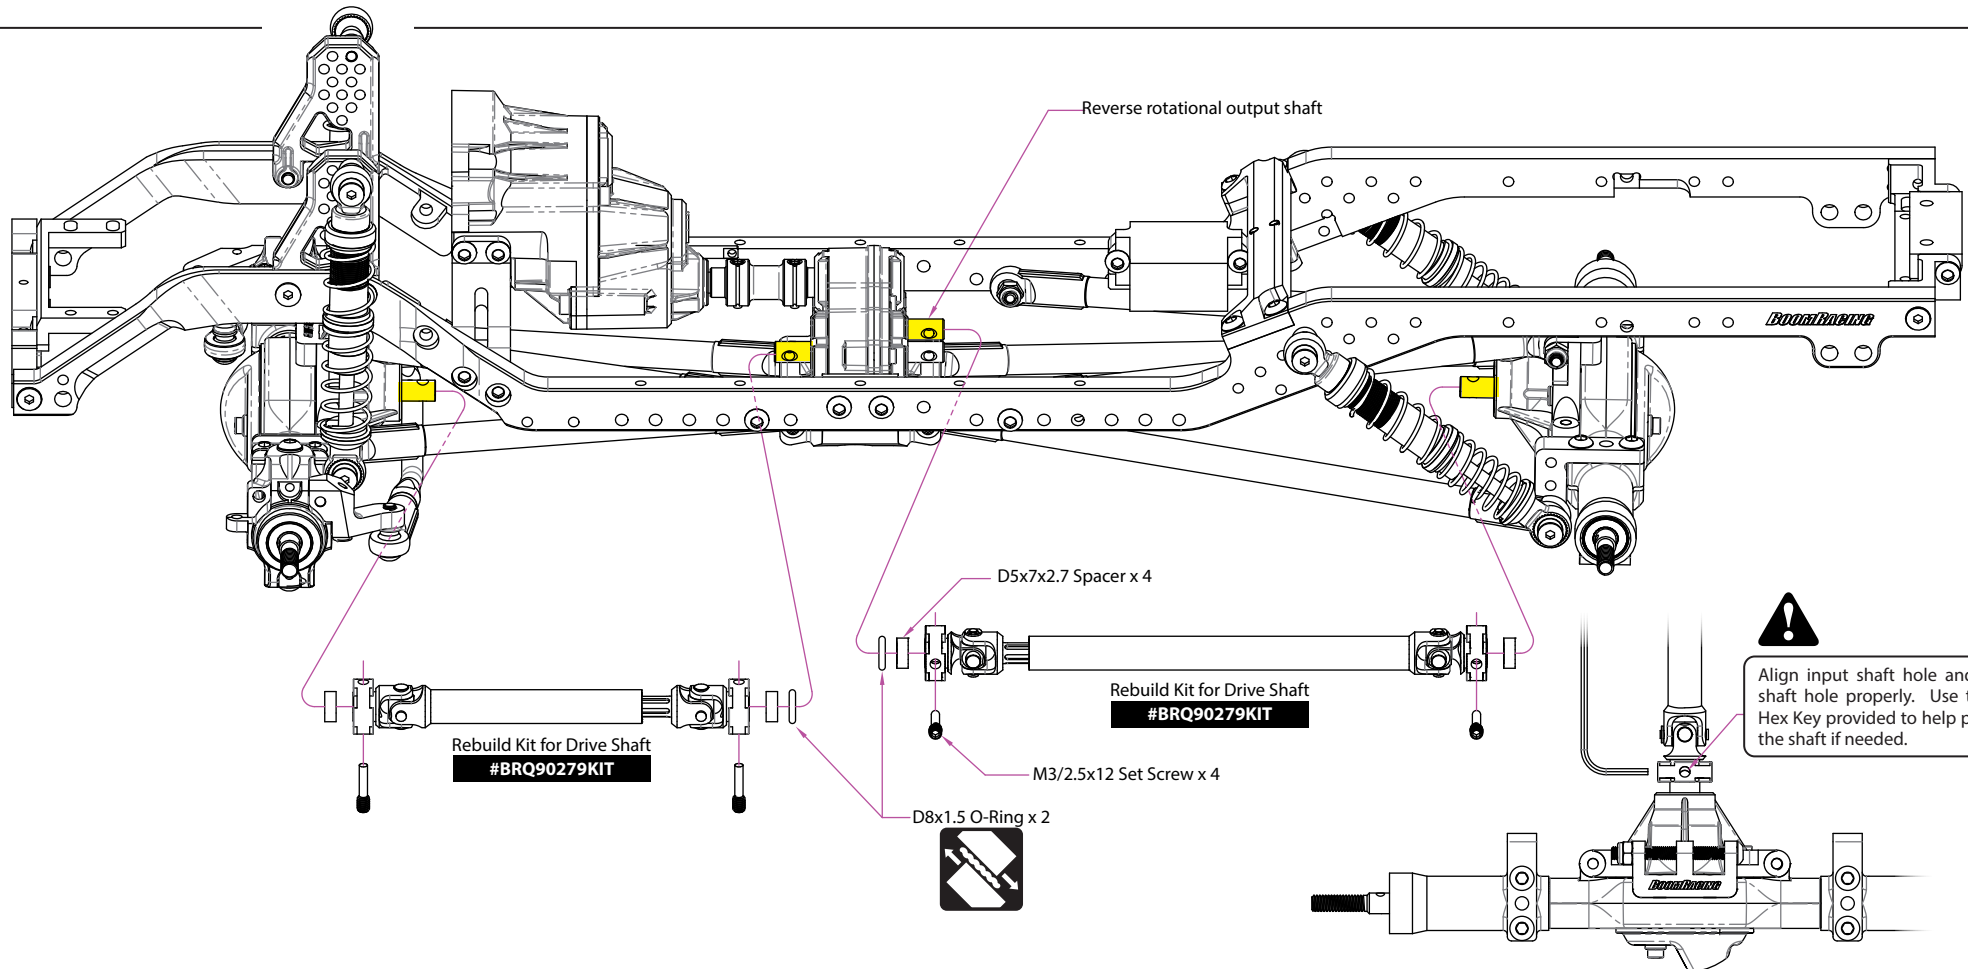

6 - STEERING SERVO

Parts Needed:

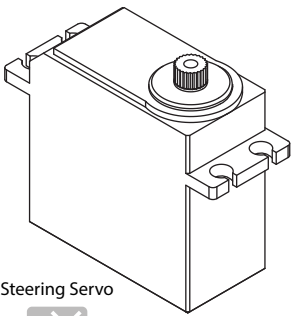

Steering Servo




4 SERVOS

M3 x 8 RS x 2

M3 x 12 RS x 2

Nuts M3 - Nyloc x 2

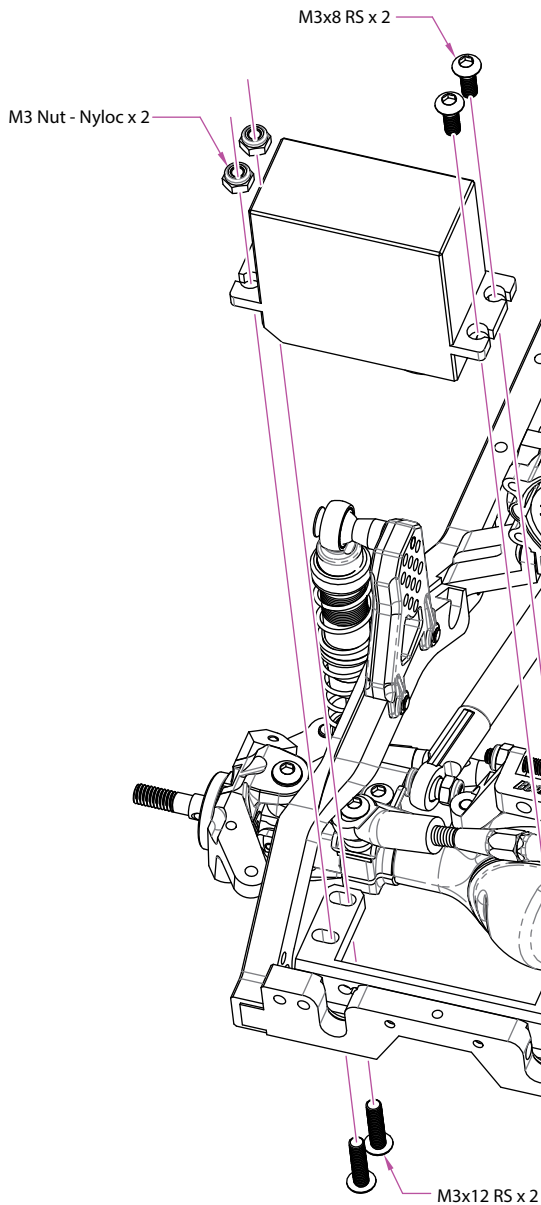

7 - STEERING ROD

Parts Needed:



Counter Threaded Link - 55mm x 1

3 LINKS / SHOCKS



M3x12 RS x 2

4 SERVOS



M3x6 RS x 1

9 ACCESSORIES



Servo Horn B - 25T



M2x8 SC x 2

10 ROD ENDS





Nylon Rod End (Upwards) x 2



Stainless Steel Pivot Ball x 2

DRAG LINK

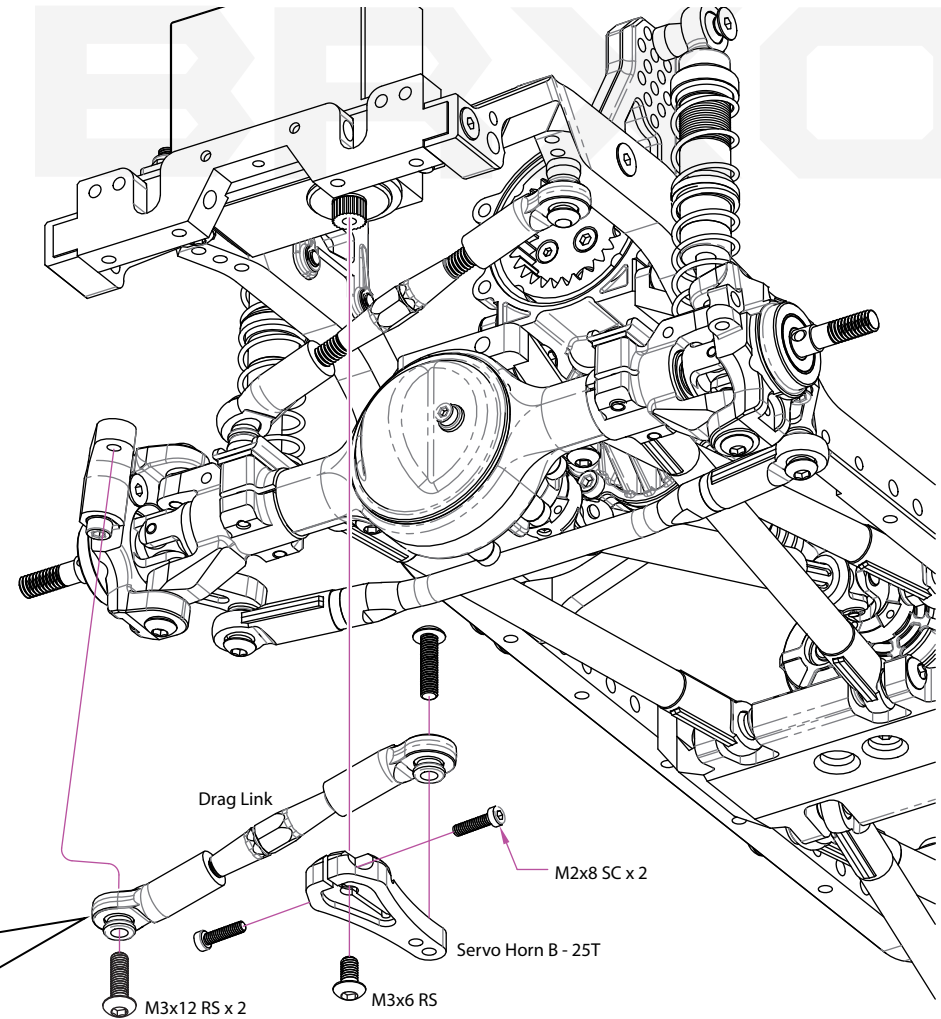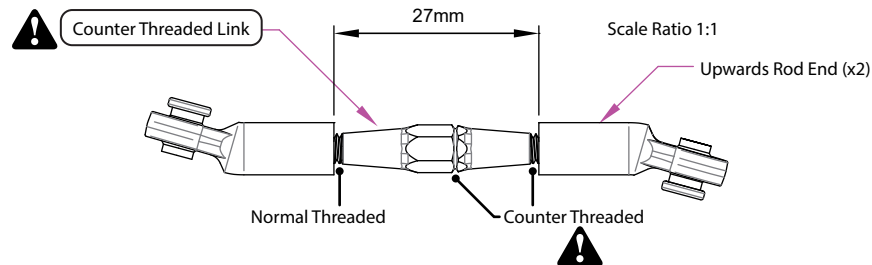


SETTING UP THE STEERING SERVO

1. Temporarily connect electronics to begin.
2. Plug the steering servo into channel 1 and turn on electronics making sure all trims are set to zero.
3. Attach the servo horn to the drag link.
4. Find the center steering position and then attach the servo horn onto the servo (if needed turn the drag link to fine tune to the center position).
5. Make sure EPA (End Point Adjustment) is adjusted to the correct throw distance to avoid servo from over straining and cause overheating.

* Note: Failure to setup the EPA properly may cause the steering servo to get damaged and fail.

8 - GEAR SHIFTER

Parts Needed:

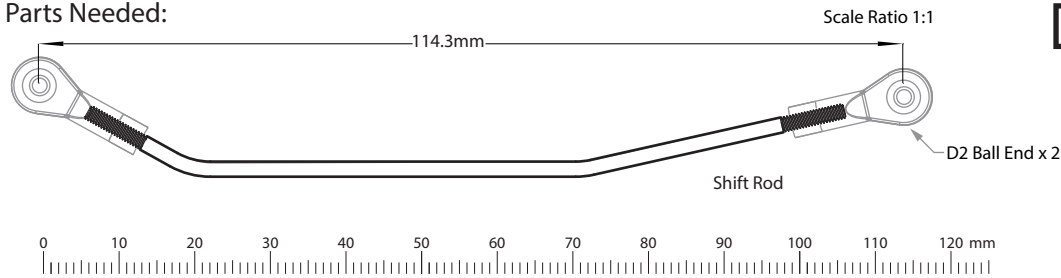


SETTING UP THE SHIFT SERVO

WARNING: Running 7.4V through the shift servo will cause failure. Follow the steps:

1. Temporarily connected electronics to begin.
2. Plug in JX mini servo into channel 3 and turn on your radio (make sure it is set up as a two-position switch).
3. Pull the Shift Shaft to extend it all the way out from the gearbox to engage the first gear and attach the assembled Shift Rod onto the Shift Shaft.
4. Attach the other side of the shift rod to the servo horn.
5. Install the servo horn onto the servo in the first position, making sure it rotates anti-clockwise to second position (refer to diagram).
6. Make sure EPA (End Point Adjustment) is adjusted to the correct throw distance to avoid servo from over straining and cause overheating.

* Note: Failure to setup the shift servo properly may cause the shift servo to malfunction or not shift into gear properly.



4 SERVOS

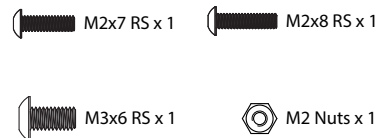

9 ACCESSORIES




10 ROD ENDS

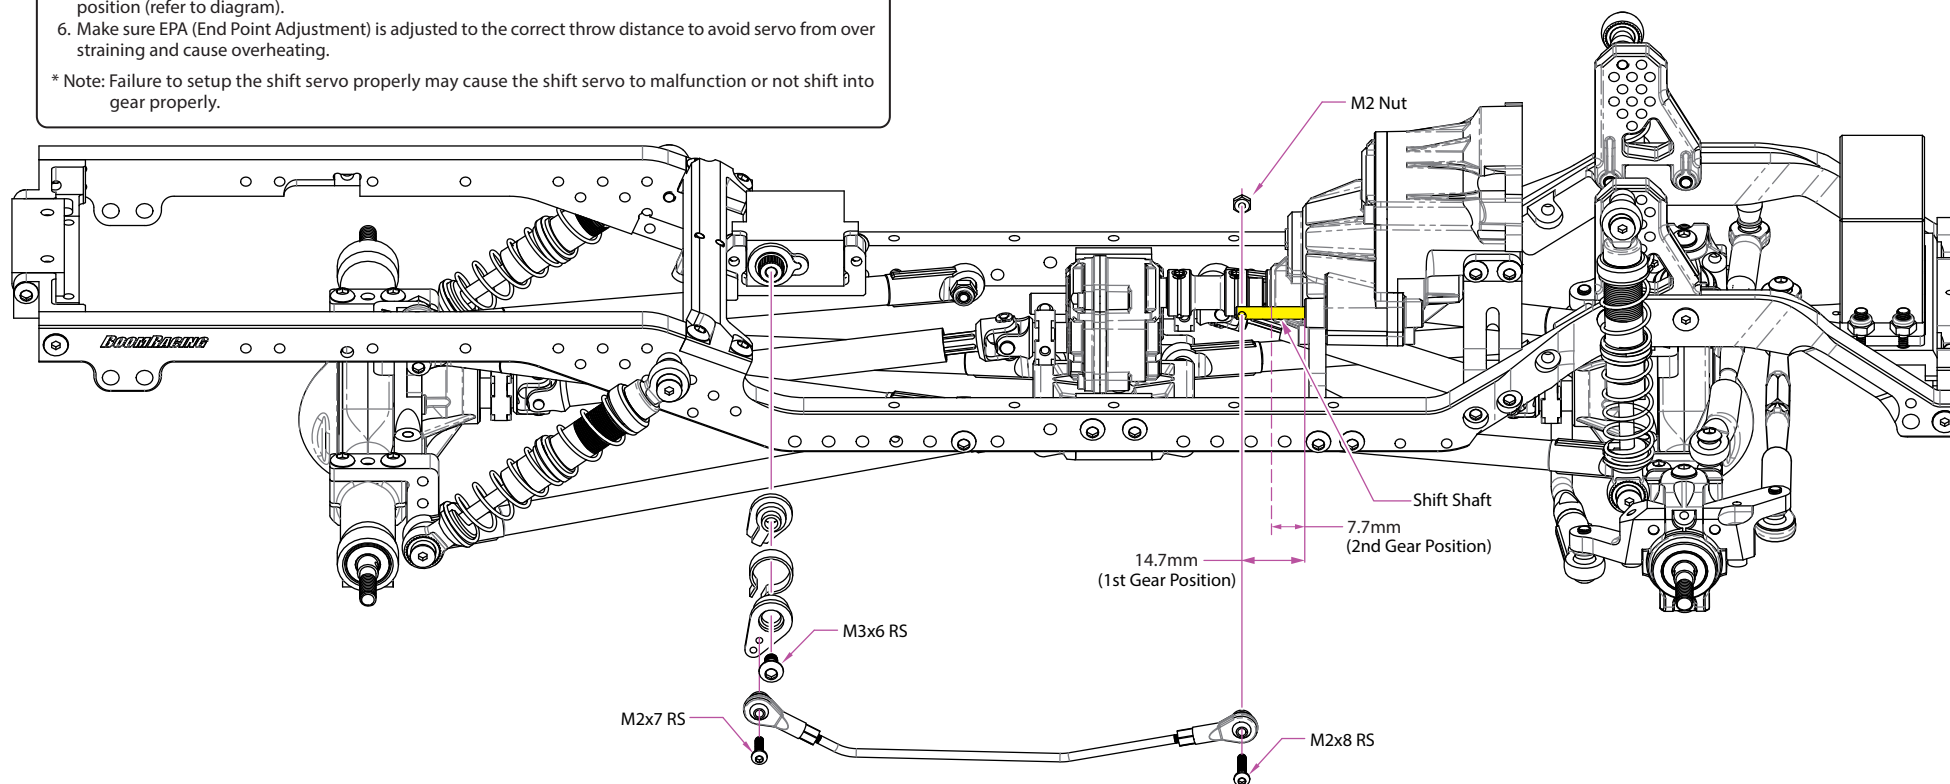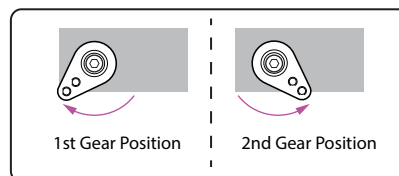


9 - MOTOR

Parts Needed:

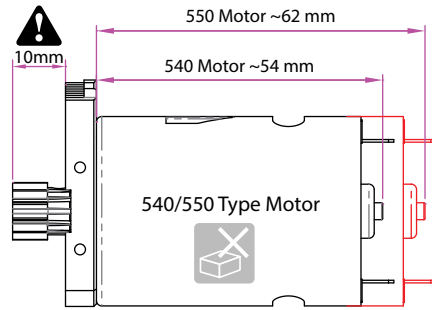


540/550 type motors can be used on BRX01.

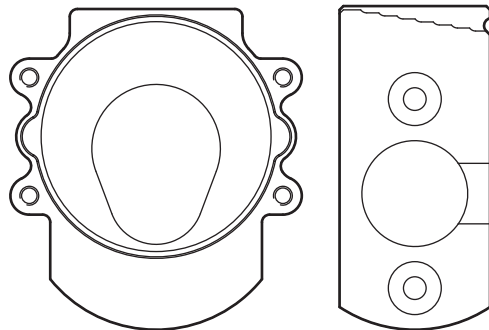

Gearbox Adapter

Motor Mount

2 GEARBOX / TRANSFER CASE

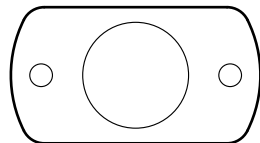

Motor Spacer




M3x8 SC x 2



M2.5x8 SC x 8


9 ACCESSORIES



12T 32P Pinion Gear




Use the corresponding number of the pinion gear tooth on the Motor Mount to get the best gear mesh. Adjust the Motor Mount up and down until both surface indicators are leveled (align at index 12 for the 12T pinion gear supplied as pictured).

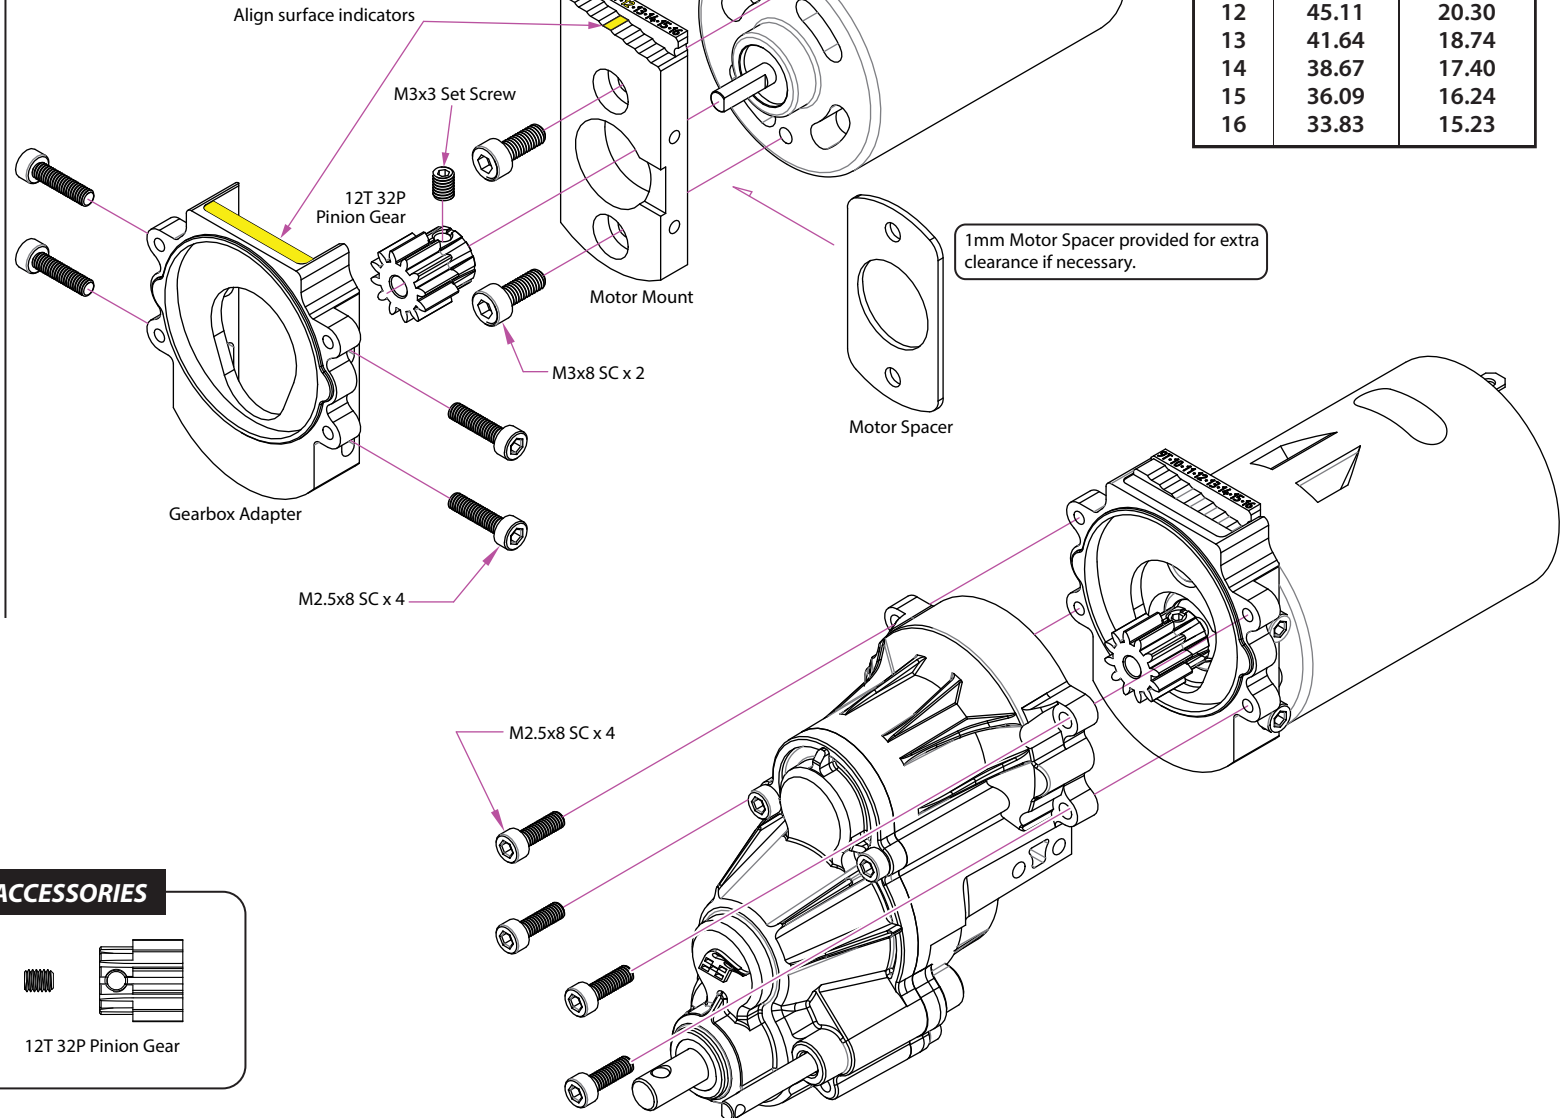


Pinion Gear	Final Drive Ratio	
	Spur Gear (28T)	
	1st Gear	2nd Gear
9	60.15	27.07
10	54.13	24.36
11	49.21	22.15
12	45.11	20.30
13	41.64	18.74
14	38.67	17.40
15	36.09	16.24
16	33.83	15.23

10 - ACCESSORIES

Parts Needed:

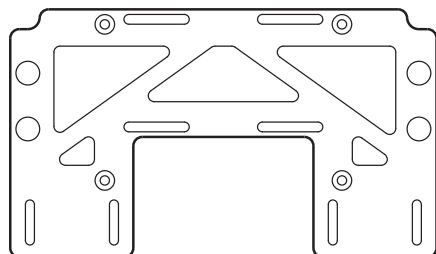

Battery & Electronics Mount Plate

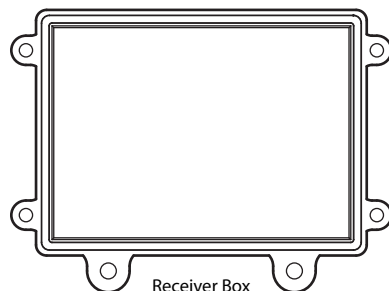

Receiver Box




Battery Strap x 2

1 CHASSIS

M3x18 CSS x 4

M3x10 RS x 2

3x6x5
Tapper Spacer x 4

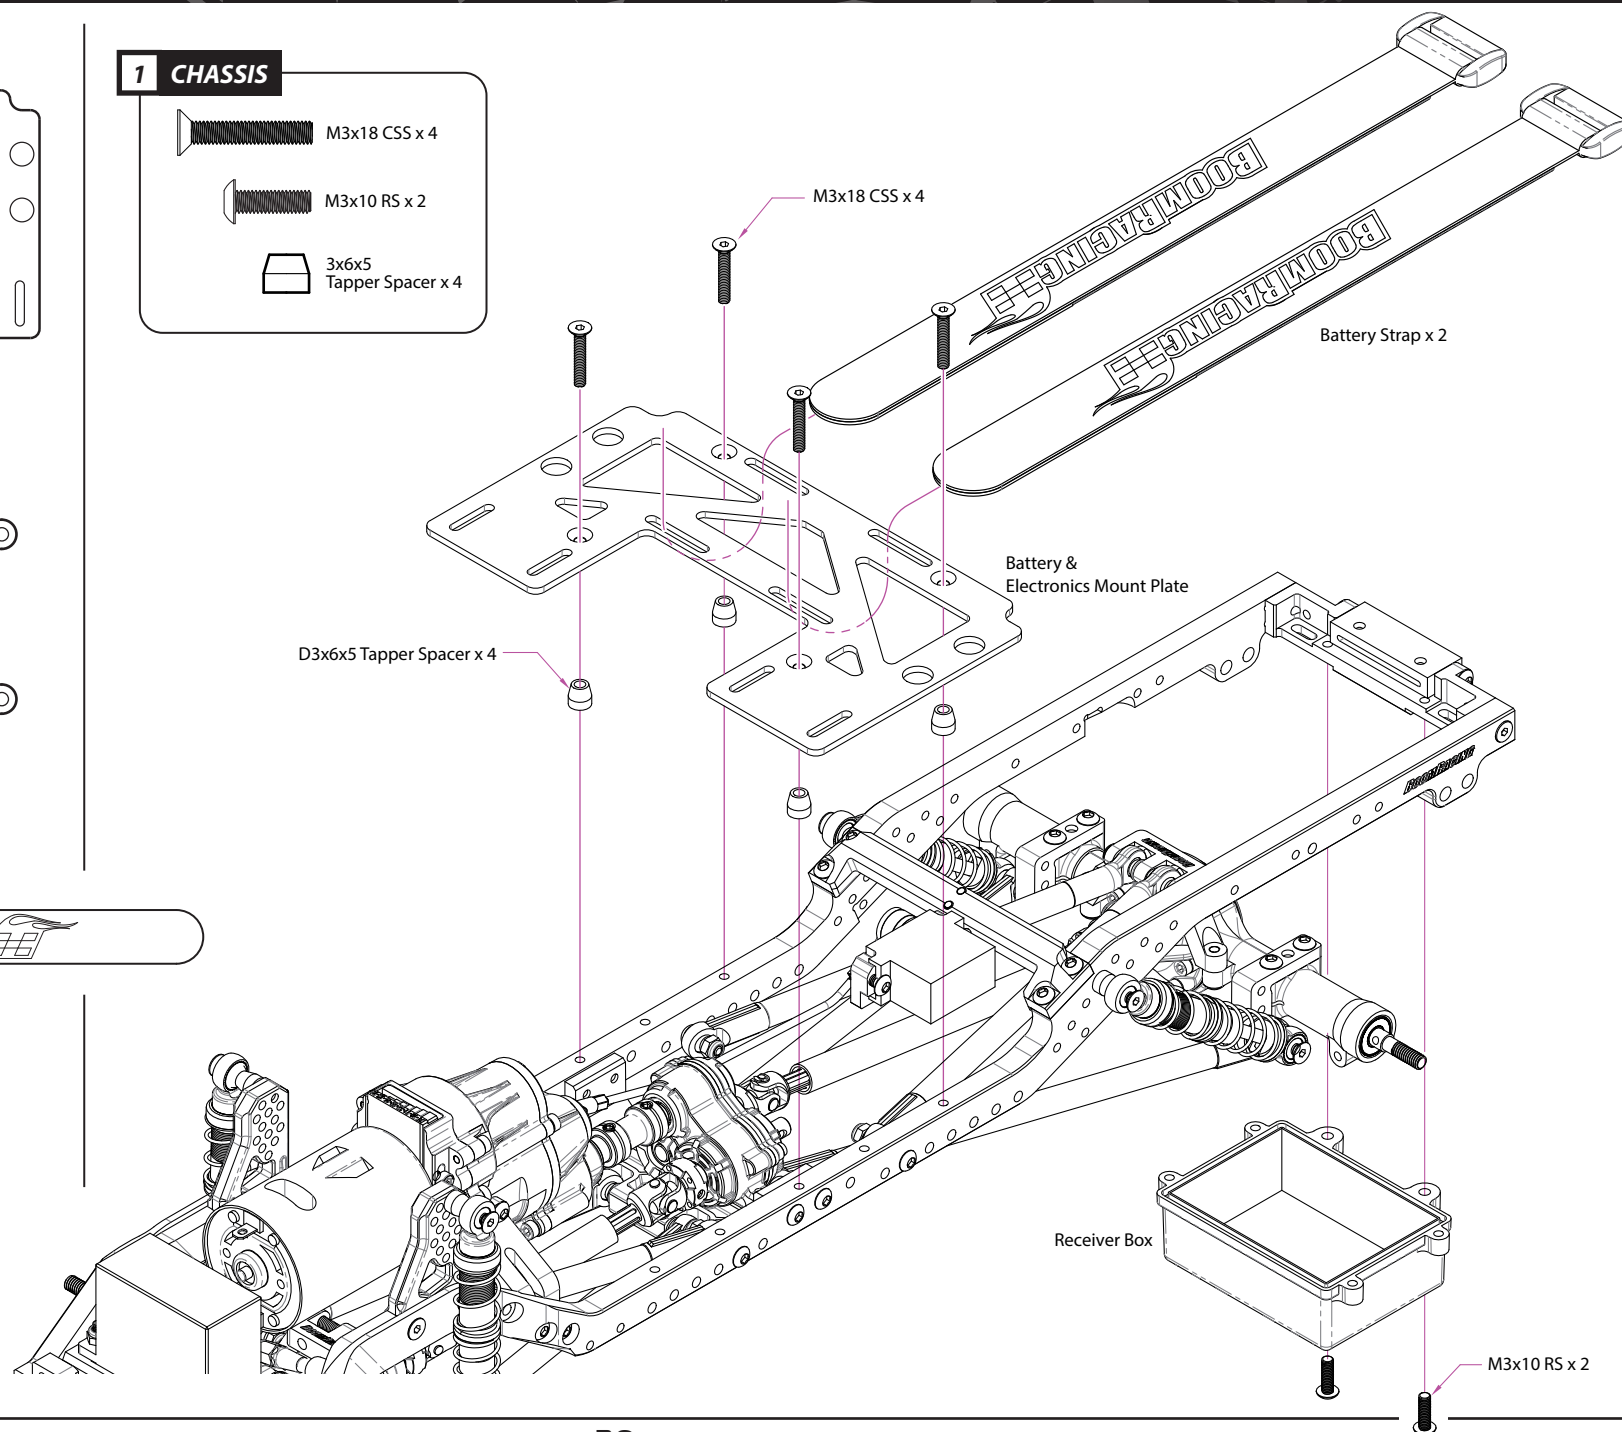


11 - ELECTRONICS INSTALLATION

7 BODY MOUNTS




Install these two screws halfway.
They are used to secure the body.

M4x12 SC x 2

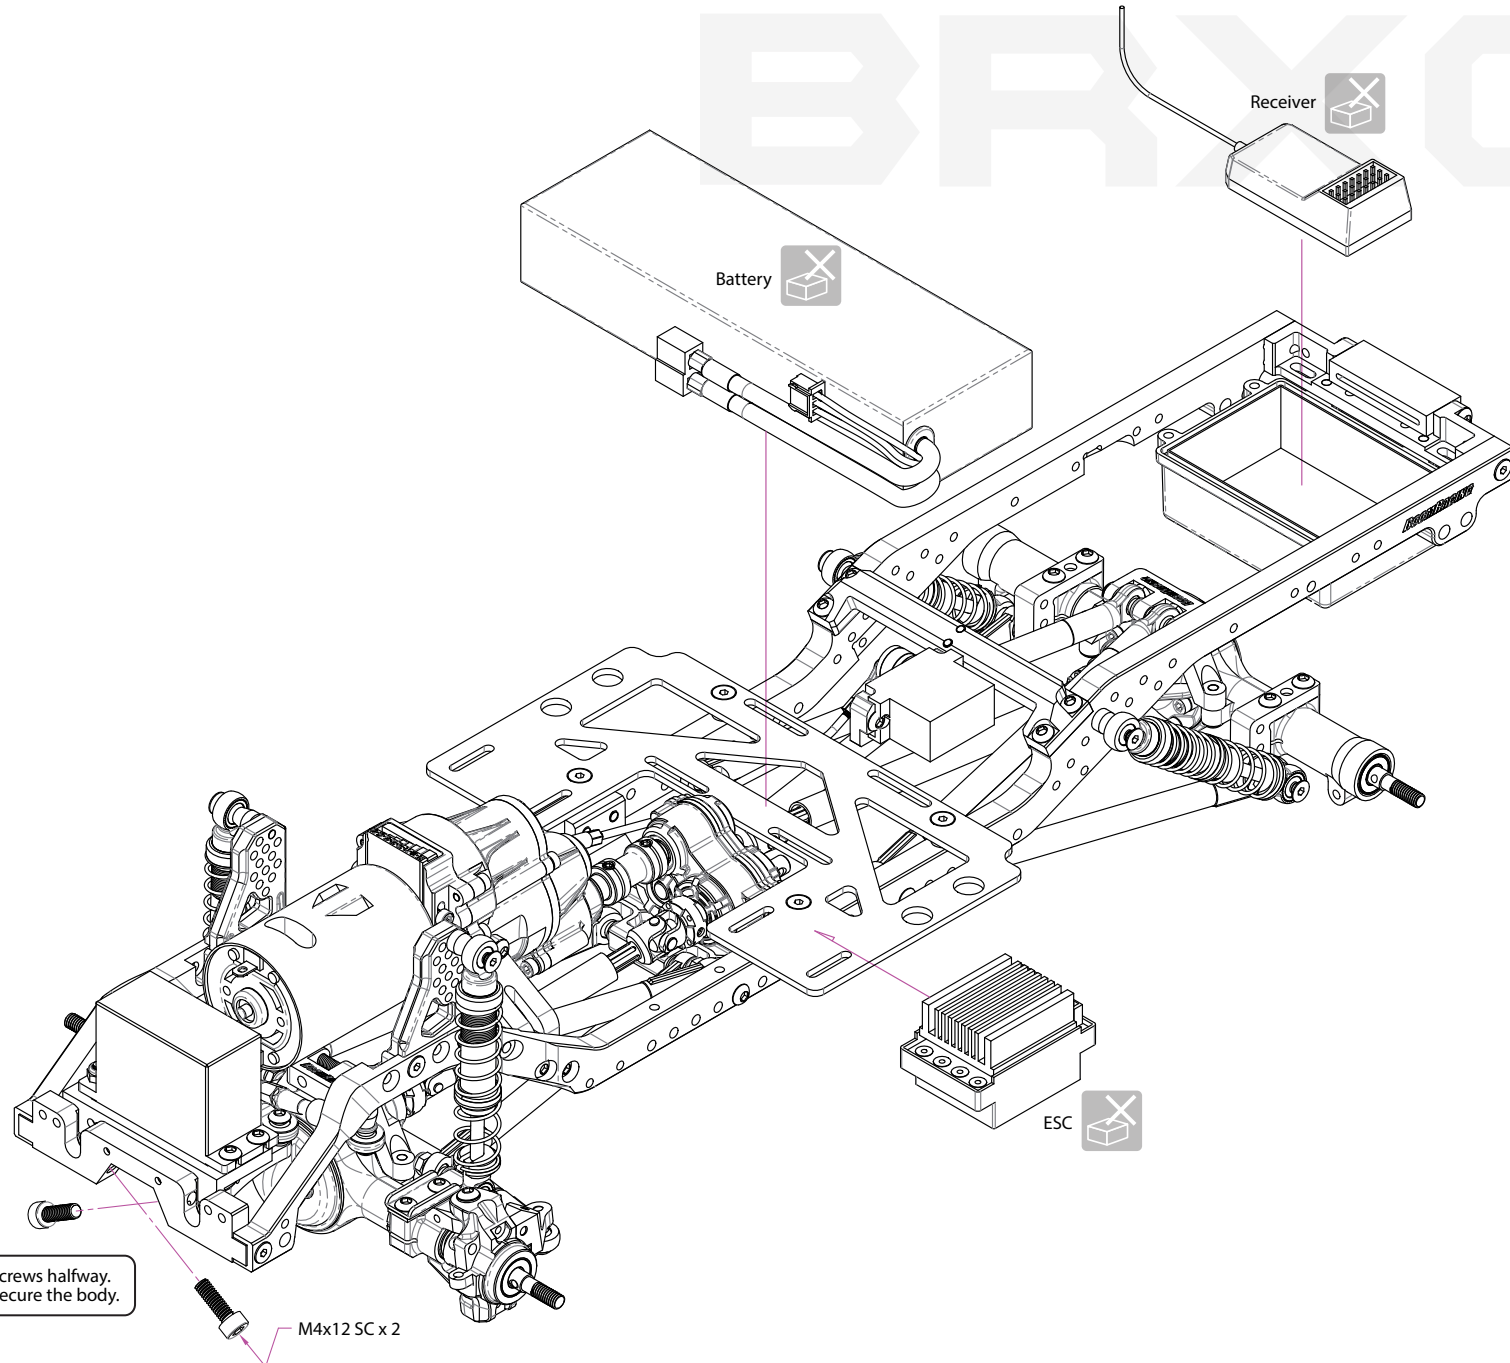

12 - RECEIVER BOX WIRING & SEALING


Parts Needed:

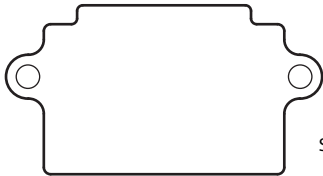


Stainless Steel Sealing Cap




Silicone Port

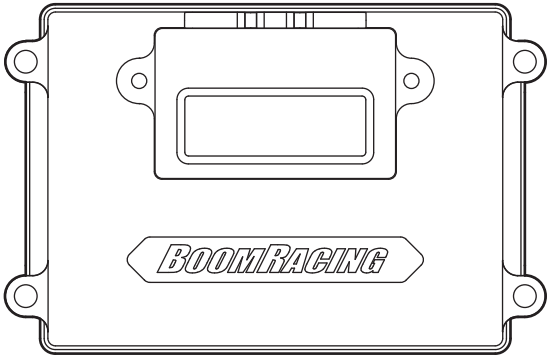

Receiver Box Lid

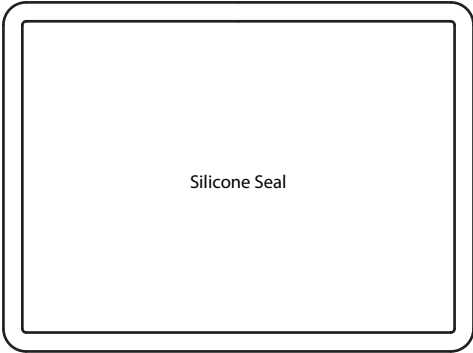

Silicone Seal

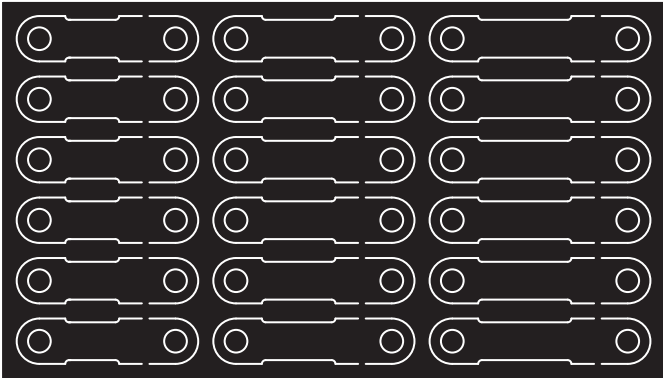

Tying diameter Ø3.3mm
holds 2 servo cables

Tying diameter Ø4.1mm
holds 3 servo cables

Tying diameter Ø4.9mm
holds 4 servo cables or
1 pair 14 gauge power cable

Cable Wiring Retainer
18 pieces / Use M2.5 or M3 Round Head Bolts

6 RECEIVER BOX
 M3x8 RS x 4

 M2.5x6 RS x 2



Apply Siliking Grease around and into the silicone sealing to create an airtight seal.

CABLE WIRING RETAINER

Step 1
Select appropriate retainer length.




Step 2
Install with screws.

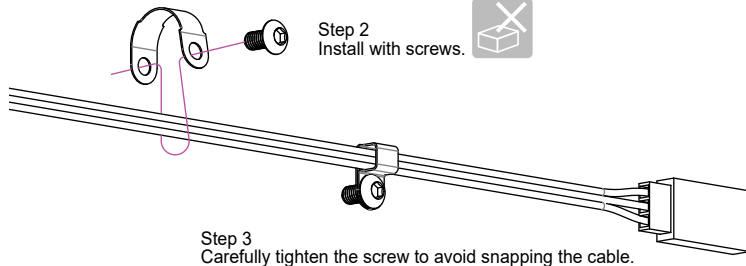


Step 3
Carefully tighten the screw to avoid snapping the cable.

ESC
Gear Shifting Servo
Steering Servo

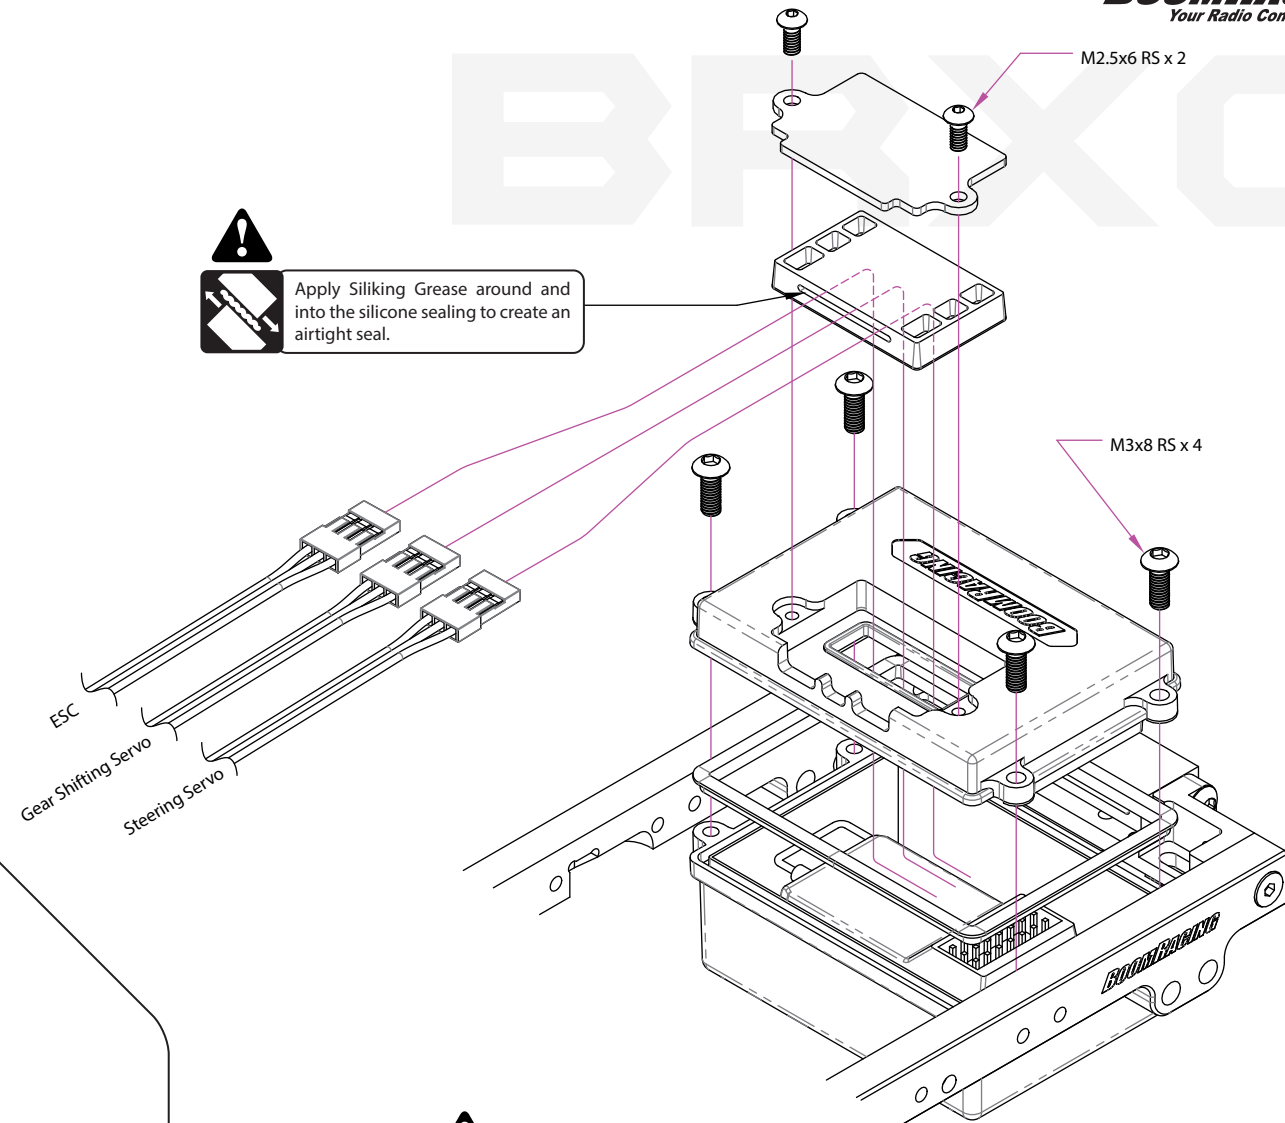


To fully waterproof the receiver box, apply a generous amount of Siliking Grease into and around the two silicone sealings to create an airtight seal.

The BRX01 is designed to go anywhere. This includes being fully submerged under water. To protect electronics from water damage, all electronics must be fully waterproofed. It is your responsibility to fully waterproof all electronics before driving in wet conditions.

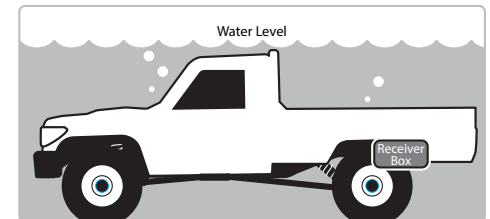


13 - WHEELS & TIRES


Parts Needed:

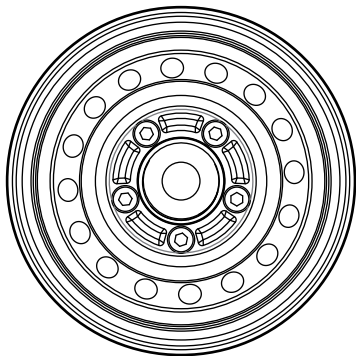

Steelie Wheels x 4

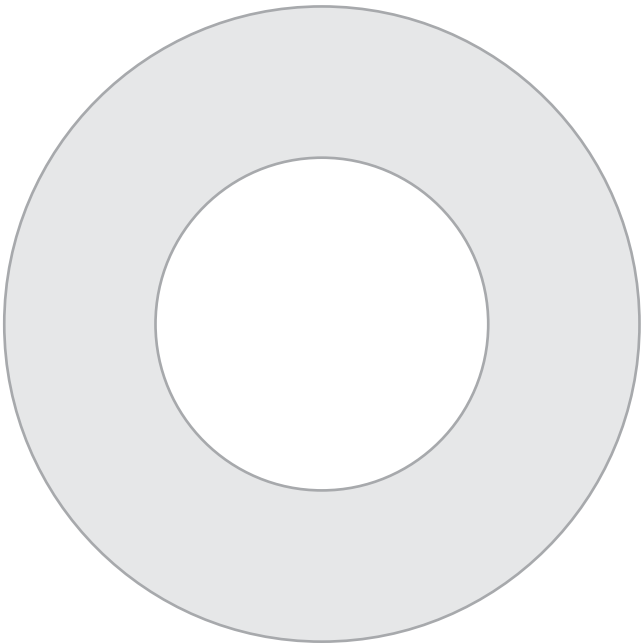

1.55 Single Stage Open Cell Foam Insert 84x23mm
for 1.55 SP ROAD TRACKER™ Crawler Tire x 4
#BRTR35501

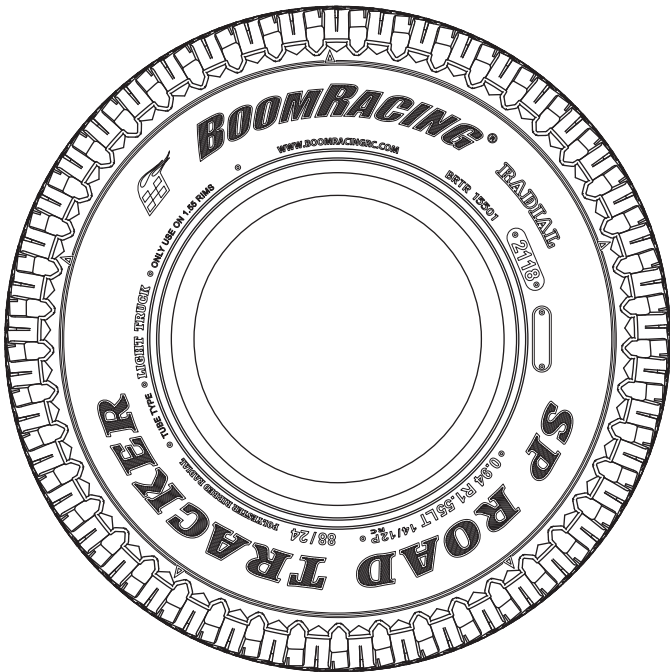

1.55 SP ROAD TRACKER™ Crawler Tire GEKKO Compound
3.46x0.94 Inch (88x24mm) x 4




Center Hubs Cab (Front) x 2
BRW780909/COVERF



Center Hubs Cab (Rear) x 2
BRW780909/COVERR

8 WHEELS



Hex Adapter x 4




M3x3 SS x 4



M4 Nuts - Nyloc x 4




2x10mm Pin x 4

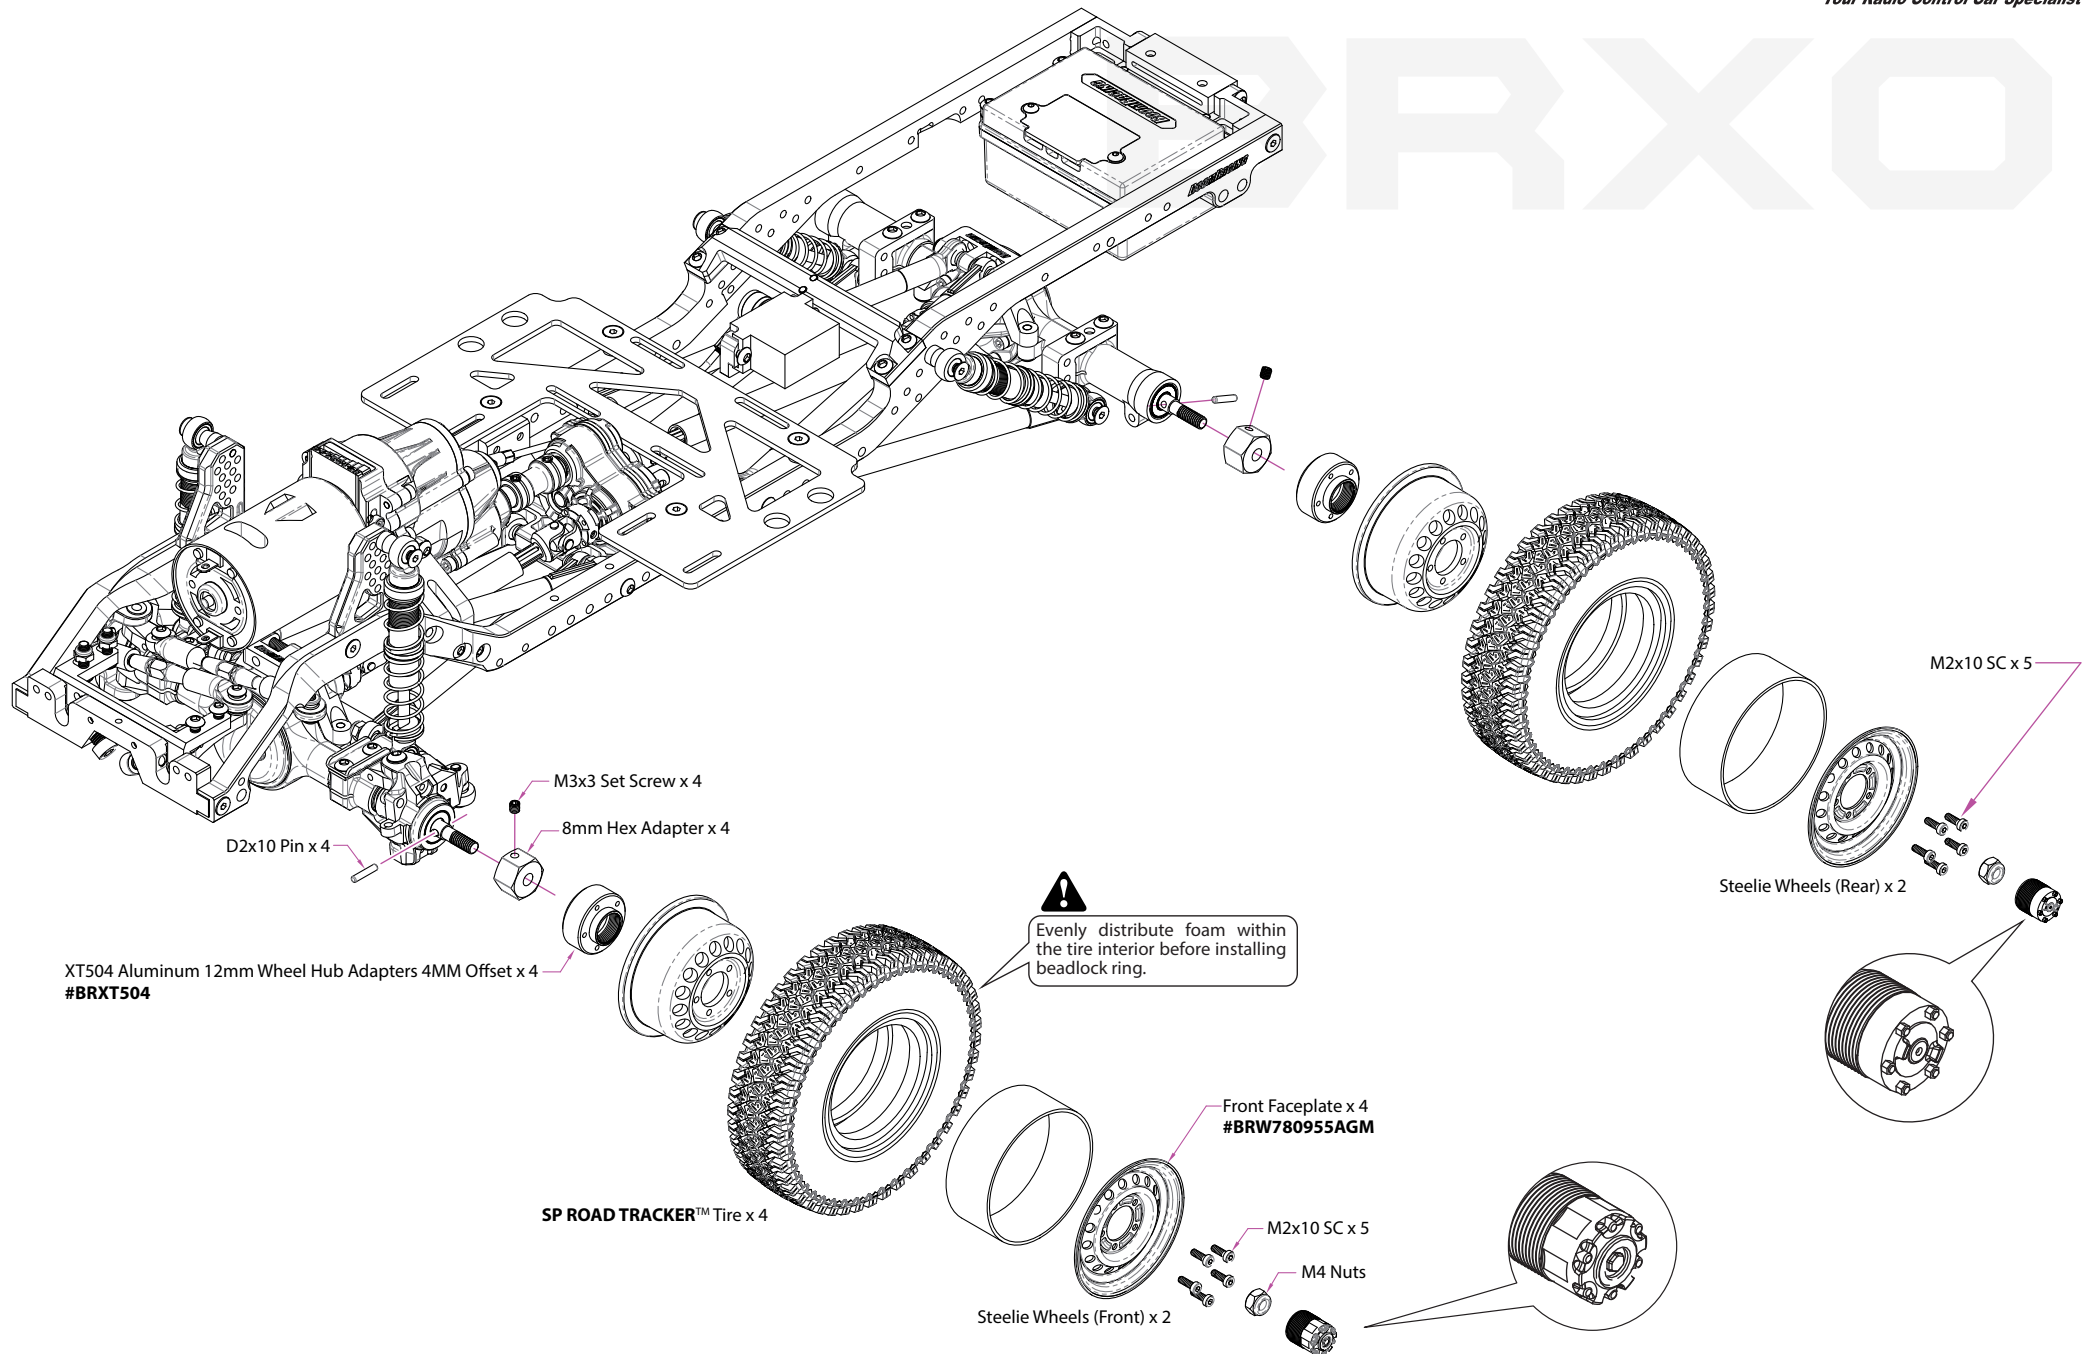

14 - LC70 BODY SECTION


Use the diagram below to sketch the design scheme for your LC70 hard body before painting. If you would like to download this file, go to the Downloads tab at <https://www.boomracingrc.com/BRX01>. Refer to the Killerbody LC70 Hard Body manual to assemble the body before continuing to the next steps.

*Body Only Included in BRX01 With LC70 Body #BR8002

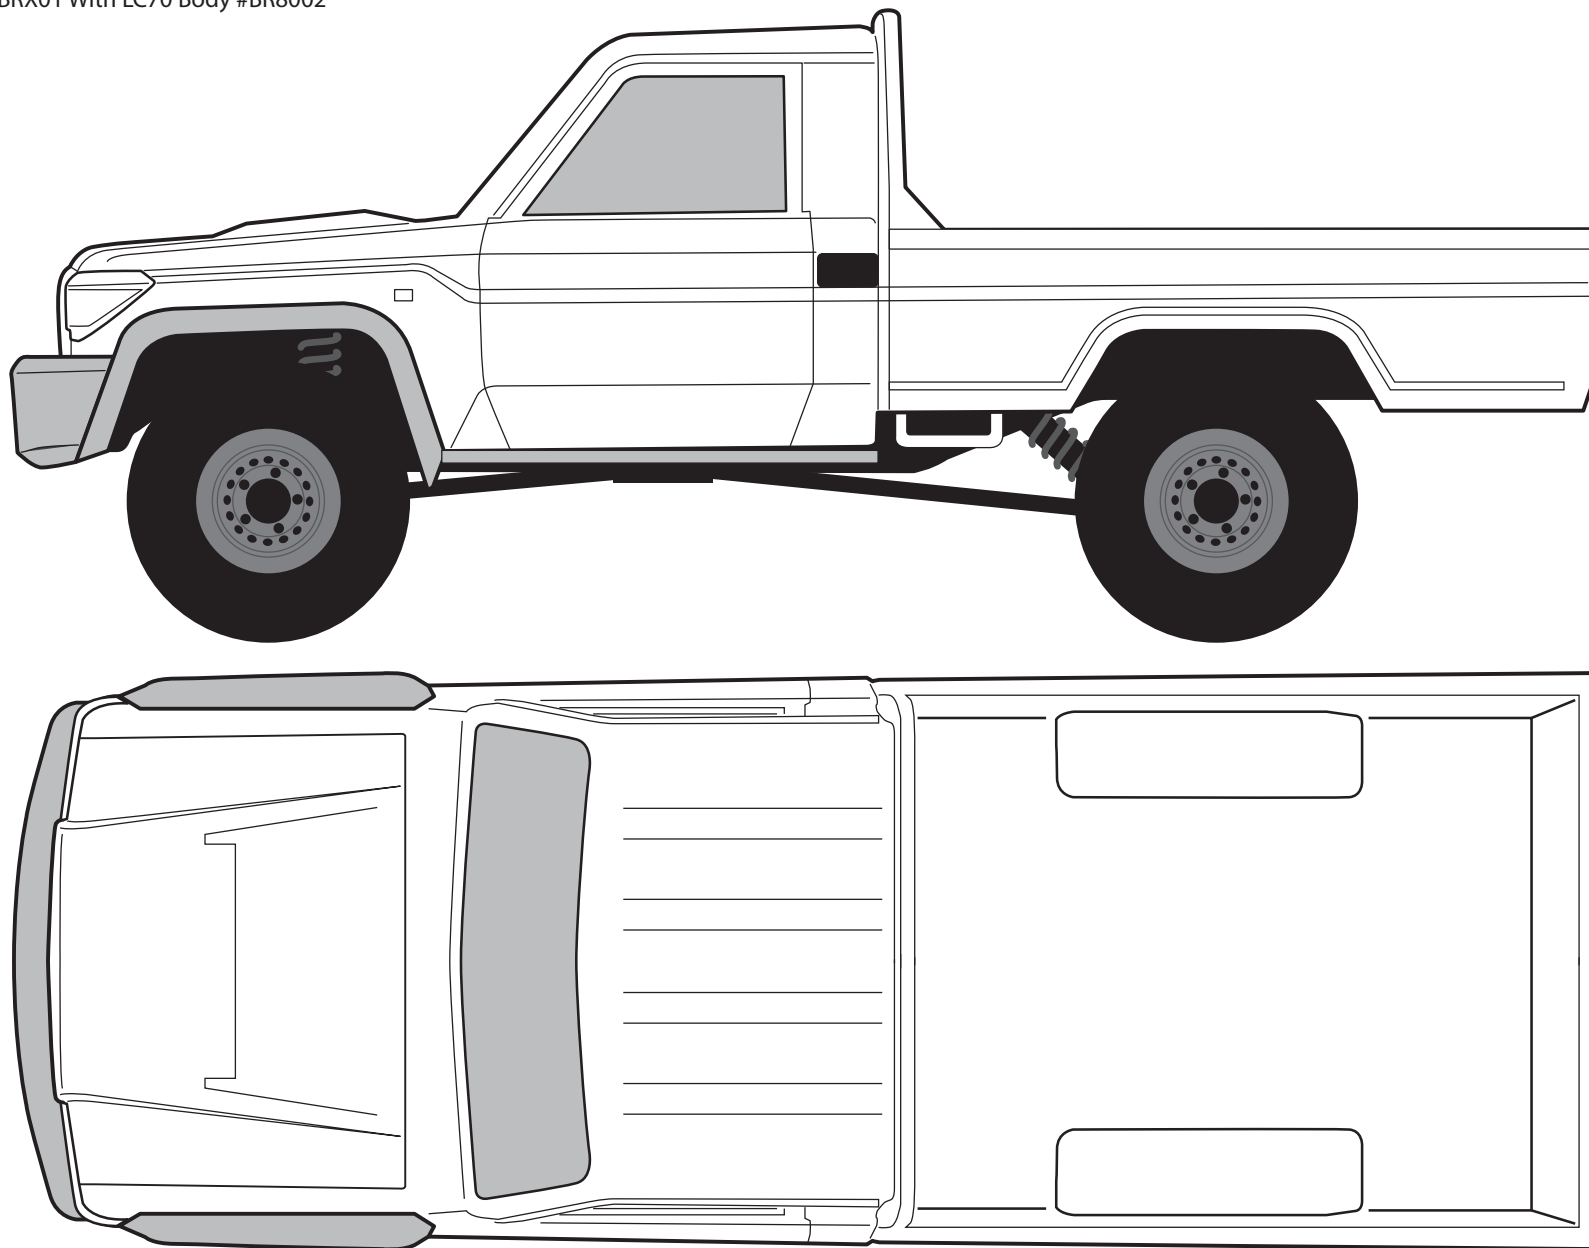

15 - LC70 FRONT BODY MOUNT

Parts Needed:

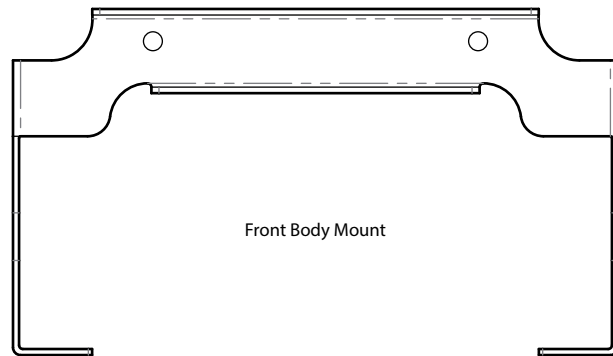

Front Body Mount




Refer to the Killerbody LC70 manual to assemble the body before continuing on this page.

M3x12 Self Tapping Screw x 2

M2.5x8 SC x 2

7 BODY MOUNTS




M3x12 Self Tapping x 2



M2.5x8 SC x 2




Cross Bar x 2

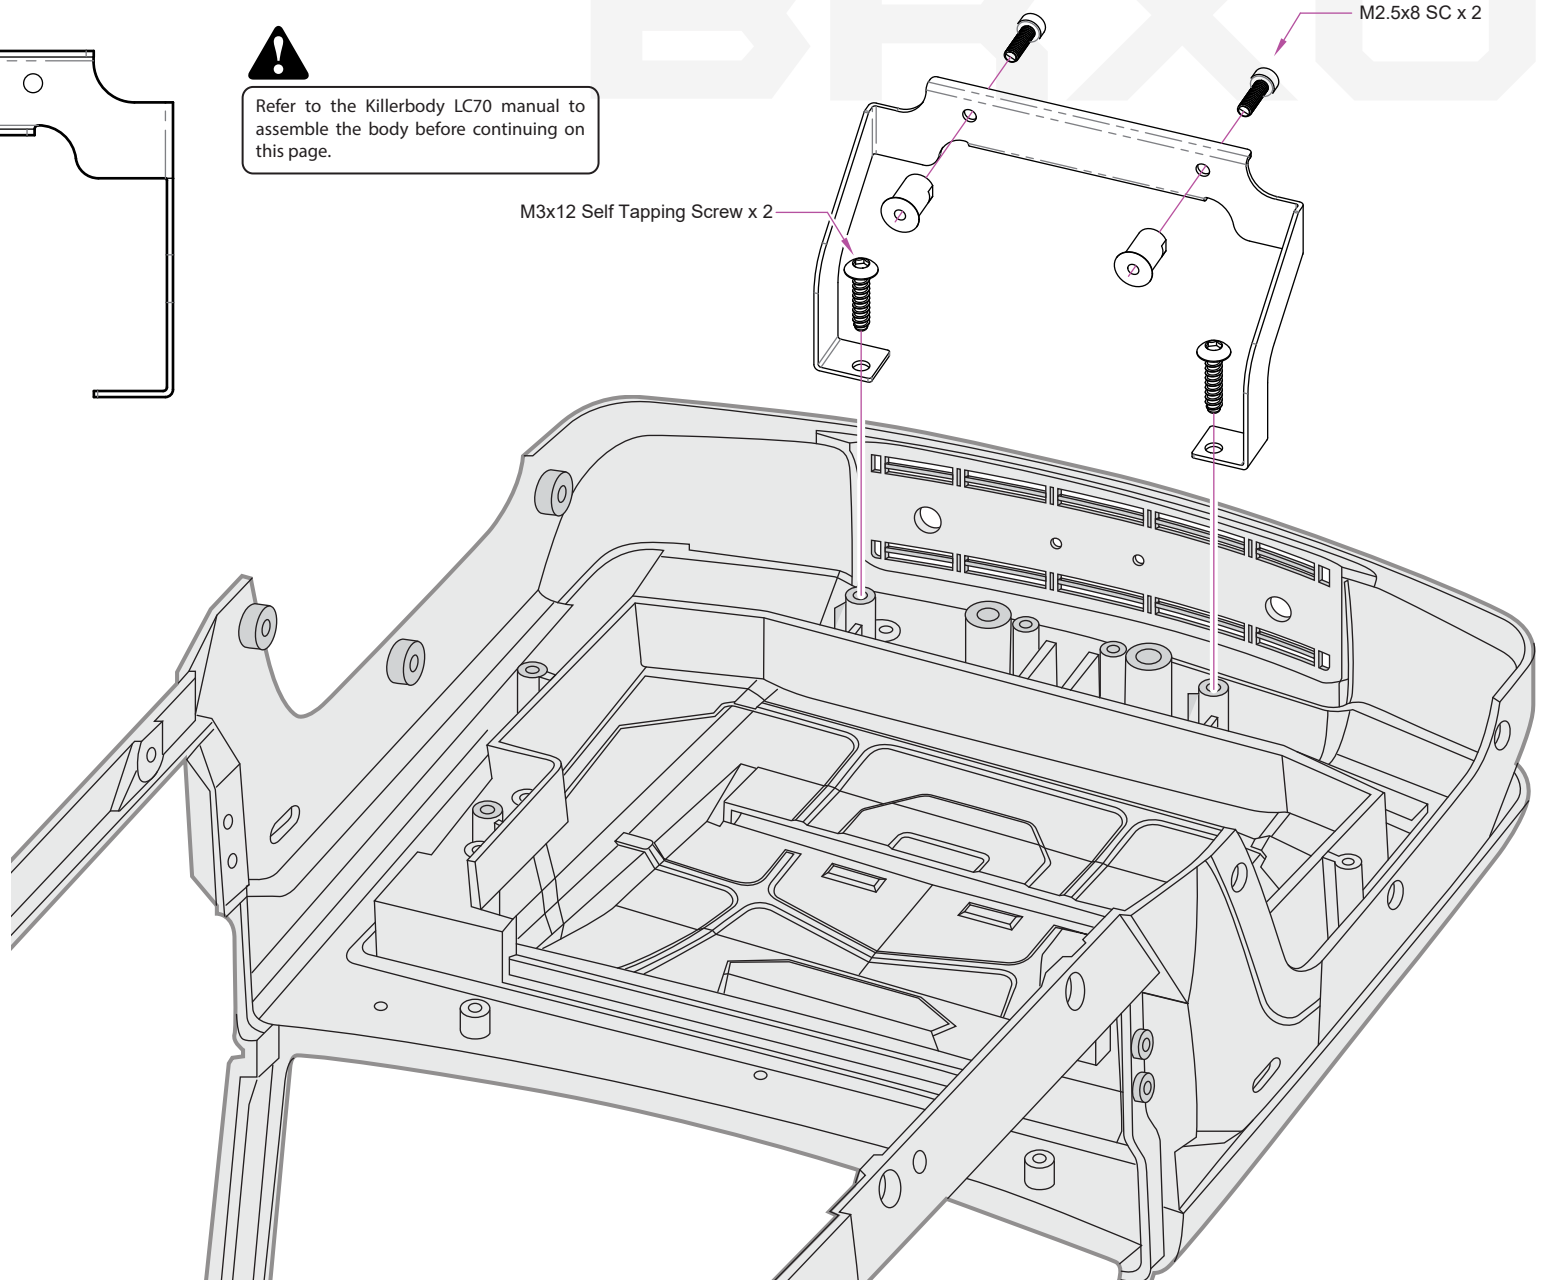

16 - LC70 REAR BODY MOUNT

Parts Needed:

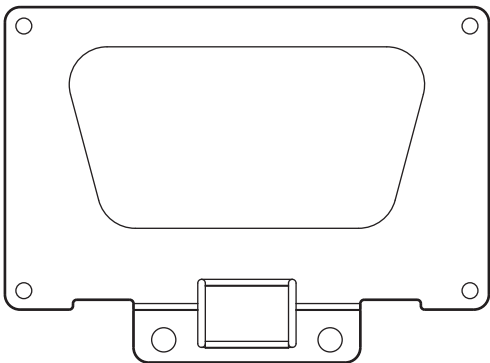


Rear Body Mount

7 BODY MOUNTS

 M2x5 SC x 4


 M2 Nuts x 4

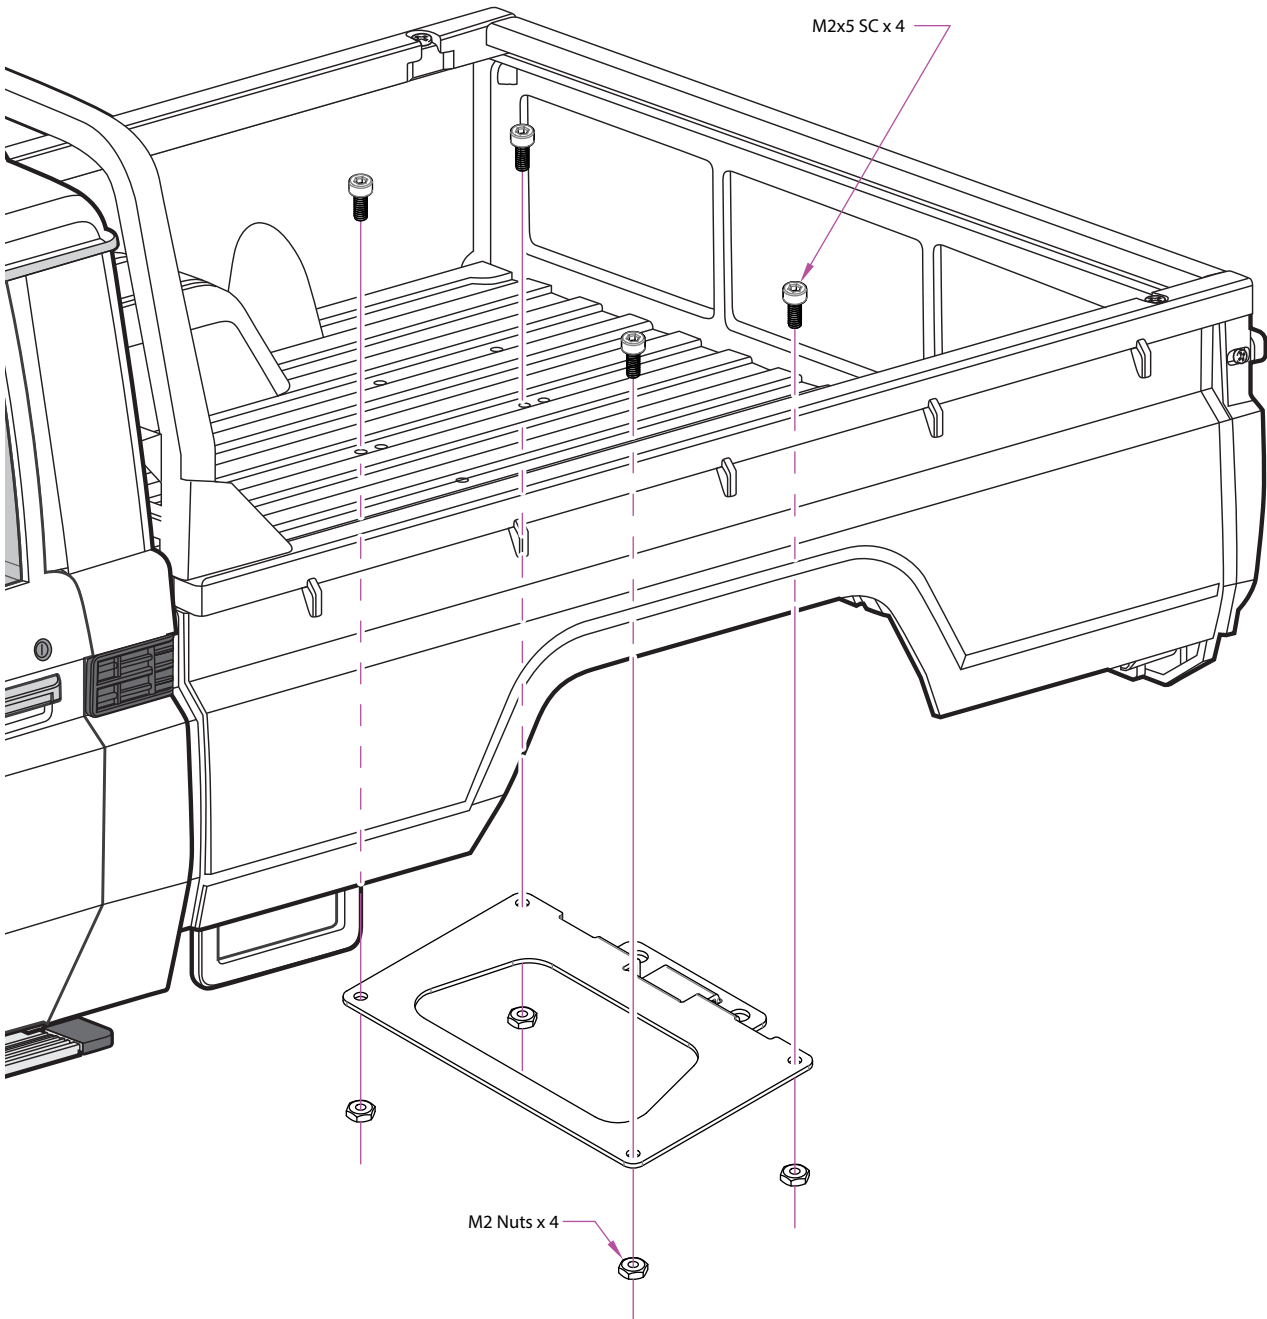


17 - LC70 FRONT & REAR BODY MOUNT

LC70 BODY MOUNTS




LC70 BODY MOUNTS

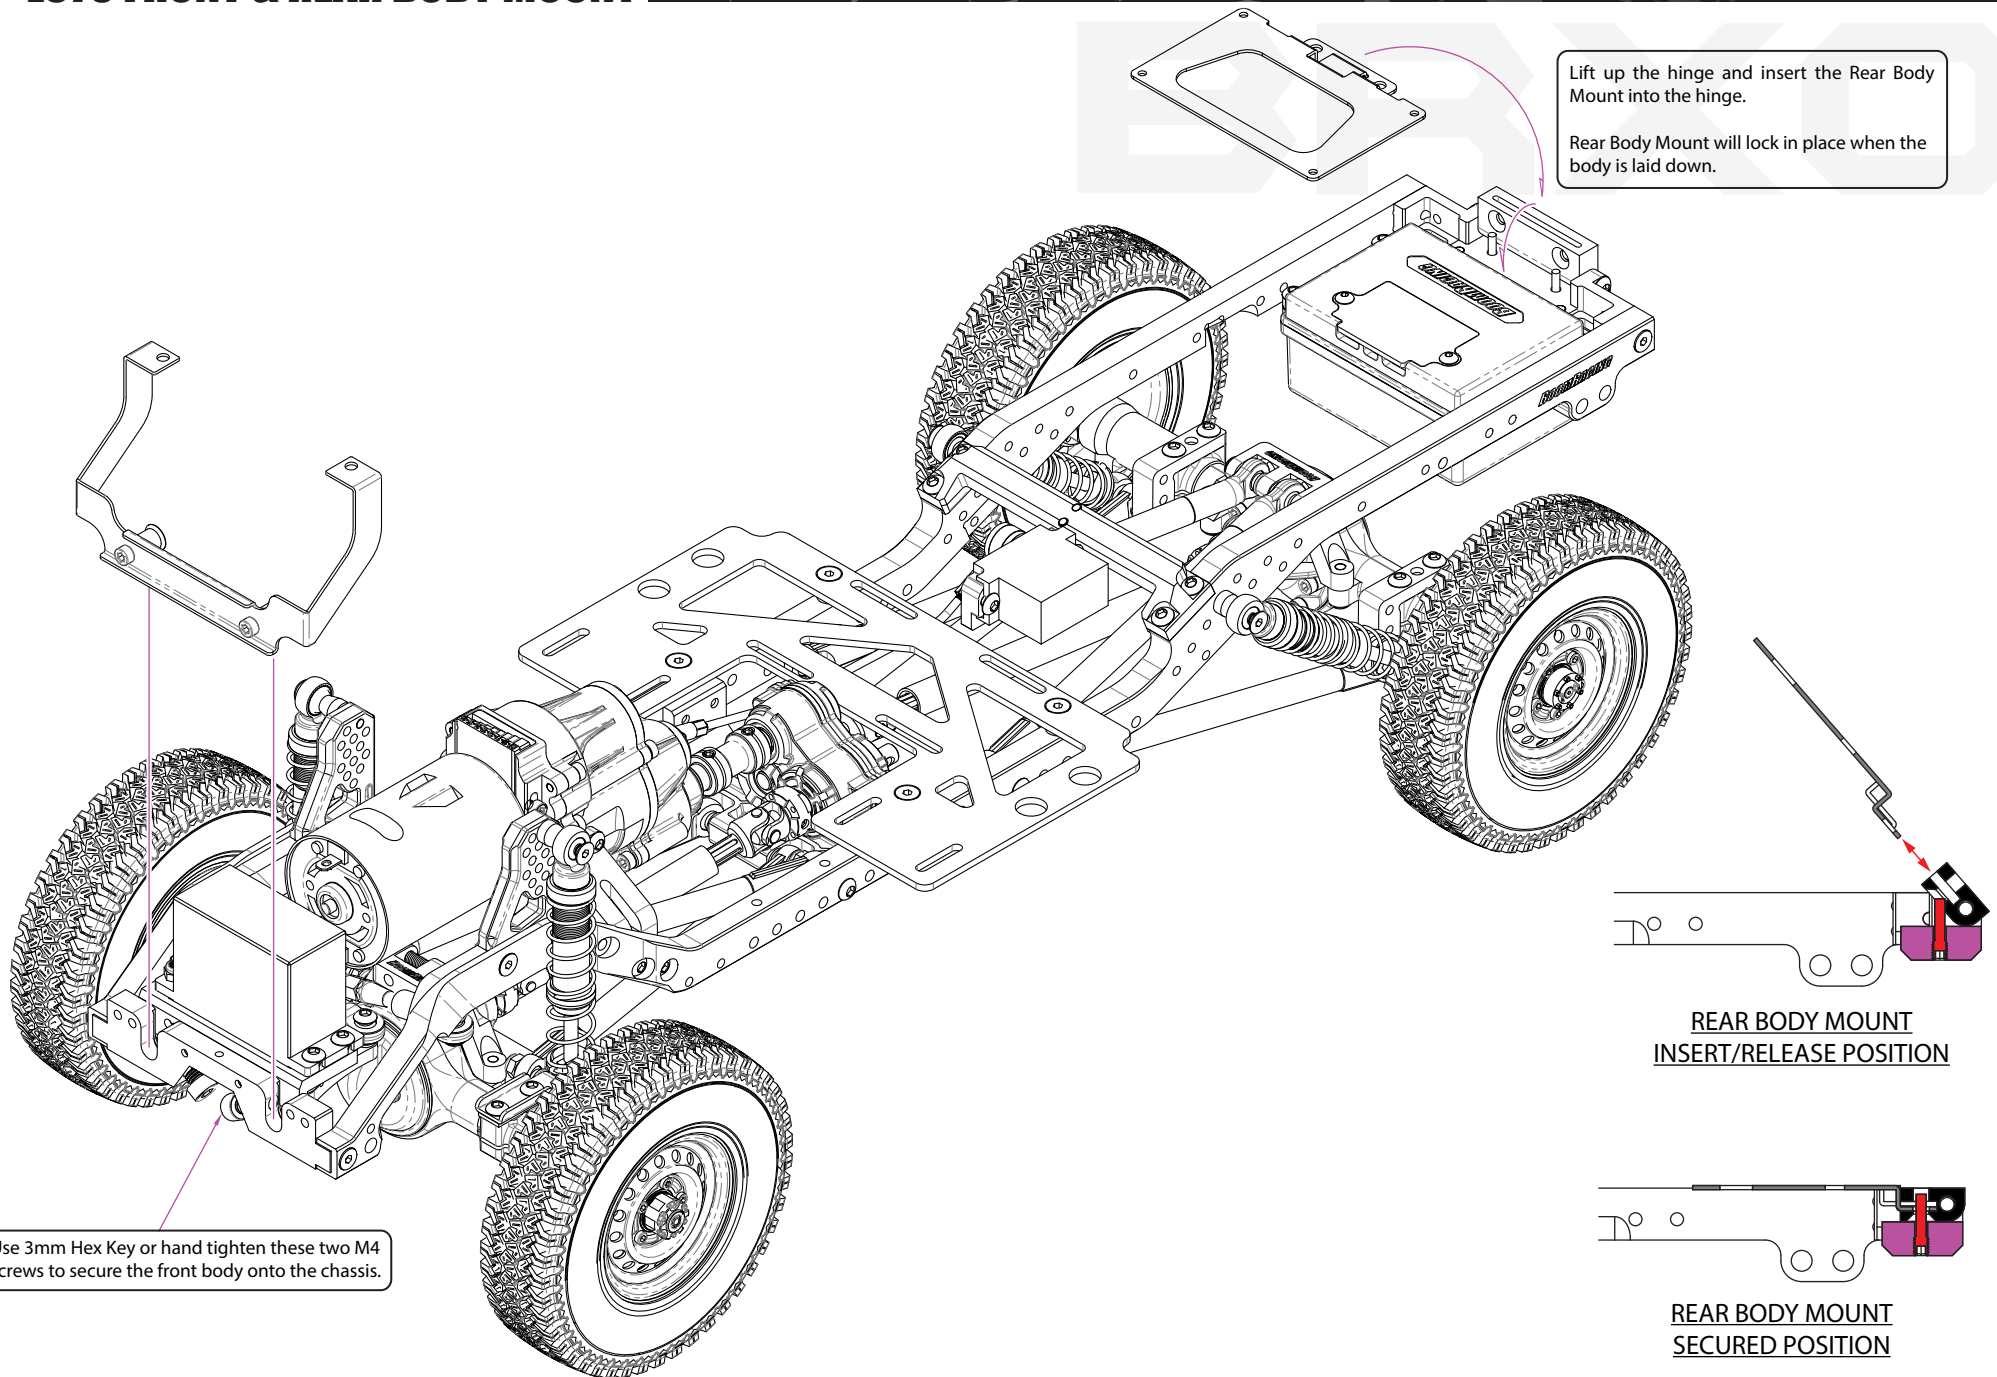

18 - OPTIONAL FRONT SHOCK TOWER SETUP

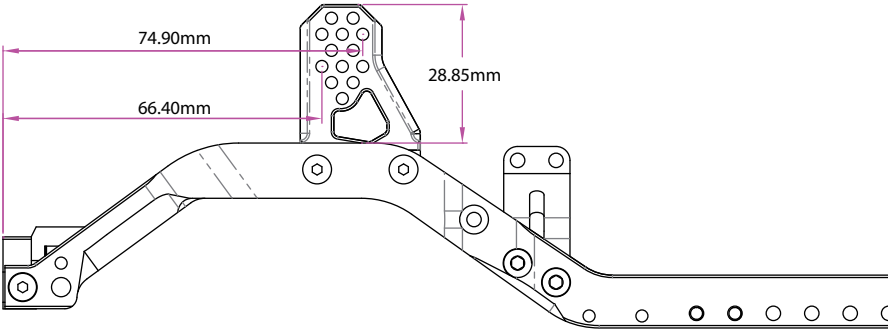


DEFAULT SETUP

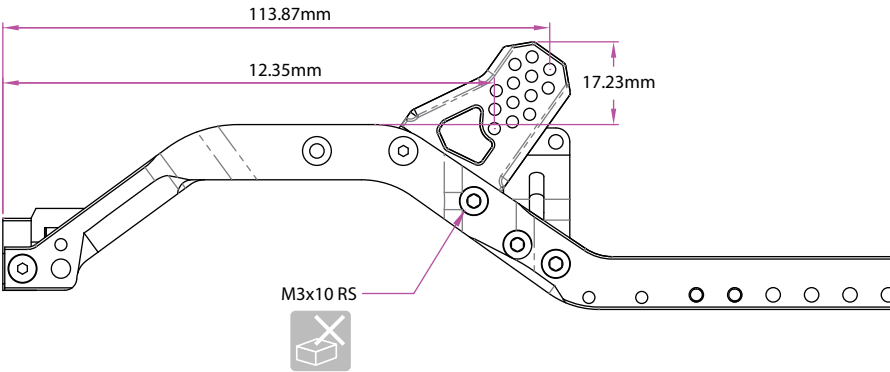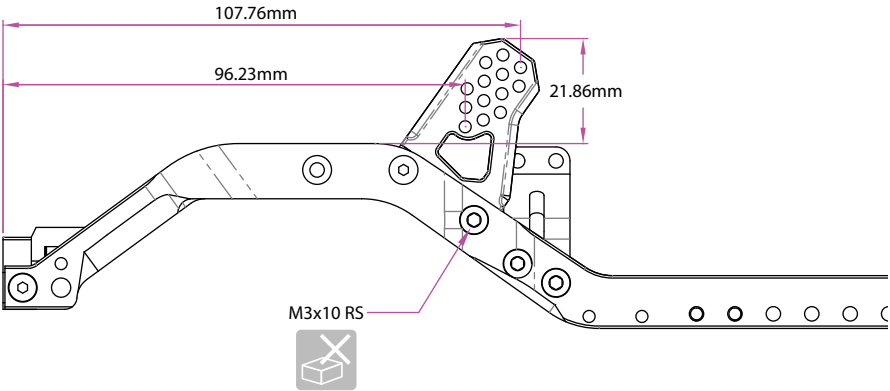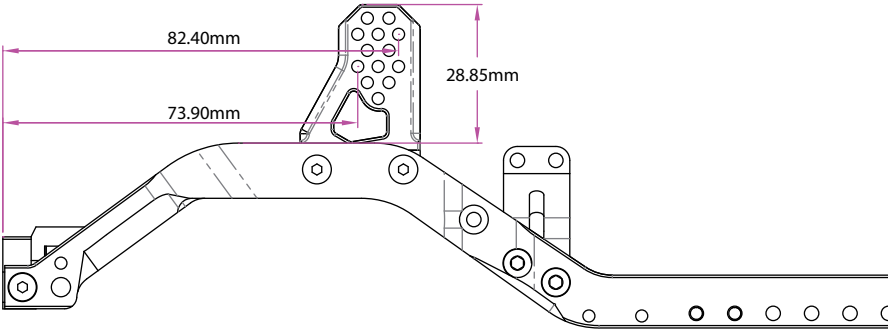

PRE-ASSEMBLED FRONT AXLE




Apply a generous amount of Black Grease on all movable contact surfaces including gears, spacers, shafts and bearings.

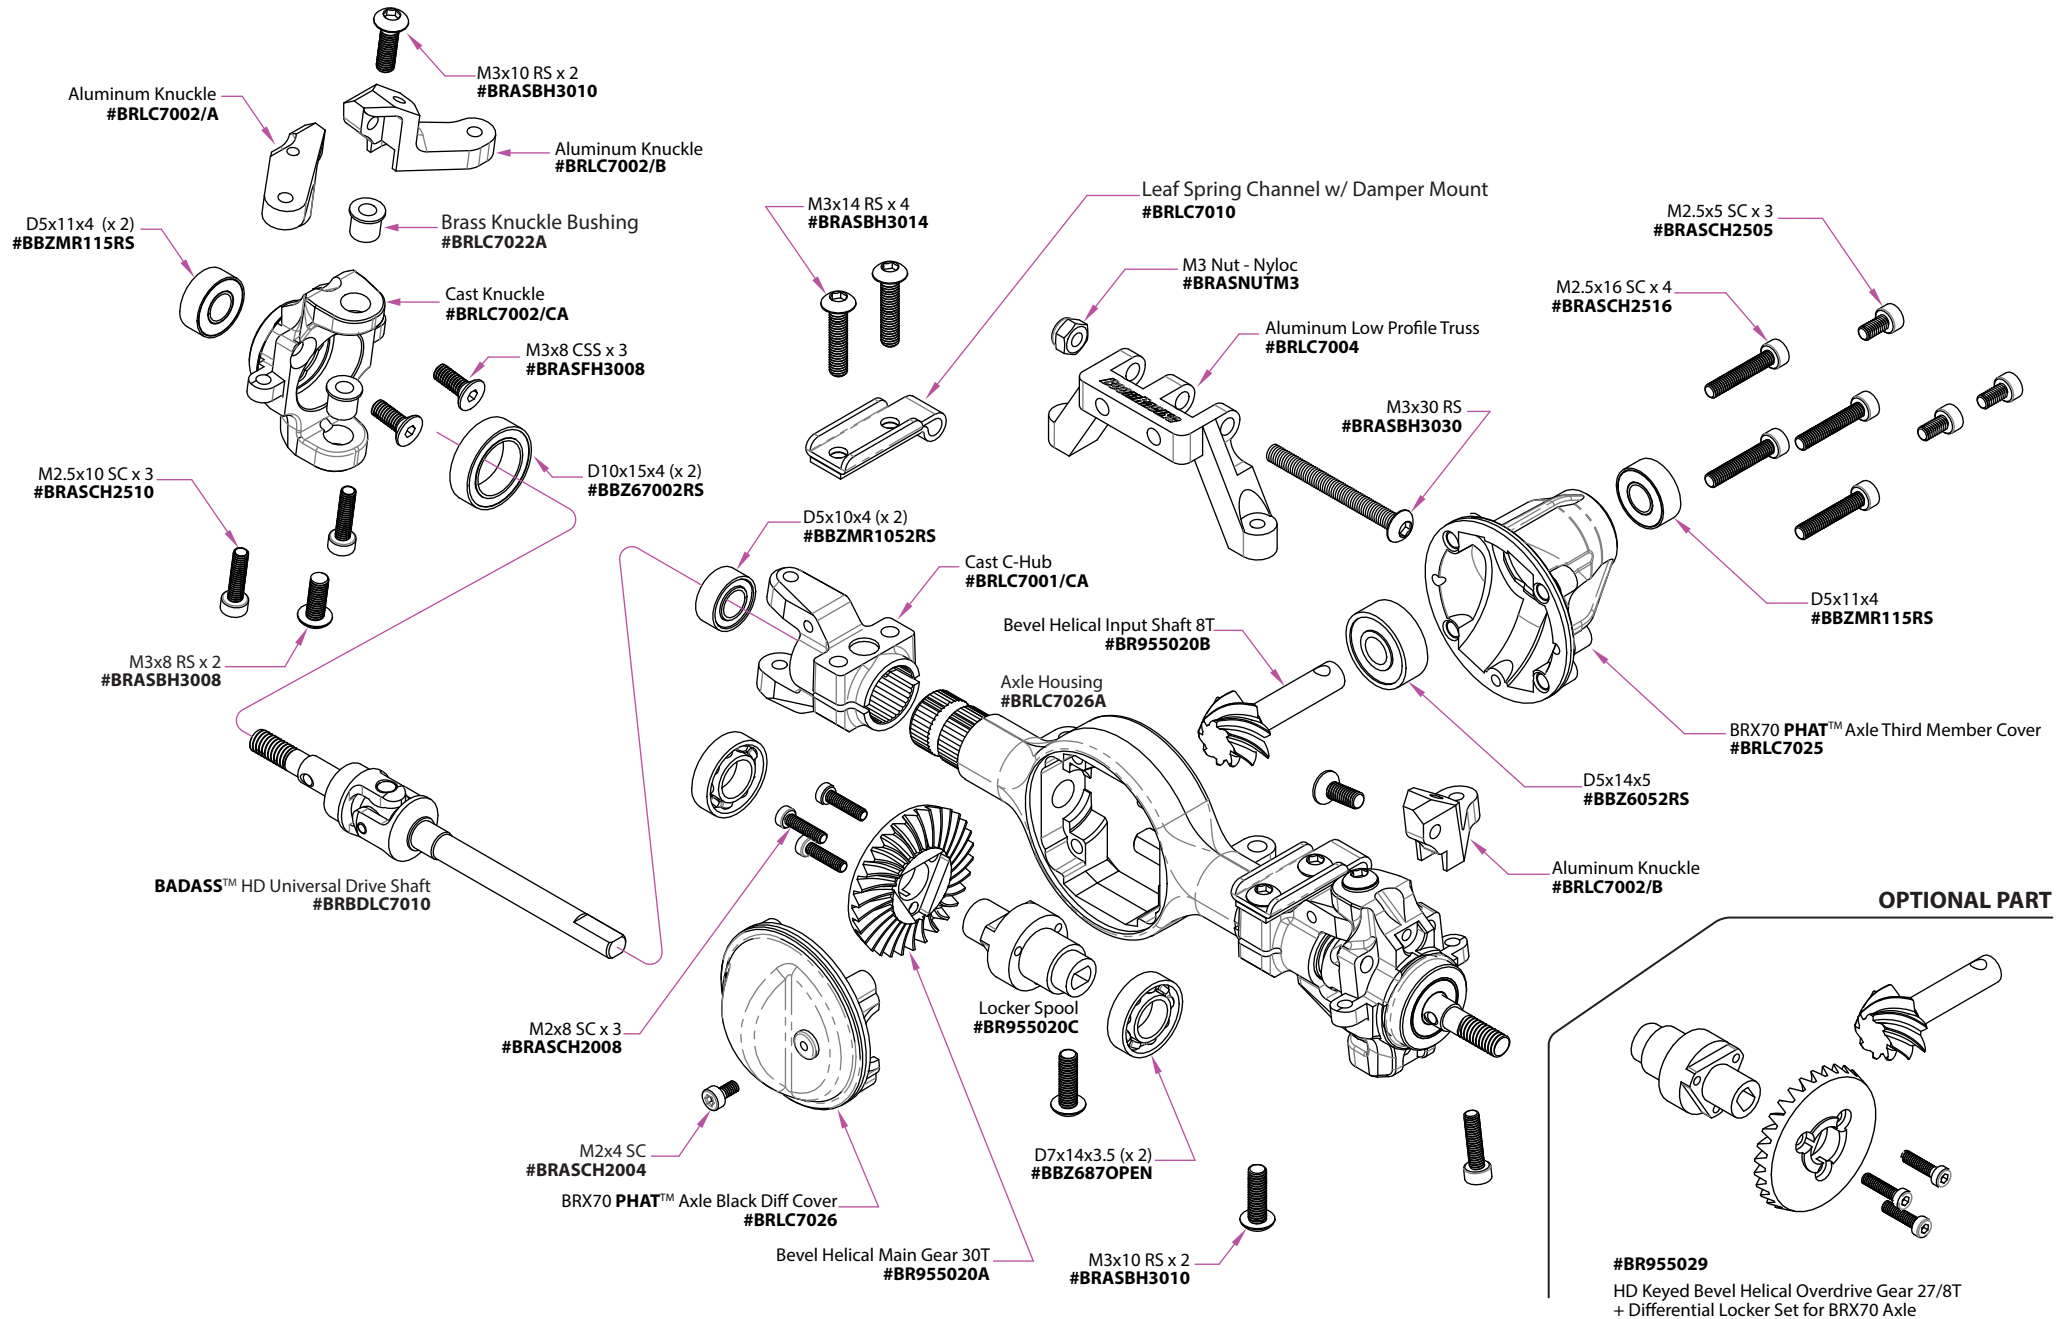

PRE-ASSEMBLED REAR AXLE




Apply a generous amount of Black Grease on all movable contact surfaces including gears, spacers, shafts and bearings.

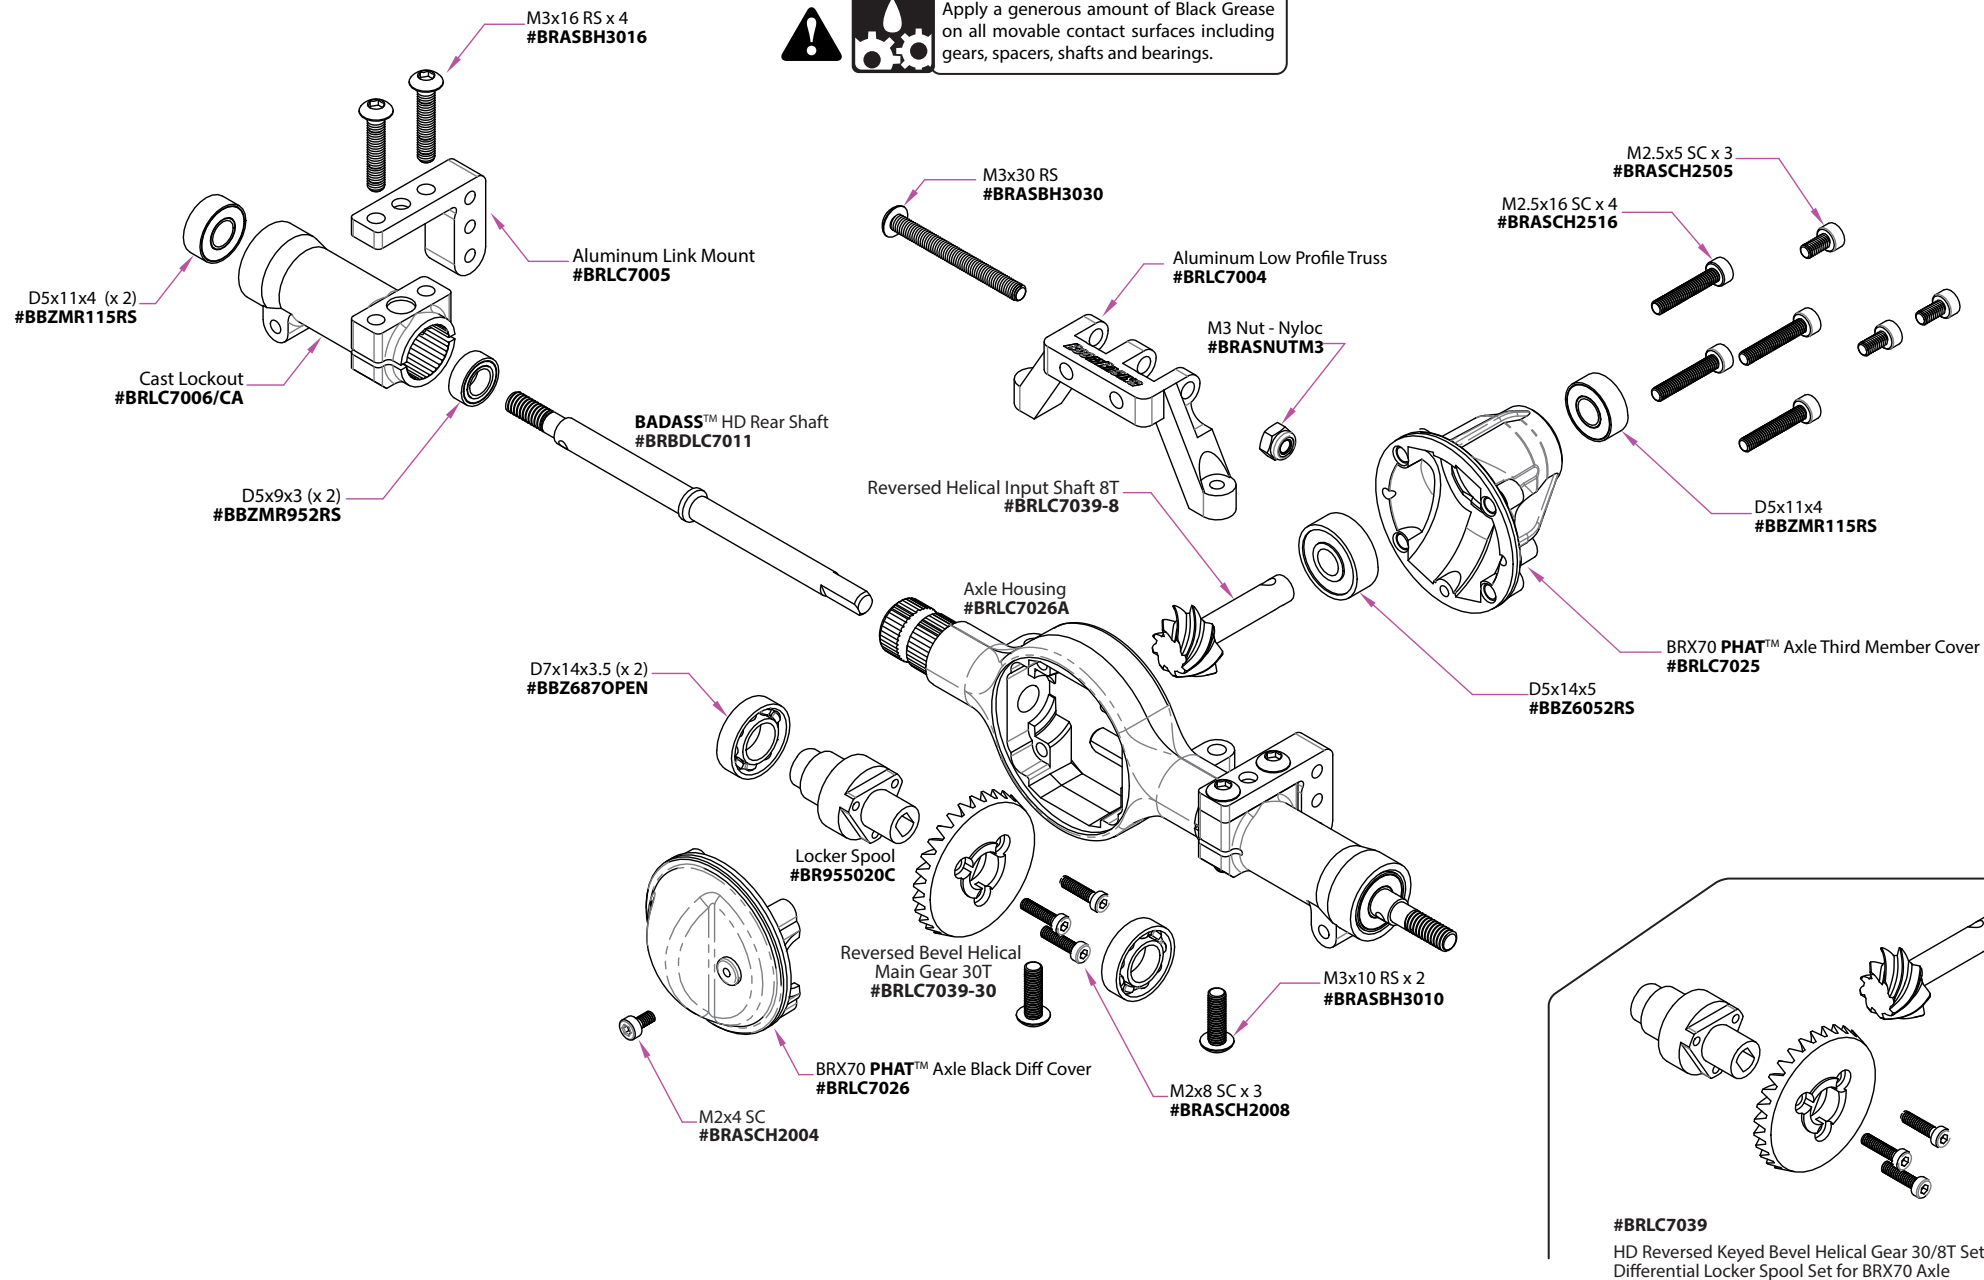

PRE-ASSEMBLED BCF2™ GEARBOX



Apply a generous amount of Black Grease on all movable contact surfaces including gears, spacers, shafts and bearings.

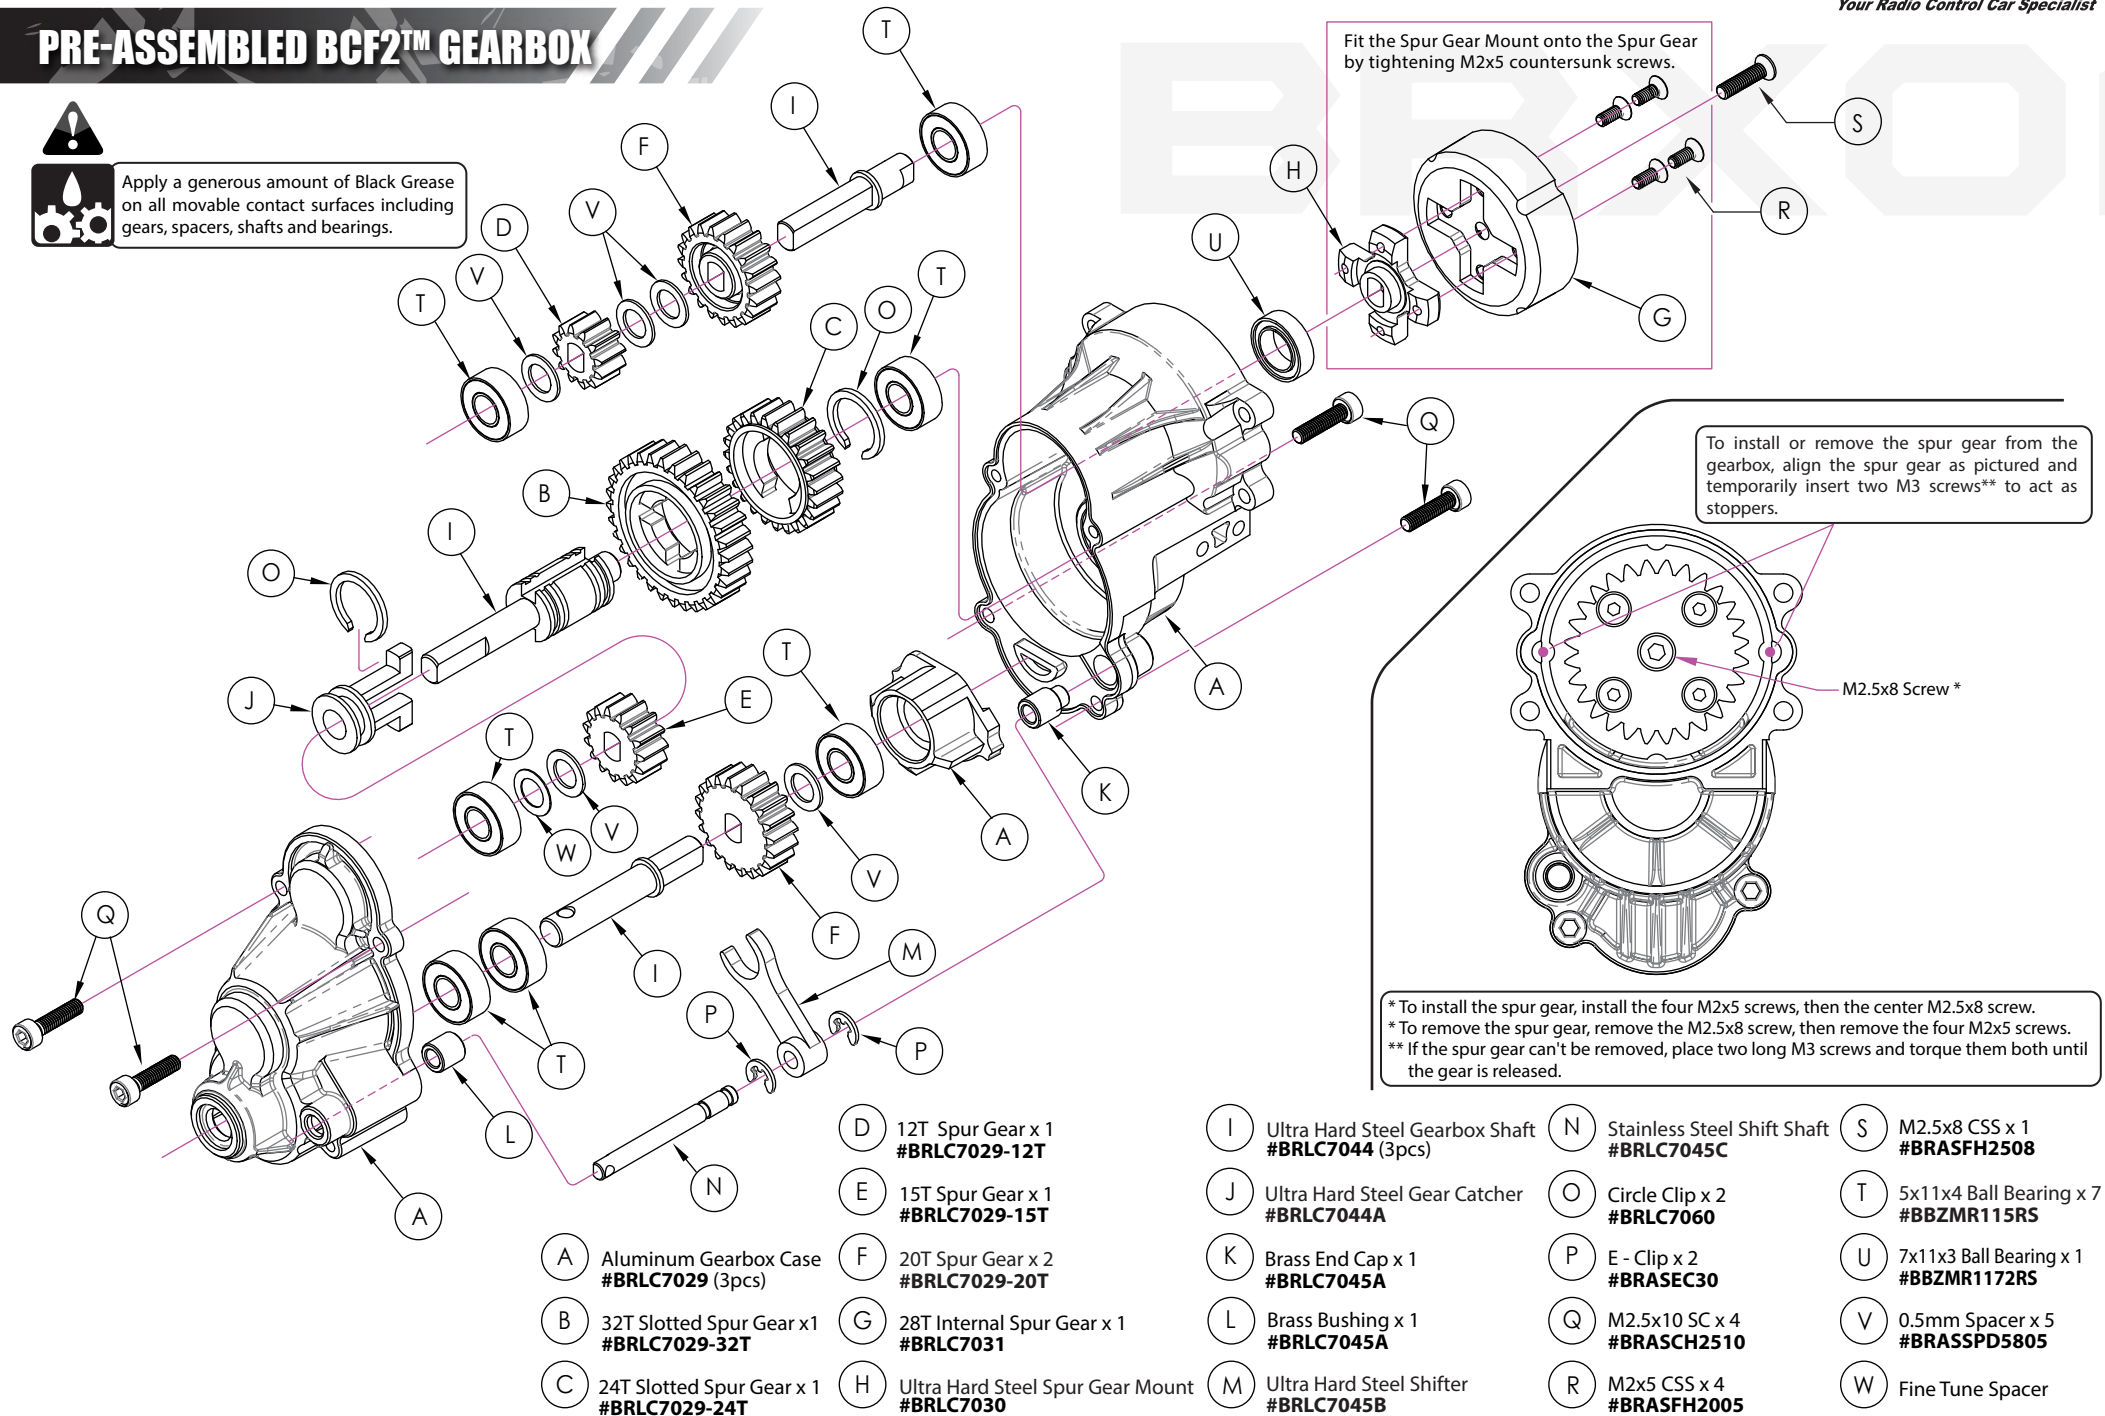

Fit the Spur Gear Mount onto the Spur Gear by tightening M2x5 countersunk screws.

To install or remove the spur gear from the gearbox, align the spur gear as pictured and temporarily insert two M3 screws** to act as stoppers.

M2.5x8 Screw *

*To install the spur gear, install the four M2x5 screws, then the center M2.5x8 screw.

**To remove the spur gear, remove the M2.5x8 screw, then remove the four M2x5 screws.


** If the spur gear can't be removed, place two long M3 screws and torque them both until the gear is released.

- | | | | | |
|--|---|--|---|---|
| (A) Aluminum Gearbox Case
#BRLC7029 (3pcs) | (D) 12T Spur Gear x 1
#BRLC7029-12T | (I) Ultra Hard Steel Gearbox Shaft
#BRLC7044 (3pcs) | (N) Stainless Steel Shift Shaft
#BRLC7045C | (S) M2.5x8 CSS x 1
#BRASFH2508 |
| (B) 32T Slotted Spur Gear x 1
#BRLC7029-32T | (E) 15T Spur Gear x 1
#BRLC7029-15T | (J) Ultra Hard Steel Gear Catcher
#BRLC7044A | (O) Circle Clip x 2
#BRLC7060 | (T) 5x11x4 Ball Bearing x 7
#BBZMR115RS |
| (C) 24T Slotted Spur Gear x 1
#BRLC7029-24T | (F) 20T Spur Gear x 2
#BRLC7029-20T | (K) Brass End Cap x 1
#BRLC7045A | (P) E - Clip x 2
#BRASEC30 | (U) 7x11x3 Ball Bearing x 1
#BBZMR1172RS |
| | (G) 28T Internal Spur Gear x 1
#BRLC7031 | (L) Brass Bushing x 1
#BRLC7045A | (Q) M2.5x10 SC x 4
#BRASCH2510 | (V) 0.5mm Spacer x 5
#BRASSPD5805 |
| | (H) Ultra Hard Steel Spur Gear Mount
#BRLC7030 | (M) Ultra Hard Steel Shifter
#BRLC7045B | (R) M2x5 CSS x 4
#BRASFH2005 | (W) Fine Tune Spacer |




PRE-ASSEMBLED SRD™ TRANSFER CASE





Apply a generous amount of Black Grease on all movable contact surfaces including gears, spacers, shafts and bearings.

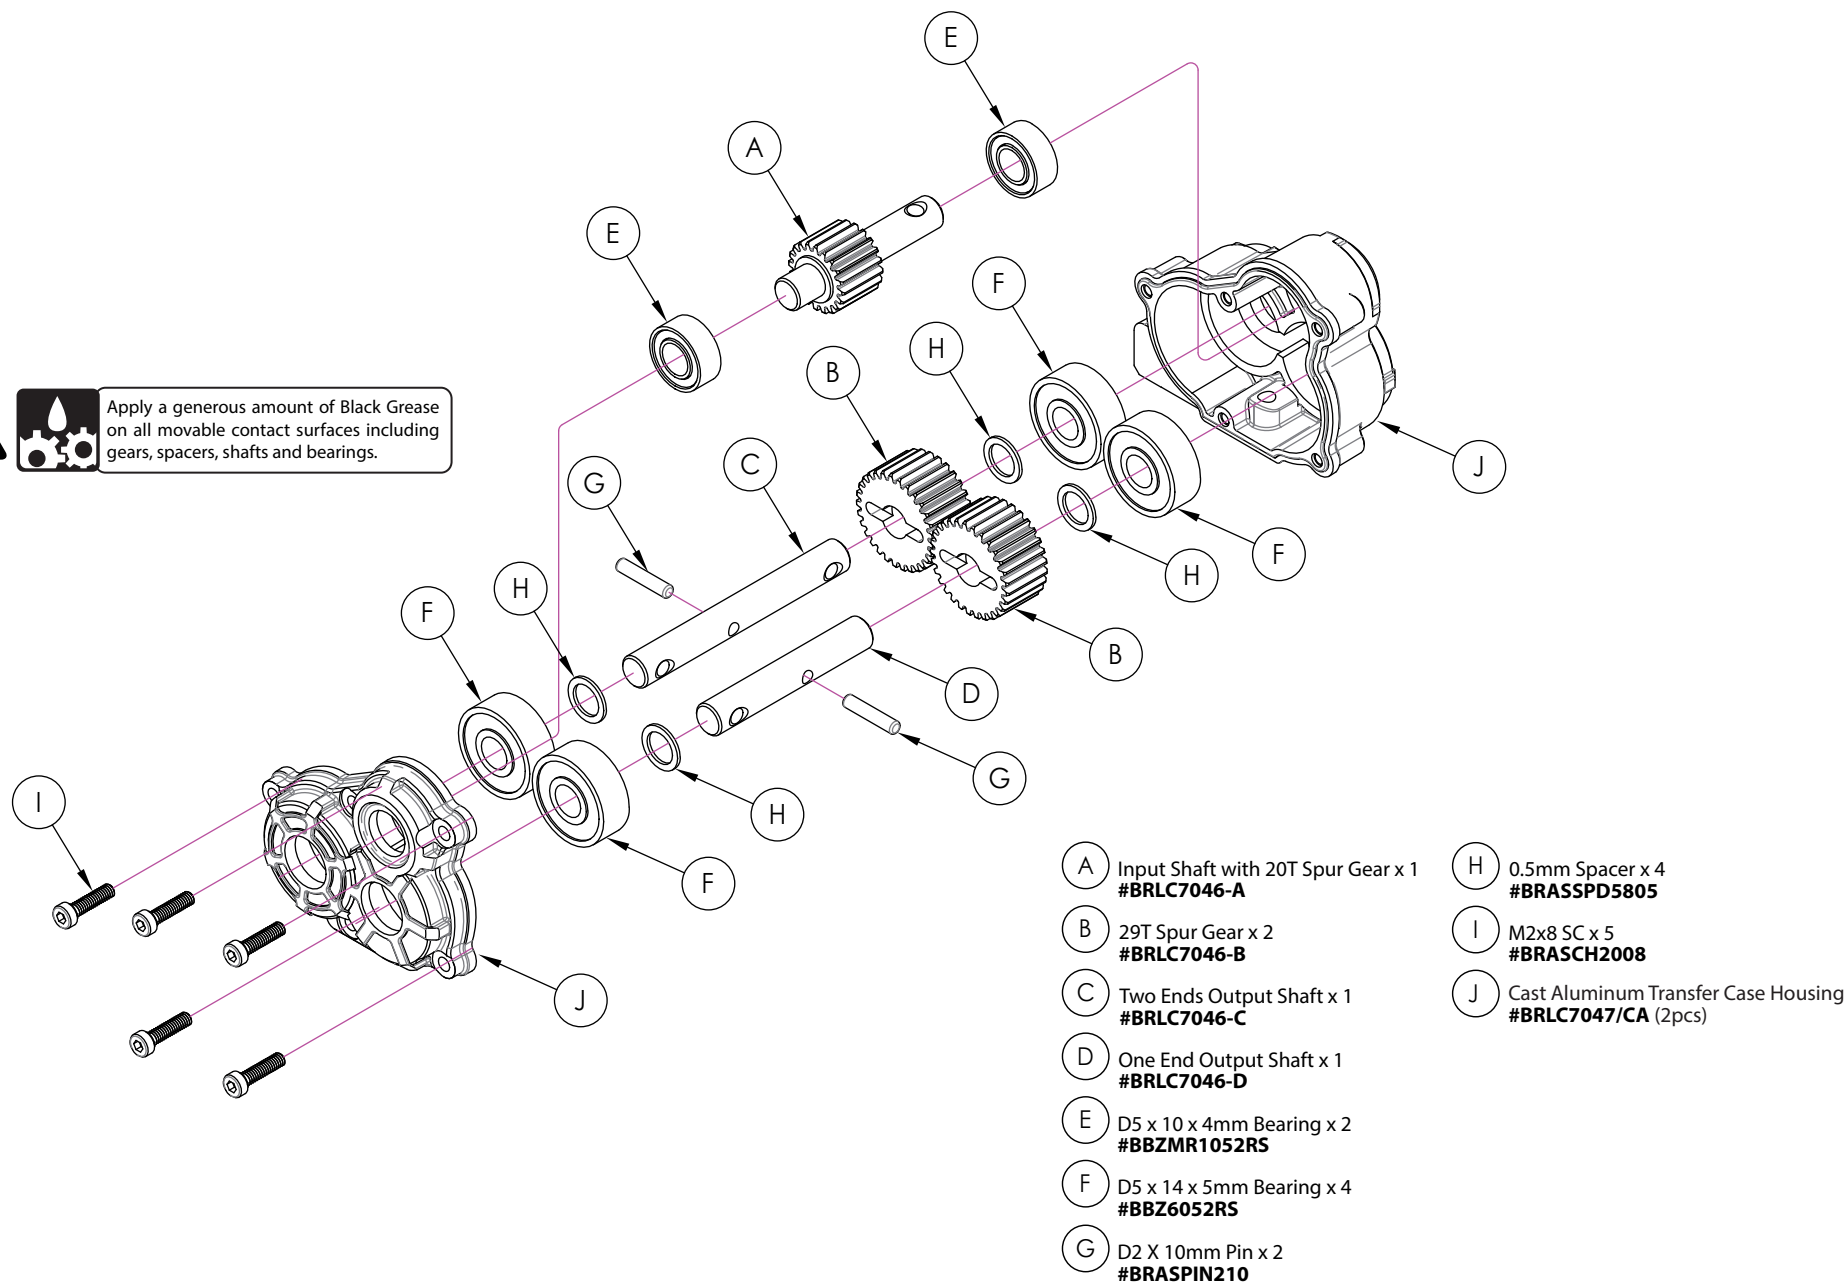

OPTIONAL FRONT SKID PLATE #BRLC7061

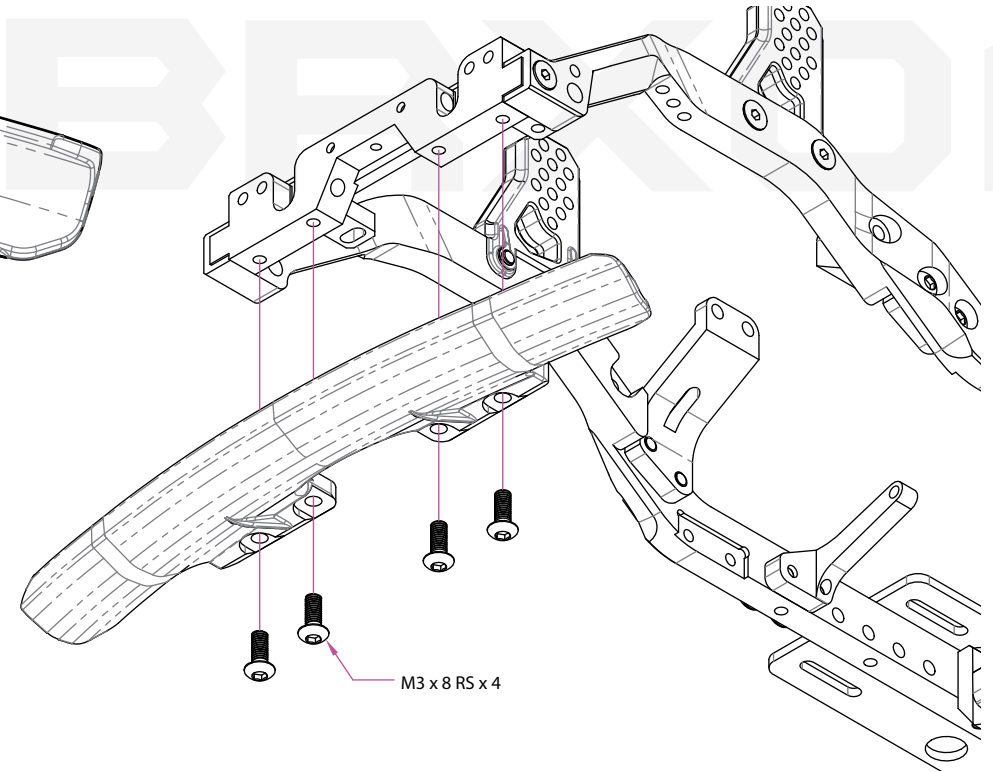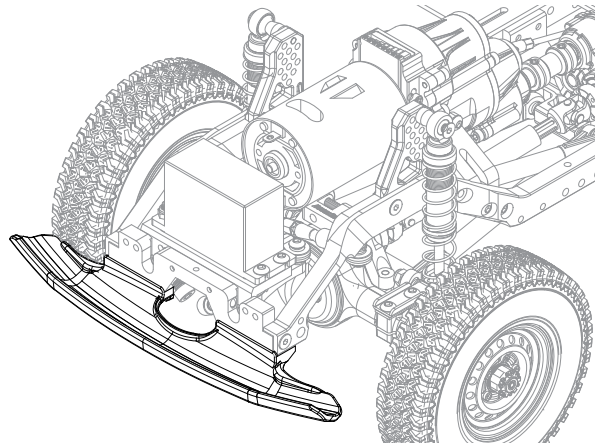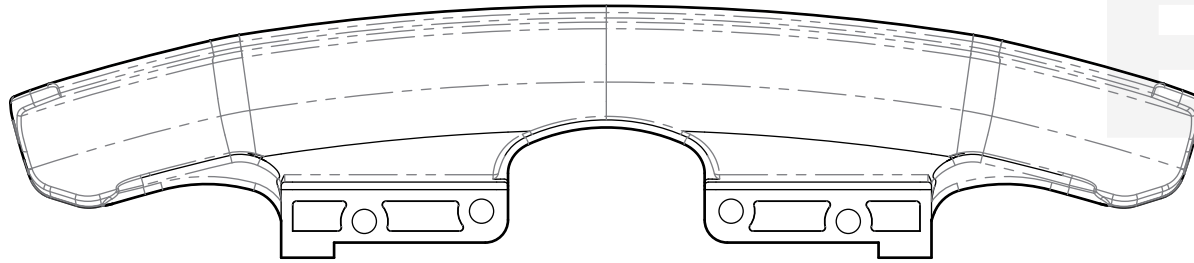

OPTIONAL "TOOL FREE" QUICK RELEASE LATCH #BRLC7062

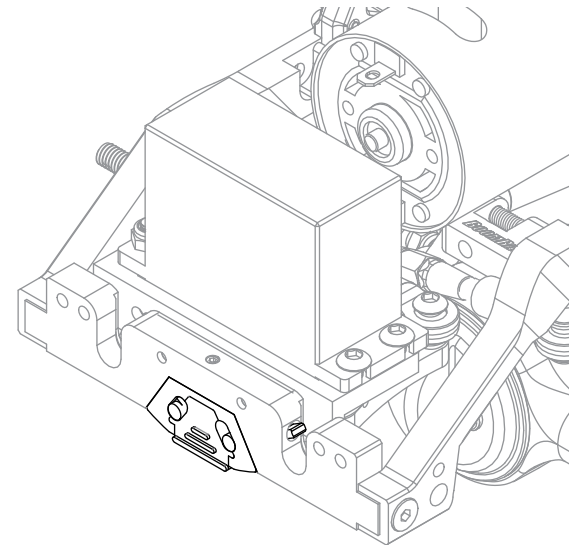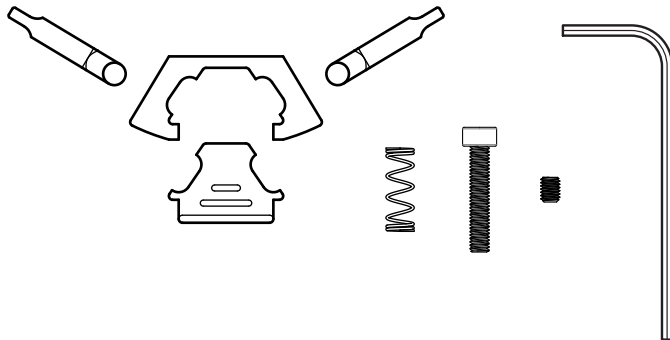

PARTS LIST

Parts shown in bold are optional accessories. Parts are arranged in alphanumeric order.

Part #	Description
BBZ6052RS	5x14x5mm High Performance Rubber Sealed Bearing (1)
BBZ67002RS	10x15x4mm High Performance Rubber Sealed Bearing (1)
BBZ6870PEN	7x14x3.5mm High Performance Open Ball Bearing (1)
BBZMR1052RS	5x10x4mm High Performance Rubber Sealed Bearing (1)
BBZMR1152RS	5x11x4mm High Performance Rubber Sealed Bearing (1)
BBZMR1172RS	7x11x3mm High Performance Rubber Sealed Bearing (1)
BBZMR952RS	5x9x3mm High Performance Rubber Sealed Bearing (1)
BR955020	HD Steel Keyed Bevel Helical Gear 30/8T & Diff Locker Spool Set
BR955020A	HD Steel Bevel Helical Main Gear 30T for BR955020
BR955020B	HD Steel Bevel Helical Input Shaft 8T for BR955020
BR955020C	HD Steel Locker Spool for BR955020 BR955029 BRLC7039
BR955029	Overdrive HD Steel Keyed Bevel Helical Gear 27/8T & Diff Locker Spool Set
BR955029A	Overdrive HD Bevel Helical Main Gear 27T for BR955029
BR955029B	Overdrive HD Bevel Helical Input Shaft 8T for BR955029
BRASBH2007	M2x7 RS Round Head Screw (10)
BRASBH2008	M2x8 RS Round Head Screw (10)
BRASBH2506	M2.5x6 RS Round Head Screw (10)
BRASBH3006	M3x6 RS Round Head Screw (10)
BRASBH3008	M3x8 RS Round Head Screw (10)
BRASBH3010	M3x10 RS Round Head Screw (10)
BRASBH3012	M3x12 RS Round Head Screw (10)
BRASBH3012/ST	M3x12 Self Tapping Screw (10)
BRASBH3014	M3x14 RS Round Head Screw (10)
BRASBH3016	M3x16 RS Round Head Screw (10)
BRASBH3018	M3x18 RS Round Head Screw (10)
BRASBH3024	M3x24 RS Round Head Screw (10)
BRASBH3030	M3x30 RS Round Head Screw (10)
BRASCH2004	M2x4 SC Socket Cap Screw (10)
BRASCH2005	M2x5 SC Socket Cap Screw (10)
BRASCH2008	M2x8 SC Socket Cap Screw (10)
BRASCH2505	M2.5x5 SC Socket Cap Screw (10)
BRASCH2508	M2.5x8 SC Socket Cap Screw (10)
BRASCH2510	M2.5x10 SC Socket Cap Screw (10)
BRASCH2516	M2.5x16 SC Socket Cap Screw (10)
BRASCH3008	M3x8 SC Socket Cap Screw (10)
BRASCH4012	M4x12 SC Socket Cap Screw (10)
BRASEC30	E-Clip 3mm (10)
BRASFH2005	M2x5 CSS Counter Sunk Screw (10)
BRASFH2010	M2x10 CSS Counter Sunk Screw (10)
BRASFH2508	M2.5x8 CSS Counter Sunk Screw (10)
BRASFH3008	M3x8 CSS Counter Sunk Screw (10)
BRASFH3010	M3x10 CSS Counter Sunk Screw (10)
BRASFH3012	M3x12 CSS Counter Sunk Screw (10)

Part #	Description
BRASFH3018	M3x18 CSS Counter Sunk Screw (10)
BRASFH3020	M3x20 CSS Counter Sunk Screw (10)
BRASFH3022	M3x22 CSS Counter Sunk Screw (10)
BRASFH3026	M3x26 CSS Counter Sunk Screw (10)
BRASNUTM2	Lock Nut M2 (5)
BRASNUTM3	Lock Nut M3 Nyloc (5)
BRASNUTM4	Lock Nut M4 Nyloc (5)
BRASORD8-15	D8x1.5 Rubber O-Ring (10)
BRASPIN210	Steel Pin 2x10mm (10)
BRASSPD427/N	D4x7x2 Nylon Spacer (5)
BRASSPD471/N	D4x7x1 Nylon Spacer (5)
BRASSPD5727	D5x7x2.7 Spacer (5)
BRASSPD5801	D5x8x0.1 Spacer (10)
BRASSPD5805	D5x8x0.5 Spacer (10)
BRASST3003	M3x3 SS Steel Set Screws (10)
BRASST3012/DS	M3x12 SS Steel Driveshaft Screw Pin (5)
BRASST4016	M4x16 SS Steel Set Screw (10)
BRBDLC7010	BADASS™ HD Steel Universal Drive Shaft for BRX70 PHAT™ Axle (2)
BRBDLC7011	BADASS™ HD Steel Rear Shaft for BRX70 PHAT™ Axle (2)
BRGRS01	BADASS™ Siliking Grease 5g
BRGRS08	BADASS™ Black Graphite Grease 5g
BRGRS10	Artificial Leather Lock Strap (2)
BRGRS242	242 Blue Thread Lock 10g
BRLC7001/CA	Cast Metal C-Hub for BRX70 Axle (2)
BRLC7002/A	Aluminum Knuckle Lever for BRX70 Knuckle (1)
BRLC7002/B	Aluminum Knuckle Arm for BRX70 Knuckle (2)
BRLC7002/CA	Cast Metal Knuckle for BRX70 Axle (2)
BRLC7003	SST Steering Link Tie Rod w/ BADASS™ Rod Ends for BRX70 PHAT™ Axle
BRLC7004	Aluminum Low Profile Truss for BRX70 PHAT™ Axle
BRLC7005	Aluminum Link Mount for BRX70 PHAT™ Axle (2)
BRLC7006/CA	Cast Metal Lockout for BRX70 PHAT™ Axle (2)
BRLC7008	Aluminum Gearbox End Mount
BRLC7009	Aluminum 2 Speed Shift Servo Mount
BRLC7010	Leaf Spring Channel w/ Shock Mount (2)
BRLC7011	Aluminum Billet Chassis Rail 7mm Left & Right (2)
BRLC7012	Aluminum Rear Crossmember
BRLC7013	Aluminum Rear Body Hinge Mount
BRLC7014	Aluminum Middle Crossmember
BRLC7015	Aluminum Front Crossmember
BRLC7016	Aluminum Steering Servo Mount
BRLC7018	Aluminum Shock Mount Left & Right (2)
BRLC7019	Aluminum Gearbox Side Mount (2)
BRLC7020	Aluminum High Clearance Skid Plate

PARTS LIST

Part #	Description
BRLC7021	Aluminum Battery & Electronics Mount Plate
BRLC7022A	Brass Bushing for BRX70 Knuckle (4)
BRLC7024	BRX70 PHAT™ Axle Housing with Diff Cover (Black)
BRLC7025	BRX70 PHAT™ Axle Third Member Cover
BRLC7026	BRX70 PHAT™ Axle Diff Cover (Black)
BRLC7026A	BRX70 PHAT™ Axle Housing
BRLC7027	Aluminum Gearbox Adapter with Motor Mount
BRLC7028	Stainless Steel Connection Shaft
BRLC7029	Aluminum BCF2 ™ Gearbox Housing
BRLC7029-12T	Heavy Duty 12T Steel Cut Gear (1)
BRLC7029-15T	Heavy Duty 15T Steel Cut Gear (1)
BRLC7029-20T	Heavy Duty 20T Steel Cut Gear (1)
BRLC7029-24T	Heavy Duty 24T Steel Cut Gear (1)
BRLC7029-32T	Heavy Duty 32T Steel Cut Gear (1)
BRLC7030	Ultra-Hard Steel Spur Gear Mount (1)
BRLC7031	Internal Spur Gear 28T 32 Pitch (1)
BRLC7032	Steel Motor Spacer
BRLC7033	Receiver Box Kit
BRLC7033A	Silicone Seal for Receiver Box
BRLC7034	M4 7mm Aluminum Links Set (7) 2x70mm/2x114/2x93mm/1x63mm
BRLC7039	HD Steel Reversed Keyed Bevel Helical Gear 30/8T & Diff Locker Spool Set
BRLC7039-30	HD Steel Reversed Bevel Helical Main Gear 30T
BRLC7039-8	HD Steel Reversed Helical Input Shaft 8T
BRLC7040	3x6x5 Tapper Spacer (4)
BRLC7041	3x6x3 Tapper Spacer (4)
BRLC7042	3x6x6 Tapper Spacer (4)
BRLC7043	Steel Center Drive Shafts (2) Front: 90-100mm Rear: 125-145mm
BRLC7044	Ultra-Hard Steel Gearbox Shaft (3)
BRLC7044A	Ultra-Hard Steel Gear Catcher
BRLC7045A	Brass Shifter Cap and Bushing
BRLC7045B	Ultra-Hard Steel Shifter
BRLC7045C	Stainless Steel Shift Rod
BRLC7046	HD Steel Cut Transfer Case Gear Set
BRLC7047/CA	Aluminum SRD ™ Transfer Case Housing
BRLC7048A	Front Body Mount
BRLC7048B	Rear Body Mount
BRLC7048C	Stainless Steel Cross Bar (2)
BRLC7049	Aluminum 2 Speed Servo Horn Set
BRLC7050	SST Counter Threaded Drag Link / Panhard Link for BRX70 PHAT™ Axle (2)
BRLC7051	Spring Steel Shift Rod
BRLC7052F	Front Aluminum Double Spring Shocks 80mm w/ Optional Soft Springs (2)
BRLC7052R	Rear Aluminum Double Spring Shocks 80mm w/ Optional Soft Springs (2)
BRLC7052-REBUILD	Rebuild Kit for Double Spring Shocks (2)

Part #	Description
BRLC7055	Aluminum Long Low Profile Servo Horn 25T Black
BRLC7056	8mm Aluminum 12mm Hex Adaptors with Pins & Set Screws (4) Black
BRLC7057	BRX70 Complete Front PHAT ™ Axle w/ 30/8T HD Keyed Gear & BADASS ™ HD Uni. Drive Shaft
BRLC7058	BRX70 Complete Rear PHAT ™ Axle w/ Reversed 30/8T HD Keyed Gear & BADASS ™ HD Steel Shaft
BRLC7059	Extension Cable x 2
BRLC7060	Circle Clip x 5
BRLC7061	Front Skid Plate
BRLC7062	"Tool Free" Quick Release Latch
BRPG3209-3	32P 9T / 3.175mm Steel Pinion Gear (1)
BRPG3210-3	32P 10T / 3.175mm Steel Pinion Gear (1)
BRPG3211-3	32P 11T / 3.175mm Steel Pinion Gear (1)
BRPG3212-3	32P 12T / 3.175mm Steel Pinion Gear (1)
BRPG3213-3	32P 13T / 3.175mm Steel Pinion Gear (1)
BRPG3214-3	32P 14T / 3.175mm Steel Pinion Gear (1)
BRPG3215-3	32P 15T / 3.175mm Steel Pinion Gear (1)
BRPG3216-3	32P 16T / 3.175mm Steel Pinion Gear (1)
BRPG32COMBO1-3	32P Steel Pinion Gear Combo 9T-12T (4)
BRPG32COMBO2-3	32P Steel Pinion Gear Combo 13T-16T (4)
BRQ763069/CA	Complete SRD ™ Transfer Case
BRQ90279KIT	Rebuild Kit for Drive Shaft (2)
BRQ90351	D2 Ball End - M2 Link Rod Joint (2)
BRSHK010	BADASS™ Silicone Shock Oil 10wt 60ml
BRSHK015	BADASS™ Silicone Shock Oil 15wt 60ml
BRSHK020	BADASS™ Silicone Shock Oil 20wt 60ml
BRSHK025	BADASS™ Silicone Shock Oil 25wt 60ml
BRSHK030	BADASS™ Silicone Shock Oil 30wt 60ml
BRSHK035	BADASS™ Silicone Shock Oil 35wt 60ml
BRSHK040	BADASS™ Silicone Shock Oil 40wt 60ml
BRSHK045	BADASS™ Silicone Shock Oil 45wt 60ml
BRSHK050	BADASS™ Silicone Shock Oil 50wt 60ml
BRSHK055	BADASS™ Silicone Shock Oil 55wt 60ml
BRSHK060	BADASS™ Silicone Shock Oil 60wt 60ml
BRSHK065	BADASS™ Silicone Shock Oil 65wt 60ml
BRSHK070	BADASS™ Silicone Shock Oil 70wt 60ml
BRSHK075	BADASS™ Silicone Shock Oil 75wt 60ml
BRSHK080	BADASS™ Silicone Shock Oil 80wt 60ml
BRSDRD6-15	D6x1.5 O-Ring (10)
BRT10028	Tool Kit
BRT10037	Cable Wiring Retainer (18pcs)
BRTR15501	1.55" SP ROAD TRACKER ™ Crawler Tire 3.46"x0.94" (88x24mm) GEKKO Compound w/ Single Stage Open Cell Foam Insert (2)
BRTR29395	1.55" Single Stage Open Cell Foam for 1.55" SP ROAD TRACKER ™ Crawler Tire (2)
BRW750300	Stainless Steel Flanged Pivot Ball for Rod Ends (10)
BRW750301	BADASS ™ HD Rust-Resistant Rod End M4 Nylon 20.0MM (Upwards)

PARTS LIST

Part #	Description
BRW750302	BADASS™ HD Rust-Resistant Rod End M4 Nylon 19.5mm (Sideways)
BRW750303	BADASS™ HD Rust-Resistant Rod End M4 Nylon 18.5mm (Straight)
BRW780909/COVERF	Center Hubs Cab (Front) for 1.55"/1.9" Beadlock Wheels (2)
BRW780909/COVERR	Center Hubs Cab (Rear) for 1.55"/1.9" Beadlock Wheels (2)
BRW780955A	1.55" 16-Hole Classic Steelie Beadlock Front Faceplate (2) Gun Metal
BRW780955FGM	1.55" 16-Hole Classic Steelie Reversible Beadlock Wheels (Front) w/ XT500 Hubs (2) Gun Metal
BRW780955RGM	1.55" 16-Hole Classic Steelie Reversible Beadlock Wheels (Rear) w/ XT500 Hubs (2) Gun Metal
BRX01BBZ	High Performance Full Ball Bearings Set Rubber Sealed (32 Total)
BRX01FABBZ	High Performance Ball Bearings Set Rubber Sealed For Front Axle (10 Total)
BRX01GBBBZ	High Performance Ball Bearings Set Rubber Sealed For Gearbox (8 Total)
BRX01RABBZ	High Performance Ball Bearings Set Rubber Sealed For Rear Axle (8 Total)
BRX01TCBBZ	High Performance Ball Bearings Set Rubber Sealed For Transfer Case (6 Total)
BRXT504	XT504 Aluminum 12mm Wheel Hub Adapters 4mm Offset (2)
JX/PDI-HV115MG	JX Waterproof High Voltage Metal Gear Digital Mini Servo
KB/48601	Killerbody RC 1/10 LC70 Hard Body Set 313mm Version 2

If you have questions, call Boom Racing at:

1-209-676-8880 (USA) or email Boom Racing at sales@boomracingrc.com

WWW.BOOMRACINGRC.COM

BRX01

**"A FUTURE PROOF R/C KIT WITH UNLIMITED CONFIGURATIONS.
BEAUTIFUL AS A "SHELF QUEEN" AND A TOTAL BEAST ON THE TRAILS!"**
KRONIK BERT, KRONIX HOBBIES, GUAM U.S.A.

"TORQUE TWIST IS NOW A THING OF THE PAST." PADIM ISREAL, MANILA 4X4 SCALE RC, PHILIPPINES

BRX01

1/10TH 4WD RADIO CONTROL CHASSIS KIT FOR LC70

**"THE AUDACIOUS & OUTWARD THINKING OF THE BRX01'S DESIGN COMBINED WITH THE MATERIAL QUALITY IS SECOND TO NONE.
THIS ISN'T JUST ANOTHER NEW RC CRAWLER,
THIS IS A MOMENT IN RC HISTORY AND THE BRX01 SETS A NEW STANDARD THAT ALL FUTURE RC CRAWLERS WILL FIND DIFFICULT TO LIVE UP TO."**
MARK ROWE, WEST MICHIGAN RC CRAWLERS, U.S.A.

"THE BRX01 IS LIKE A SWISS ARMY KNIFE. IT CAN DO EVERYTHING."
PG MAROL, RC4X4 BRUNEI, BRUNEI DARUSSALAM

**"THE CHASSIS AND ALL THE PARTS WERE VERY WELL THOUGHT OUT AND THE FIT AND FINISH IS TOP NOTCH. THE DRIVETRAIN IS NO JOKE,
I'M VERY USED TO DEALING WITH THE RIGHT FRONT LIFT BUT THIS STAYED FLAT AND WAS VERY PREDICTABLE IN OFF-CAMBER AND TRANSITIONAL LINES.
IT WAS ALSO QUIET AND EFFICIENT."**
KEVIN MCPEEK, GILBERT AZ, U.S.A.

"THE BRX01 IS THE CHASSIS TO GET IF YOU ARE INTO SCALE. COMPLETE, MODULAR AND TOUGH."
MOHAMMAD SHAHRIN MANDALAM, SIPUT PARK TROPHY, KUALA LUMPUR, MALAYSIA

"THE FLEX IS REAL!" PETER G, MANILA 4X4 SCALE RC, PHILIPPINES

**"THE BRX01 ISN'T JUST ONE STEP AHEAD; IT'S A GIANT LEAP FORWARD IN SCALE TRUCK DESIGN AND FUNCTIONALITY.
YOU'VE NEVER SEEN A SCALE TRUCK DO WHAT THIS TRUCK CAN DO.
BOOM RACING HAS CREATED A TRUCK THAT CAN EXCEL IN ALL AREAS FROM SHELF QUEEN TO TRAIL TRUCK TO COMPETITION CRAWLER."**
JAY LENO, RC CULTURE, SWEDEN

**"IN ONE PRODUCT BOOM RACING HAS SET THE NEW STANDARD FOR EXCELLENCE IN THE R/C WORLD.
THE BRX01 IS JUST SIMPLY UNBELIEVABLE, I HAVE NEVER IN MY WILDEST DREAMS BELIEVED A BOX STOCK TRUCK
COULD EVER BE ABLE TO DO WHAT IT DOES AND LOOK SO DAMN GOOD DOING IT."**
SHAWN ROCHE, GILBERT AZ, U.S.A.



BOOMRACING®
Your Radio Control Car Specialist

BRX01

1/10TH 4WD RADIO CONTROL CHASSIS KIT FOR LC70

WWW.BOOMRACINGRC.COM